
10/30

HERITAGE TRACTOR CODE130S

INSTRUCTION BOOK

30503x11A MUF-991625.


REPAIR PARTS BODY CHASSIS

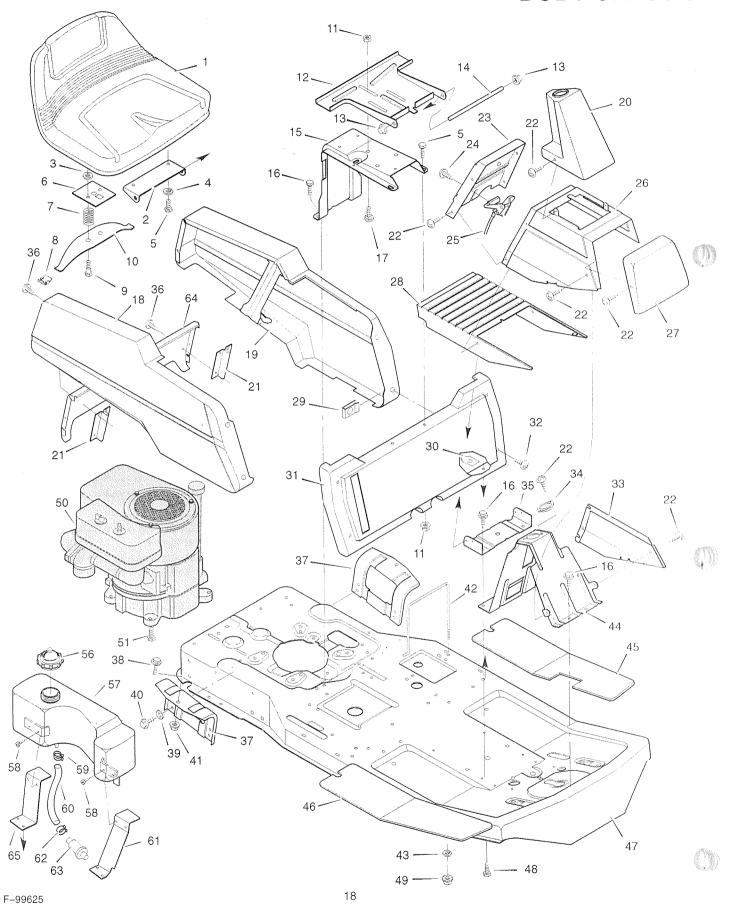

REPAIR PARTS BODY CHASSIS

	€ey √o.	Description	Part No.	Key No.	Description	Part No.
-		Seat	MU92387	34	Bearing, Steering Post	MU56022
	2	Hinge, Seat	MU56516E700	35	Bracket, Cover Mounting	MU56233E700
	3	Retainer	MU28x64	36	Screw	MU26x250
	4	Lockwasher	MU18x16	37	Support, Body	MU56122E700
	5	Bolt, Hex	MU1x45	38	Bolt, Shoulder	MU9x29
	6	Plate, Seat Switch	MU91963Z	39	Lockwasher	MU19x6
	7	Spring, Compression	MU164x26	40	Screw	MU26x49
	8	Glide, Seat Spring	MU91822	41	Locknut, Flange	MU15x84
	9	Bolt, Shoulder	MU9x38	42	Clamp Assembly, Battery	MU54800Z
•	10	Spring, Seat	MU91964	43	Washer	MU17x38Z
	11	Locknut, Flange	MU15x88	44	Support, Steering Column	MU56240E700
	12	Bracket, Seat Pivot	MU56518E700	45	Mat, Left	MU92637
	13	Cap, Push On	MU28x23	46	Mat, Right	MU92636
•	14	Rod, Seat Hinge	MU56537Z	47	Frame	MU56612E549
*	15	Support, Seat	MU56519E700	48	Screw	MU6x74
	16	Screw	MU26x249	49	Locknut	MU15x66
	17	Bolt, Carriage	MU2x53	50	Engine	
	18	Panel, Right Side	MU54764E549	51	Bolt, Engine Mount	MU25x7
	19	Panel, Left Side	MU54763E549	56	Cap, Fuel	MU92317
	20	Cover, Steering Column	MU94353	57	Tank, Fuel	MU55805
	21	Bracket, Panel	MU54747E549	58	Screw, Hex	MU26x213
	22	Screw, Tapping	MU26x270	59	Clamp, Hose	MU95197
1	23	Panel, Control	MU690556	60	Line, Fuel	MU91022
9	24	Screw	MU26x201	61	Bracket, Remote Tank (Front)	MU55806E700
	25	Throttle Control	MU56247	62	Clamp, Gas Line	MU91174
	26	Console	MU56405E549	63	Filter, Fuel	MU56002
	27	Cap, Front Console	MU56407E549	64	Panel, Rear	MU54782E549
	28	Cover, Lower Console	MU94352	65	Bracket, Remote Tank (Rear)	MU94941
	29	Retainer	MU28x52	_	Instruction Book & Parts List	MUF-000607J
	30	J-Nut	MU28x18	-	Decal, Left Panel	MH 130006
	31	Panel, Front	MU56235E549		Decal, Right Panel	130007
	32	Screw, Southco	MU91330		Decal, Shift	MU44x4741
	33	Panel, Left Access	MU56406E549	-	Decal, Front Console Warning	MU44x7325

REPAIR PARTS MOTION DRIVE

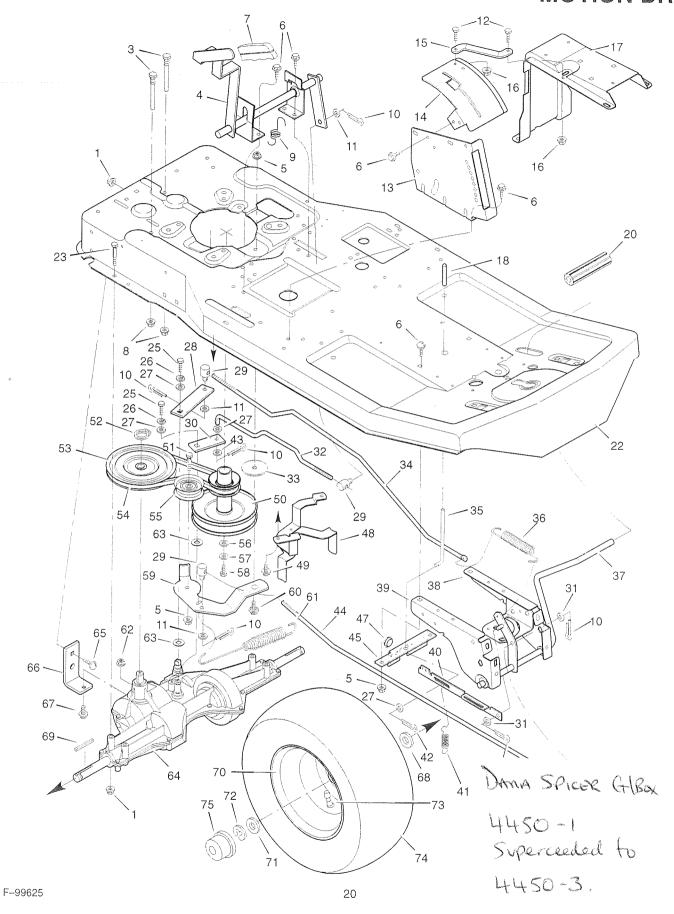


REPAIR PARTS MOTION DRIVE

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Locknut, Flange	MU15x88	40	Link, Parking Brake	MU56565Z
3	Guide, Belt	MU93349	41	Spring, Extension	MU165x107
4	Shifter Assembly	MU56610E700	42	Pin, Cotter	MU30x50
5	Locknut, Flange	MU15x84	43	Washer	MU17x46Z
6	Screw	MU26x267	44	Rod, Clutch	MU56531Z
7	Grip, Shift Lever	MU91573	45	Stop, Parking Brake	MU56227E700
8	Hex Nut	MU15x79	47	Grommet	MU56623
9	Spring, Extension	MU165x100	48	Guide, Belt	MU56641E700
10	Pin, Cotter	MU30x20	49	Screw	MU26x49
11	Washer	MU17x53Z	50	Pulley Assembly, Stack	MU92504Z
12	Bolt, Hex	MU1x38	51	Bolt, Hex	MU1x111
13	Plate, Index	MU56595E700	52	Ring, Retainer	MU11x7
14	Gate, Shift	MU56606E700	53	Pulley, Drive	MU56562
15	Brace, Shift Gate	MU56529E700	54	Belt, Motion Drive	MU37x65
16	Locknut, Flange	MU15x89	55	Pulley, Idler	MU56526
17	Support, Seat	MU56519E549	56	Washer	MU17x170
18	Grip, Parking Brake	MU55873	57	Lockwasher	MU19x35
20	Pedal	MU55825	58	Bolt, Hex	MU1x140
22	Frame Assembly	MU56612E549	59	Bracket, Idler	MU1001034E700
23	Bolt, Hex	MU1x124	60	Bolt, Shoulder	MU9x42
25	Bolt, Hex	MU1x145	61	Spring, Extension	MU165x81
26	Lockwasher	MU18x32	62	Locknut, Hex	MU15x43
27	Washer	MU17x36Z	63	Washer	MU17x148
28	Yoke, Brake	MU56500Z	64	Transaxle, Dana Model 4450-1	
29	Nut, Adjusting	MU21920	65	Bolt, Carriage	MU2x53
30	Yoke, Shift	MU56505Z	66	Bracket, Transaxle	MU56503E700
31	Washer	MU17x47Z	67	Bolt, Hex	MU1x139
32	Rod, Shift	MU56591Z	68	Washer	MU17x160
33	Washer, Hardened	MU17x174HT	69	Key, Square	MU56534
34	Rod, Brake	MU56530Z	70	Wheel & Tire Assembly	MU92308-601
35	Rod, Parking Brake	MU56410Z	71	Washer	MU17x195
36	Spring, Extension	MU165x85	72	E-Ring	MU11x3
37	Lever, Pedal	MU56511E700	73	Valve Stem **	MU24373
38	Plate, Left Suspension	MU56224E700	74	Tire Only **	MU24393
39	Plate, Right Suspension	MU56023E700	75	Hub Cap, Optional	MU94618

^{**}Included with Key No. 70.

REPAIR PARTS STEERING

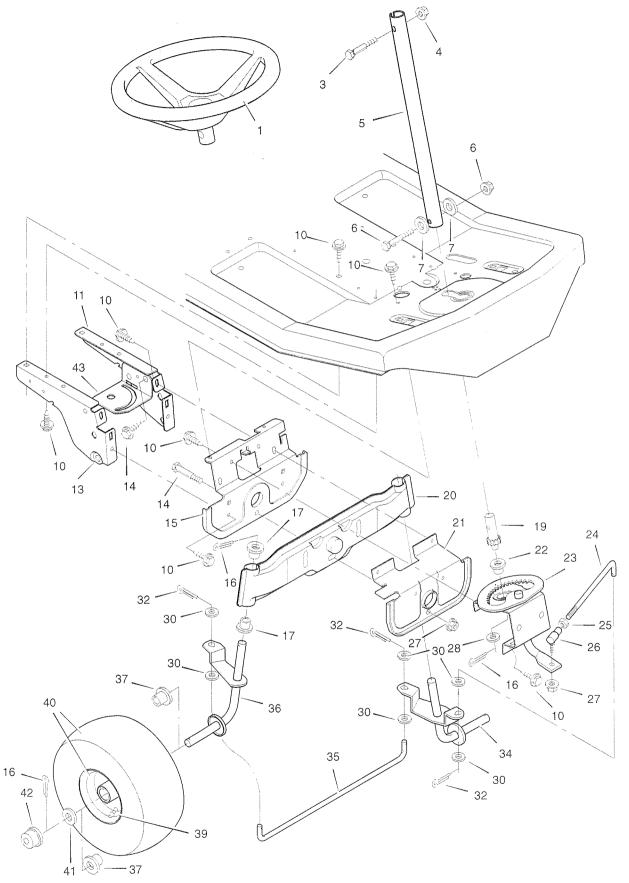


22

REPAIR PARTS STEERING

Key No.	Description	Part No.
. 1	Steering Wheel	MU92078
3	Bolt, Hex	MU1x102
4	Locknut, Flange	MU15x88
5	Post, Steering	MU56417 C
6	Nut, Hex	MU15x88
7	Washer	MU17x47 Z
10	Screw	MU26x267
11	Plate, Left Suspension	MU56224E700
13	Plate, Right Suspension	MU56023E700
14	Bolt, Hex	MU1x69
15	Support, Front Axle	MU56231E700
16	Pin, Cotter	MU30x49
17	Bearing, Spindle	MU55003
19	Gear, Pinion	MU56418
20	Axle Assembly, Front	MU56223E700
21	Hanger Assembly, Front Axle	MU56230E700
22	Bearing	MU55168
23	Sector Assembly	MU56236E700
24	Rod, Drag Link	MU56625 Z
25	Nut, Hex	MU15x61
26	Ball Joint, Steering	MU21031
27	Locknut, Flange	MU15x87 Z
28	Washer	MU17x87 Z
30	Washer	MU17x53 Z
32	Pin, Cotter	MU30x20
34	Spindle Assembly, Left	MU55039E700
35	Rod, Tie	MU55026 Z
36	Spindle Assembly, Right	MU55038E700
37	Bearing, Wheel *	MU56105
38	Tire	MU55700
39	Valve Stem *	MU24373
40	Wheel & Tire Assembly	MU92303-601
41	Washer	MU17x197
42	Cap, Hub (Optional)	MU94618
43	Bracket, Blade Drive	MU56225E700
44	Screw	MU26x263

Also included with Key No. 40.

REPAIR PARTS MOWER HOUSING SUSPENSION

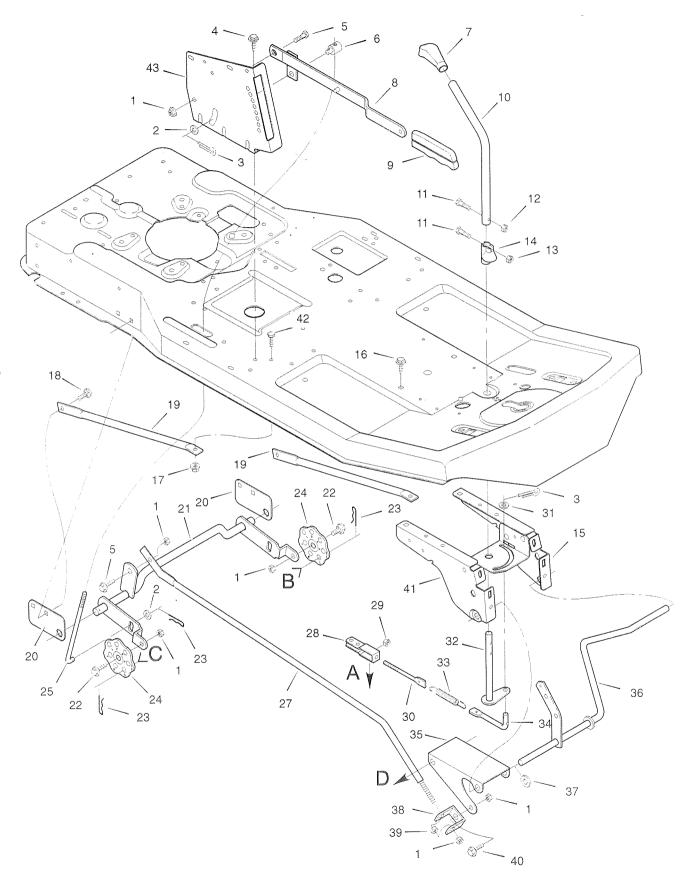


REPAIR PARTS MOWER HOUSING SUSPENSION

Key No.	Description	Part No.
1	Locknut, Flange	MU15x84
2	Washer	MU17x53 Z
3	Pin, Cotter	MU30x20
4	Screw	MU26x249
5	Bolt, Shoulder	MU9x9 Z
6	Nut, Adjusting	MU21920
7	Grip, Blade Control	MU92698
8	Lever Assembly, Lift	MU56031E700
9	Grip, Lift Lever	MU91573
10	Lever, PTO	MU55928 Z
11	Bolt, Hex	MU1x76
12	Locknut	MU15x66
13	Locknut, Flange	MU15x89
14	Cam, Blade Control	MU55853
15	Plate, Left Suspension	MU56224E700
16	Screw	MU26x249
17	Locknut, Flange	MU15x88
18	Bolt, Carriage	MU2x64
19	Strut, Frame	MU55326
20	Plate, Mounting	MU55270E700
21	Rod Assembly, Rear Suspension	MU55346E700
22	Bolt, Shoulder	MU9x4
23	Pin, Hair	MU31x4
24	Plate, Adjusting	MU55344 Z
25	Rod, Lifter	MU24839 Z
27	Rod, Suspension	MU55957E700
28	Clevis	MU24471 Z
29	Nut, Hex	MU15x2
30	Link, Blade Drive	MU55271 Z
31	Washer	MU17x48
32	Rod and Arm Assembly	MU55930E700
33	Spring, Extension	MU165x67
34	Link, Front Deck	MU55179 Z
35	Bracket, Front Suspension	MU55139E700
36	Lever, Pedal	MU56511E700
37	Washer	MU17x122 Z
38	Clevis	MU55298
39	Locknut, Hex	MU15x73
40	Bolt, Shoulder	MU9x17
41	Plate, Right Suspension	MU56023E700
42	Bolt, Hex	MU1x45
43	Plate, Index	MU56595E700
	25	

25

REPAIR PARTS MOWER HOUSING

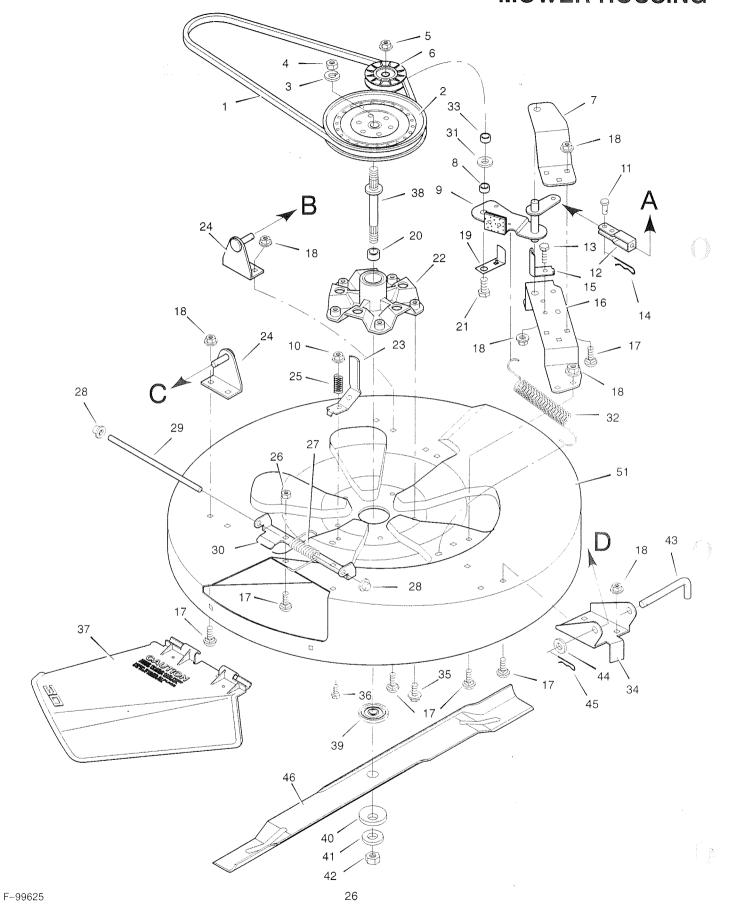


REPAIR PARTS MOWER HOUSING

	€ey No.	Description	Part No.	Key No.	Description	Part No.
	1	Belt, Mower Drive	MU37x57	25	Spring, Compression	MU164x1
	2	Pulley, Splined	MU91951	26	Nut, Hex	MU15x43
	3	Lockwasher	MU18x33	27	Spring, Torsional	MU166x4
	4	Locknut, Hex	MU15x100	28	Push On Cap	MU28x23
	5	Nut, Hex	MU15x41	29	Rod	MU21197 Z
6	6	Pulley, Idler	MU690410	30	Hinge, Chute Deflector	MU56213E700
	7	Bracket, Upper Idler	MU55921E700	31	Washer	MU17x91 Z
	8	Spacer	MU55895	32	Spring, Extension	MU165x68
	9	Assembly, Blade Idler	MU55979	33	Spacer	MU690369
*	10	Locknut, Flange	MU15x88	34	Bracket, Front	MU55916E700
	11	Pin, Clevis	MU29x99	35	Screw	MU26x216
	12	Clevis	MU24471 Z	36	Bolt, Hex	MU1x75
	13	Bolt, Hex	MU1x45	37	Deflector, Chute	MU55971
	14	Pin, Hair	MU31x6	38	Mandrel	MU91921
	15	Guide, Belt	MU55977	39	Adapter, Blade	MU92466
(m)	16	Bracket, Lower Idler	MU55920E700	40	Washer, Belleville	MU17x166
C.	17	Bolt, Carriage	MU2x53	41	Washer, Hardened	MU17x165
	18	Nut, Flange	MU15x79	42	Nut, Hex	MU15x100
	19	Guide, Belt	MU55894	43	Pin, Pull	MU90828 Z
	20	Spacer	MU91925	44	Washer	MU17x67 Z
	21	Bolt, Hex	MU1x127	45	Pin, Hair	MU31x4
	22	Housing, Mandrel	MU55962	46	Blade, Standard	MU55793E701
	23	Guide, Belt	MU55956 Z	1-51	Mower Housing, Complete	MU403330
	24	Bracket, Hanger	MU55974E700		High lift Blo	ide

MUS6246E70)

REPAIR PARTS ELECTRICAL SYSTEM

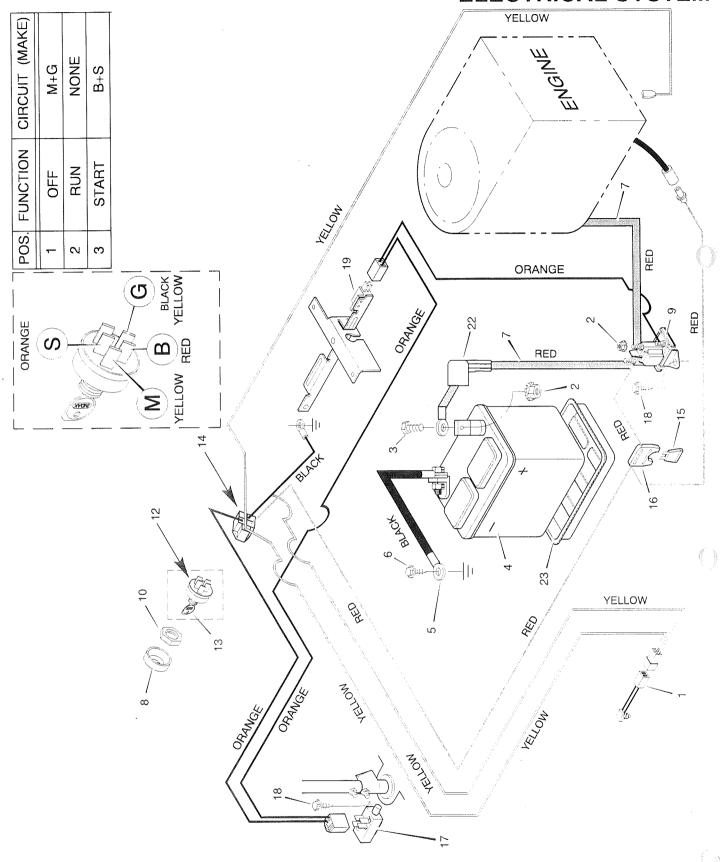

REPAIR PARTS ELECTRICAL SYSTEM

Key No.	Description	Part No.
1	Switch, Seat Sensor	MU91031
2	Locknut	MU15x66
3	Bolt, Hex	MU1x38
4	Battery	MU21075
5	Cable, Battery Ground (Black)	MU24x3
6	Screw	MU26x249
7	Cable, Positive Battery (Red)	MU24x24
8	Cap, Ignition Switch	MU91488
9	Solenoid	MU94613
10	Nut, Ignition Switch	MU91489
12	Switch, Ignition	MU21064
13	Key, Ignition	MU21079
14	Harness, Wire	MU250x84
15	Fuse	MU54212
16	Holder, Fuse	MU407078
17	Switch, Attachment Clutch	MU91032
18	Screw	MU26x233
19	Switch, Limit	MU24273
22	Cover, Terminal	MU54148
23	Tray, Battery	MU91896