




MODEL NO. 70142-690001-
790001 & UP

PARTS
CATALOG

WHEEL HORSE®
11-32 RIDING MOWER

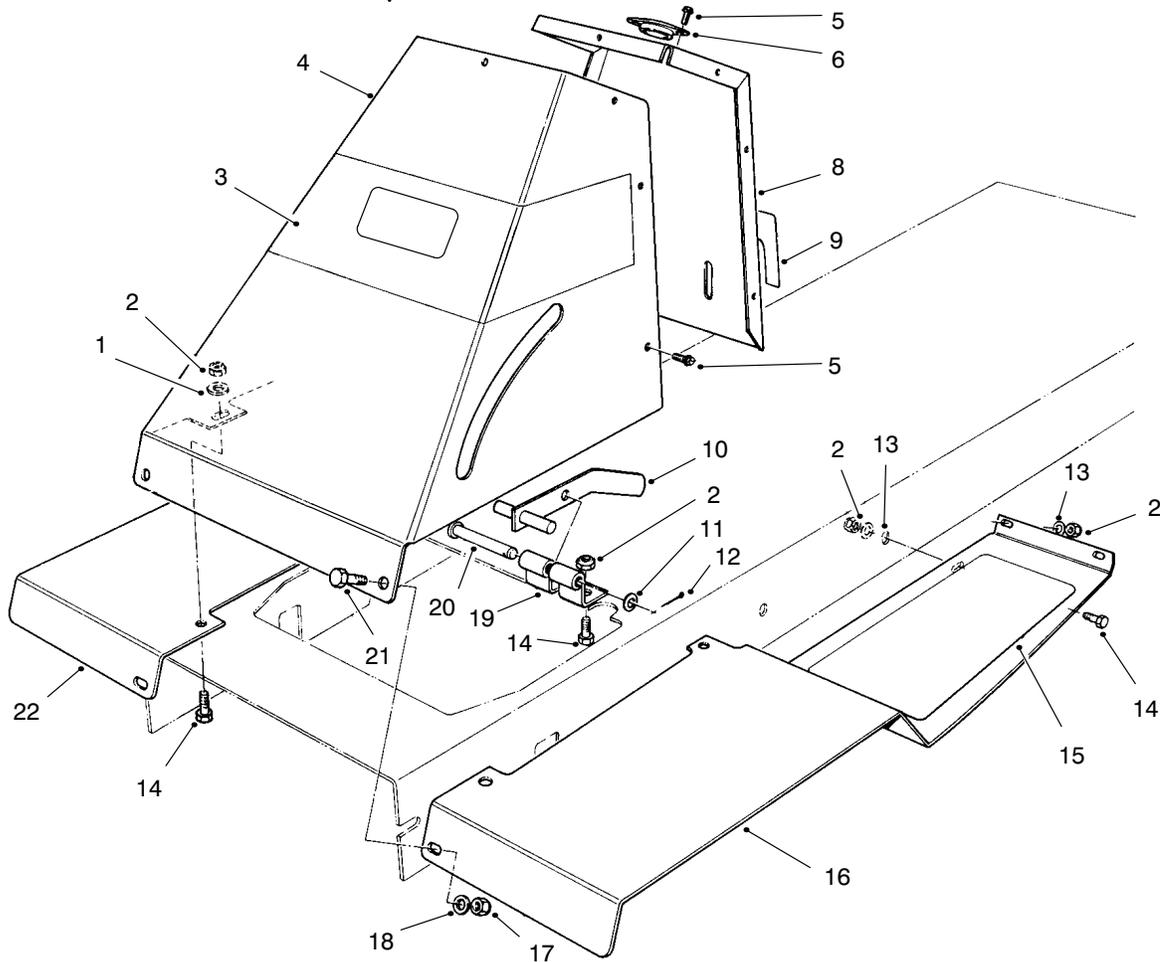


C-1933A

FRONT TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3256-35	Washer - Flat	4
2	3296-29	Nut - Lock	14
3	92-7987	Decal - Recycler	1
4	56-7130	Tower - Front	1
5	32104-76	Screw - Self Tap Acorn Hd.	9
6	56-7170	Guide - Shaft, Steering	1
8	56-7140	Tower - Rear	1
9	93-7008	Decal - Brake, Parking	1
10	47-1290	Brake - Parking	1
11	3256-24	Washer - Flat	1
12	3272-6	Pin - Cotter	1
13	3256-23	Washer - Flat	8
14	322-5	Screw - Cap Hex. Hd.	10

Ref. No.	Part No.	Description	No. Used
15	92-7975	Tread - Foot L.H.	1
*	92-7974	Tread - Foot R.H.	1
16	47-0940	Footrest - L.H.	1
17	3296-42	Nut - Lock	2
18	3256-22	Washer - Flat	2
19	47-2060	Bracket - Brake, Parking	1
20	283-52	Pin - Clevis	1
21	321-4	Screw - Cap Hex. Hd.	2
22	47-0930	Footrest - R.H.	1
*	12-8829	Loose Parts	1
*	12-8819	Loose Parts (Includes Steering Wheel)	1

*Not Illustrated

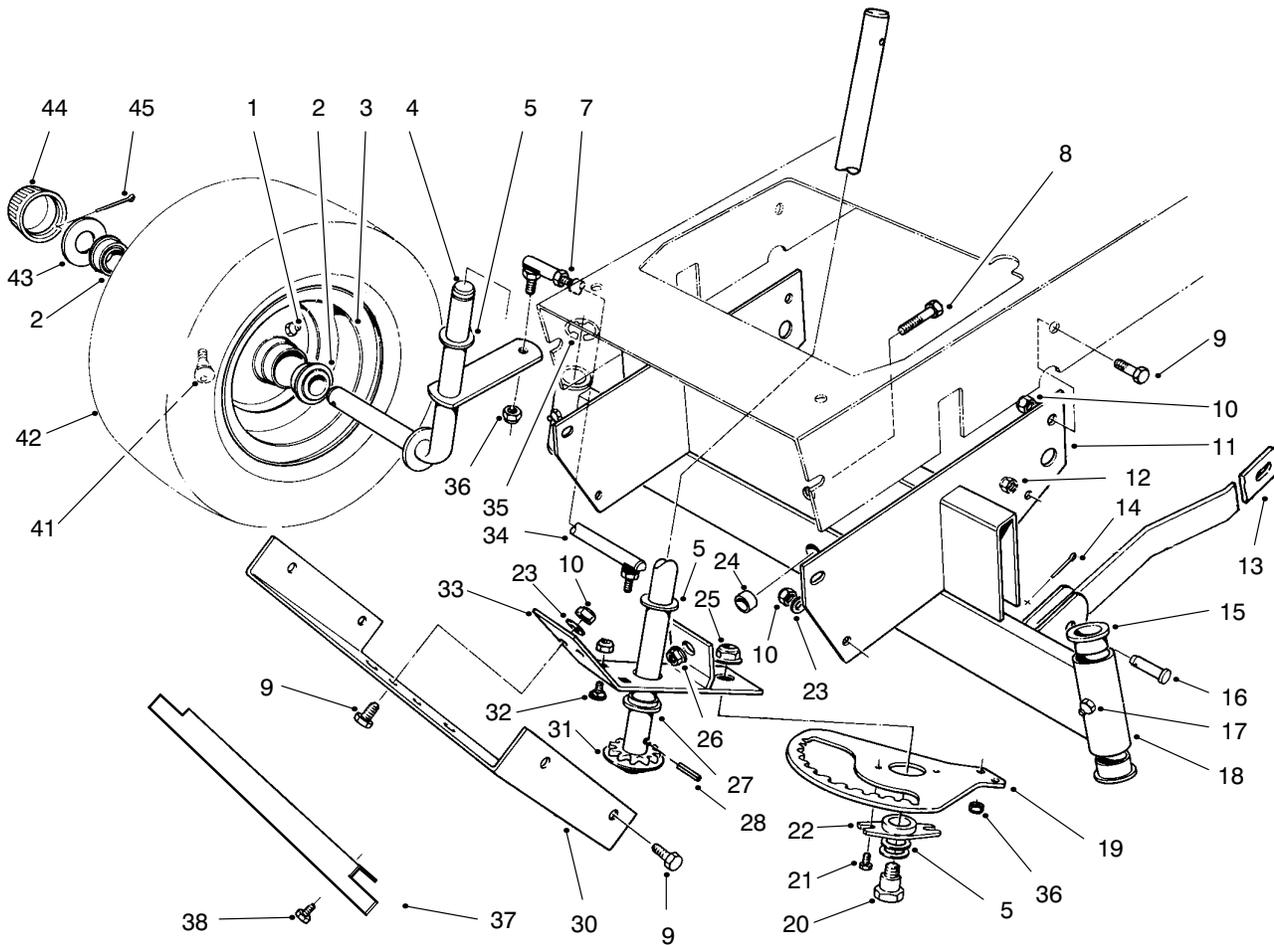

C-0438C


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	2
2	110513	Bearing	4
3	217-80	Rim	2
4	47-0600	Spindle - R.H.	1
*	47-0590	Spindle - L.H.	1
5	3-6498	Washer - Thrust	5
7	3220-2	Nut - Hex. Jam	1
8	325-6	Screw - Cap Hex. Hd.	1
9	322-5	Screw - Cap Hex. Hd.	8
10	3296-29	Nut - Lock	8
11	47-0760	Support - Axle, Front	1
12	3296-8	Nut - Lock	1
13	47-0010	Arm - Suspension, Front	2
14	3272-6	Pin - Cotter	2
15	27-9080	Bearing - Flange	4
16	283-2	Pin - Clevis	2
17	302-5	Fitting - Grease	2
18	80-2430	Axle - Front (Incl. Ref. #15 & 17)	1
19	80-2450	Rack - Steering	1
20	56-7530	Bolt - Shoulder	1
21	32144-4	Screw - Special	2
22	56-7520	Bushing - Sector	1
23	3256-23	Washer - Flat	6

Ref. No.	Part No.	Description	No. Used
24	28-0380	Spacer - Axle, Front	1
25	32128-21	Nut - Lock, Flange Hd.	1
26	32128-23	Nut - Lock, Flange Hd.	1
27	47-0700	Bearing - Flange	1
28	32121-9	Pin - Roll	1
30	56-7180	Cover - Front	1
31	56-7500	Shaft - Steering	1
32	3230-18	Bolt - Carriage	2
33	56-7470	Bracket - Rack, Steering (Incl. Ref. #27)	1
34	47-0610	Tie Rod - Adjustable (Incl. Ref. #7)	1
*	80-2460	Tie Rod - Fixed	1
35	32151-48	Ring - Retaining, External	2
36	3296-4	Nut - Lock	4
37	92-0876	Guard - Front	1
38	32144-14	Screw - Thread Forming	2
41	232-27	Valve Stem w/Cap	2
42	231-116	Tire	2
43	28-2480	Washer	2
44	61-9780	Cap - Hub	2
45	3272-12	Pin - Cotter	2
†	232-44	Tube - Inner	2

*Not Illustrated


†Service Replacement Part

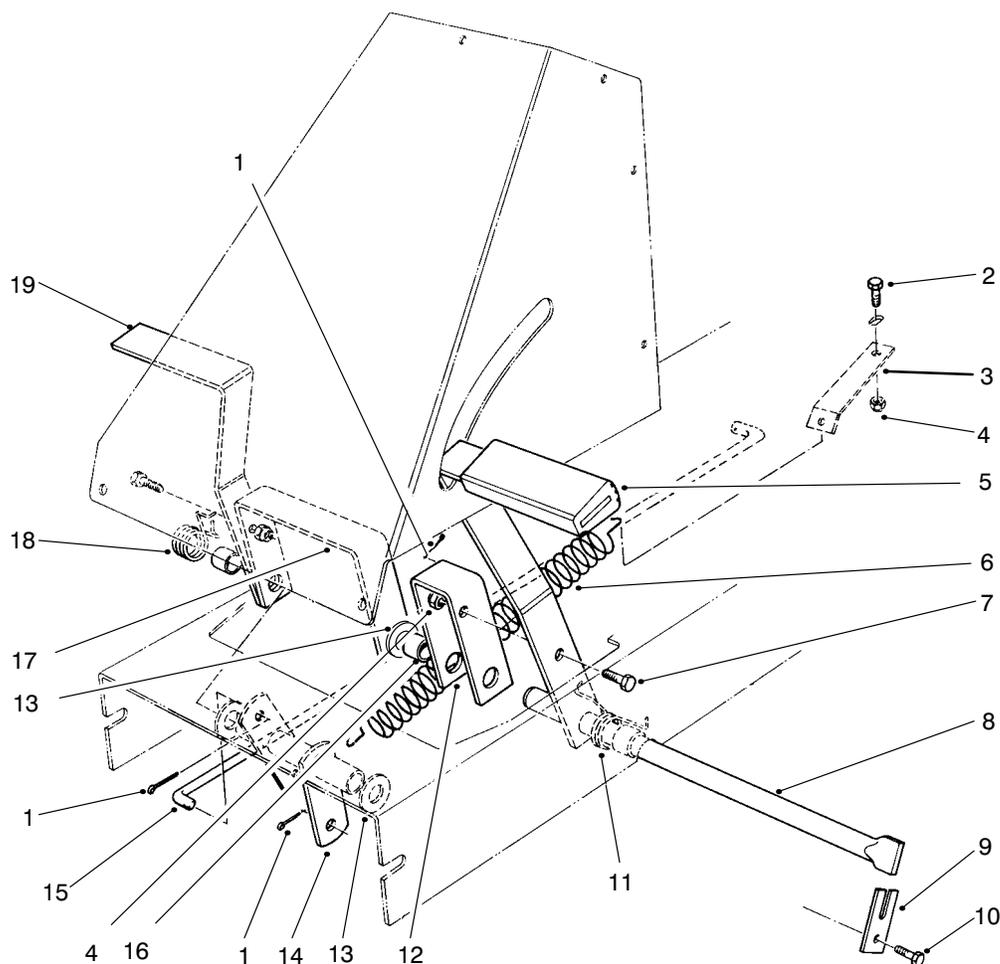

C-0439A

BRAKE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	3	11	56-7070	Spring - Torsion, Clutch	1
2	322-5	Screw - Cap Hex. Hd.	1	12	47-0560	Bracket - Clutch, Pedal	1
3	56-7240	Bracket - Retaining, Spring	1	13	3256-27	Washer - Flat	3
4	3296-29	Nut - Lock	3	14	56-7650	Tube - Pivot	1
5	65-2920	Pad - Pedal, Foot	2	15	56-7570	Rod - Engagement	1
6	62-3930	Spring - Extension	1	16	47-0570	Spacer - Pedal	3
7	322-5	Screw - Cap Hex. Hd.	2	17	47-0550	Bracket - Brake, Pedal	1
8	47-0770	Shaft - Pivot, Pedal	1	18	56-7080	Spring - Torsion, Brake	1
9	47-0780	Retainer - Shaft	1	19	47-0540	Pedal	2
10	321-4	Screw - Cap Hex. Hd.	1				

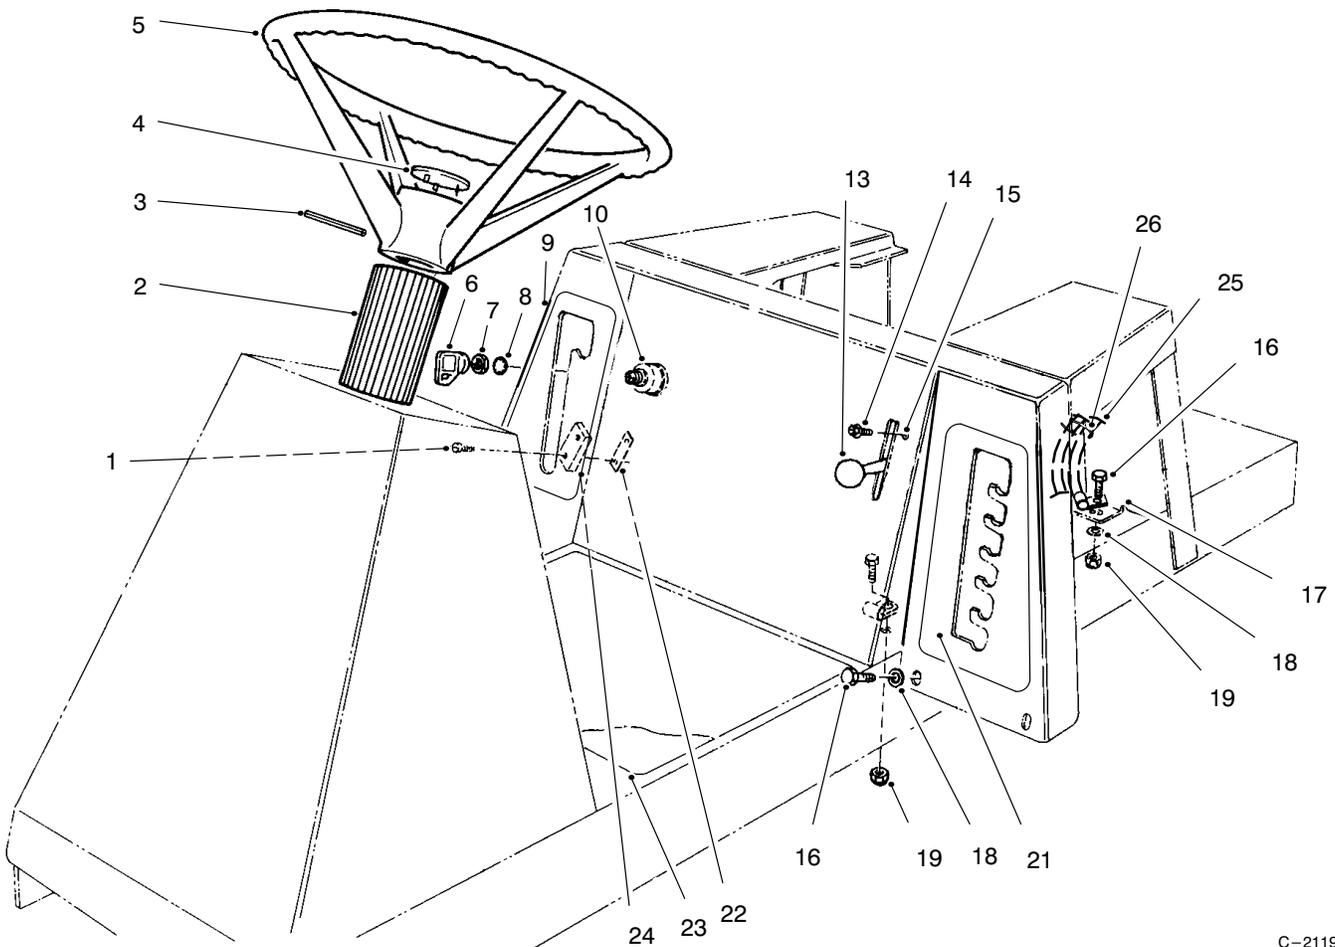


C-2119

STEERING WHEEL, SWITCHES & DECALS

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Head	2
2	66-6740	Cover – Shaft, Steering	1
3	32121-78	Pin – Roll	1
4	92-7990	Insert – Wheel, Steering	1
5	49-3242	Assy. – Wheel, Steering (Incl. Ref. #4)	1
6	63-8360	Key	1
7	218-461	Nut – Lock	1
8	3254-5	Washer – Lock, Int. Tooth	1
9	92-7983	Decal – Deck Engage	1
10	88-9830	Switch – Ignition (Incl. Ref. #6-8)	1
13	233-25	Knob	1

Ref. No.	Part No.	Description	No. Used
14	32104-76	Screw – Self-Tapping	2
15	92-0890	Control – Throttle (Incl. Ref. #13)	1
16	322-5	Screw – Cap Hex. Hd.	8
17	8830	Clamp	2
18	3256-23	Washer – Flat	7
19	3296-29	Nut – Lock	4
21	92-7984	Decal – H.O.C.	1
22	3290-354	Nut – Double	1
23	93-7006	Decal – Instructions	1
24	88-9932	Switch – Micro	1
25	54-3090	Wire Assembly	1
26	3290-378	Tie – Cable	1

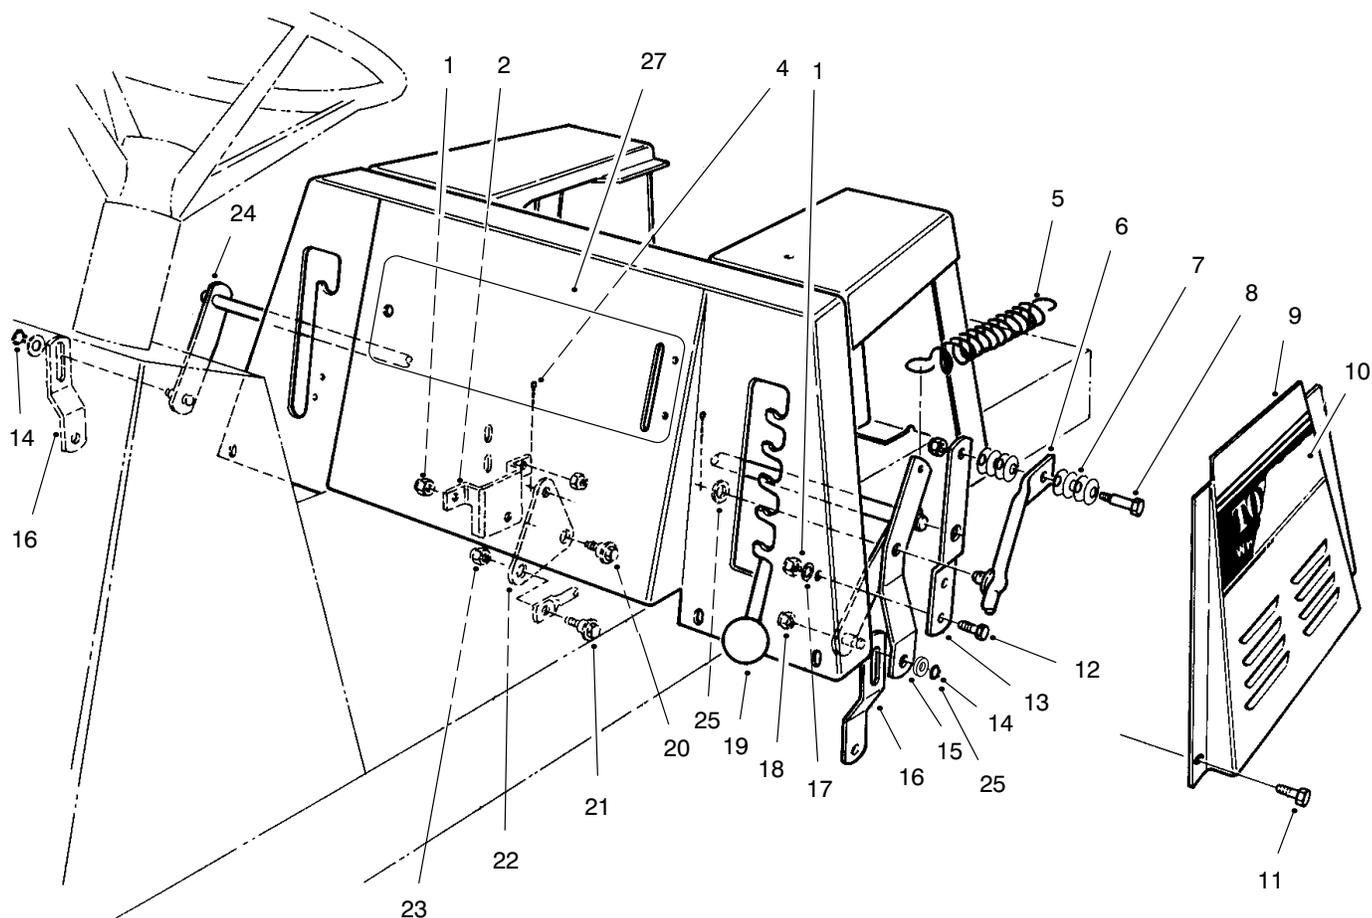


C-1935B

LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	7
2	80-2310	Bracket - Bell Crank Mount	1
4	3272-6	Pin - Cotter	2
5	62-3930	Spring - Extension	1
6	47-1850	Lever - Height-of-Cut	1
7	3290-413	Washer - Belleville	8
8	28-0540	Bolt - Shoulder	1
9	92-0878	Panel L.H. - Base, Seat	1
10	93-1194	Decal - L.H.	1
11	321-4	Screw - Cap Hex. Hd.	4
12	322-5	Screw - Cap Hex. Hd.	2
13	47-1840	Bracket - Height-of-Cut	1
14	32151-61	Ring - Retaining	2

Ref. No.	Part No.	Description	No. Used
15	80-2321	Bracket - H.O.C., Engage	1
16	63-5830	Link - Suspension, Deck	2
17	3256-23	Washer - Flat	4
18	3296-42	Nut - Lock	4
19	233-48	Knob	1
20	19-1470	Bolt - Shoulder	1
21	65-5670	Bolt - Shoulder	1
22	80-2360	Crank - Bell, Deck Engage	1
23	3296-8	Nut - Lock	1
24	56-7400	Arm - Lever, H.O.C.	1
25	3256-26	Washer - Flat	2
27	92-7982	Decal - Control Panel	1

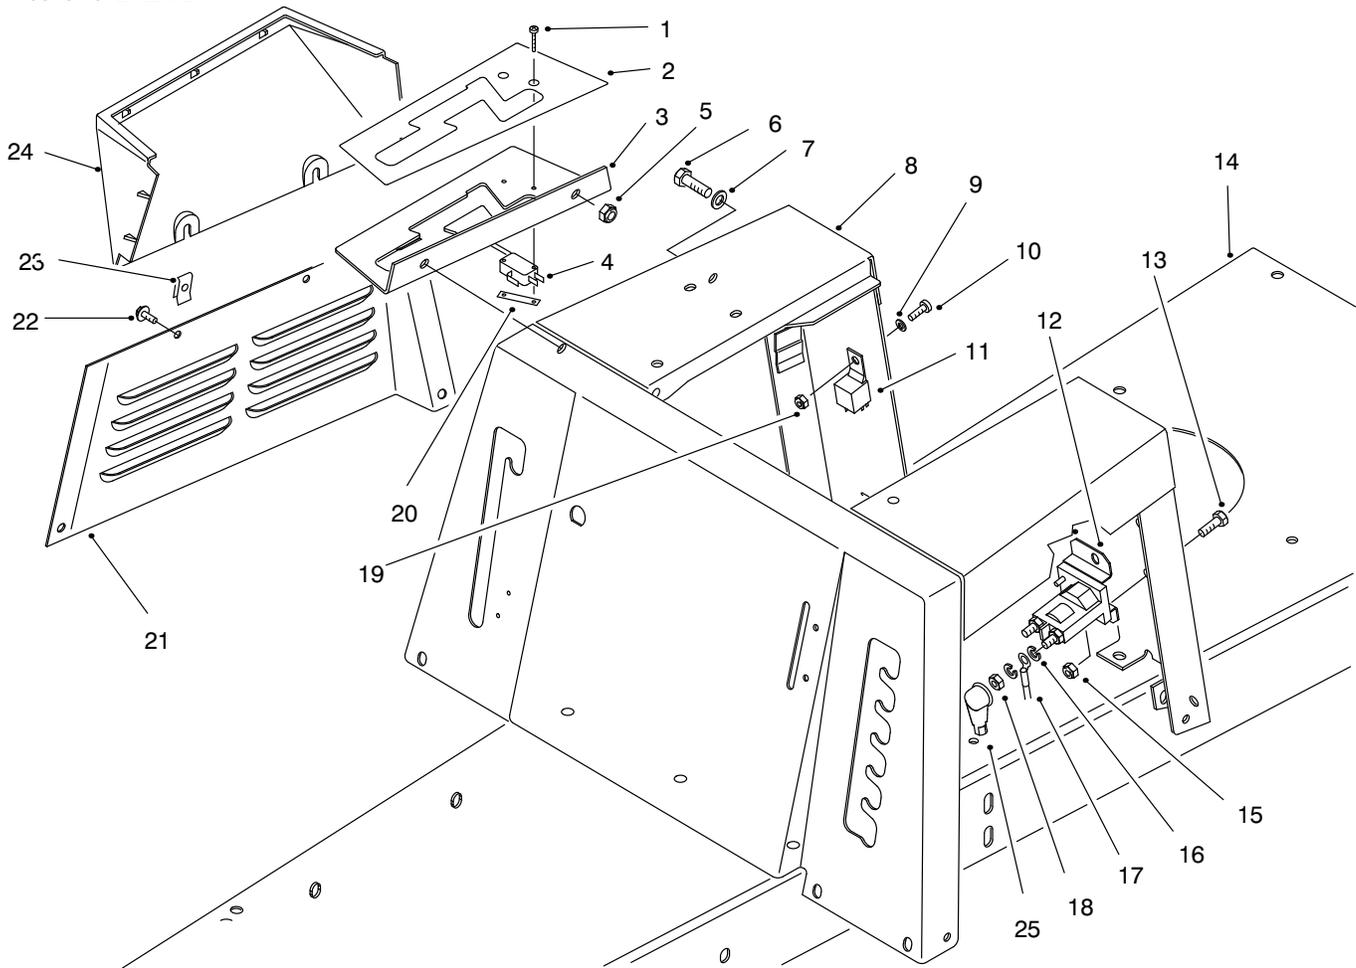


C-1587A

SEAT BODY & SIDE PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Hd.	2
2	93-7007	Decal – Shift Pattern	1
3	92-0895	Gate – Shift	1
4	88-9930	Switch – Micro, Short	1
5	3296-29	Nut – Lock	2
6	322-5	Screw – Cap Hex. Hd.	2
7	3256-23	Washer – Flat	2
8	92-0866	Body W.A. – Seat Support	1
9	3256-14	Washer – Flat	1
10	3290-134	Screw – Machine	1
11	116397	Relay – Safety	1
12	47-1910	Solenoid	1
13	321-4	Screw – Cap Hex. Hd.	2


Ref. No.	Part No.	Description	No. Used
14	92-0860	Frame	1
15	3296-42	Nut – Lock	2
16	3253-3	Washer – Lock	2
17	56-7670	Cable – Positive	1
18	3218-1	Nut – Jam	3
19	3296-2	Nut – Lock	1
20	3290-354	Nut – Double	1
21	92-0877	Panel – Seat Base, R.H.	1
22	32144-112	Screw – Sems	2
23	3290-191	Nut – Speed	2
24	88-9800	Cover – Gate, Shift	1
25	93-3190	Boot – Terminal	1

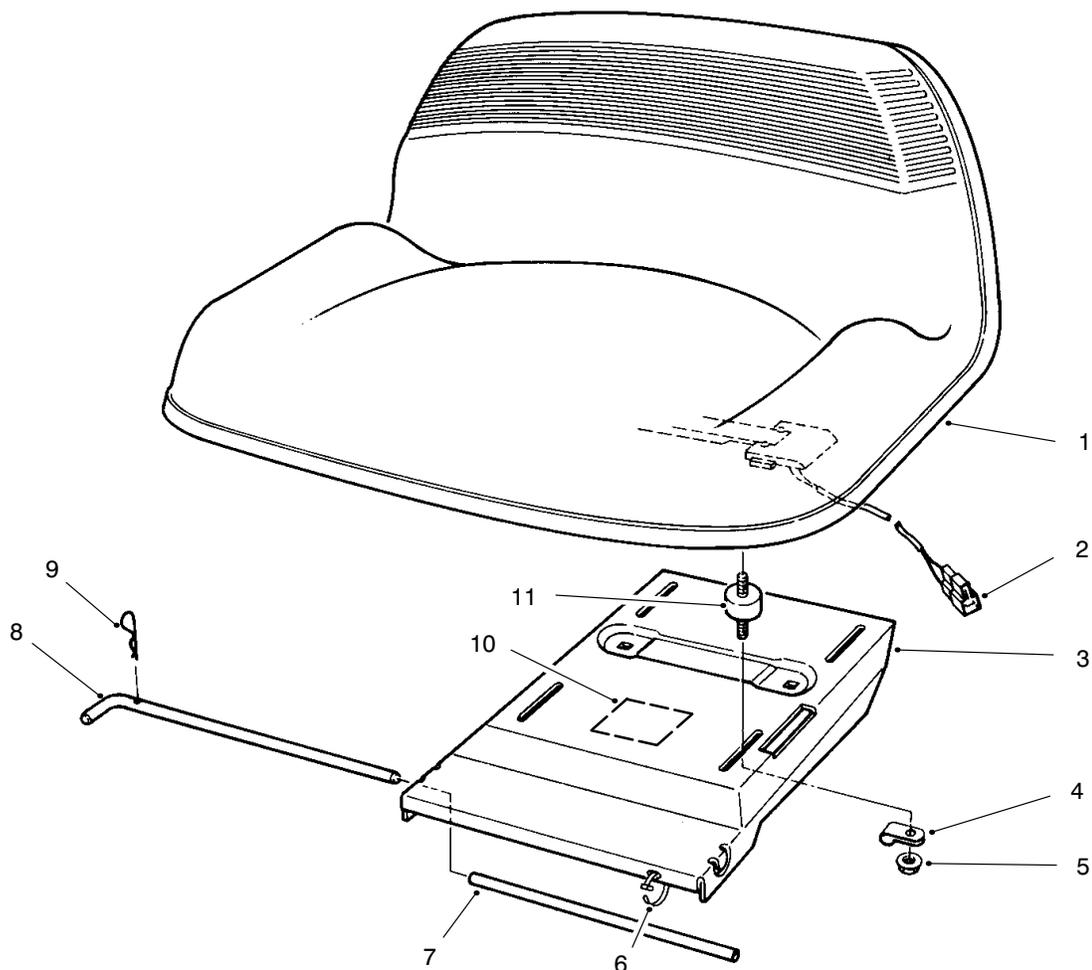

C-0745A

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-3950	Assembly - Seat	1	7	63-5670	Tube - Bumper, Seat Rod	1
2	38-1420	Switch - Interlock	1	8	80-2620	Rod - Base, Seat	1
3	63-5540	Base - Seat	1	9	3290-307	Pin - Cotter, Hair	1
4	2412-68	Clamp - Wire	1	10	114621	Decal - Euro Noise	1
5	32128-20	Nut - Flange Hd.	4	11	62-5480	Isolator - Seat	4
6	3290-378	Tie - Cable	1				

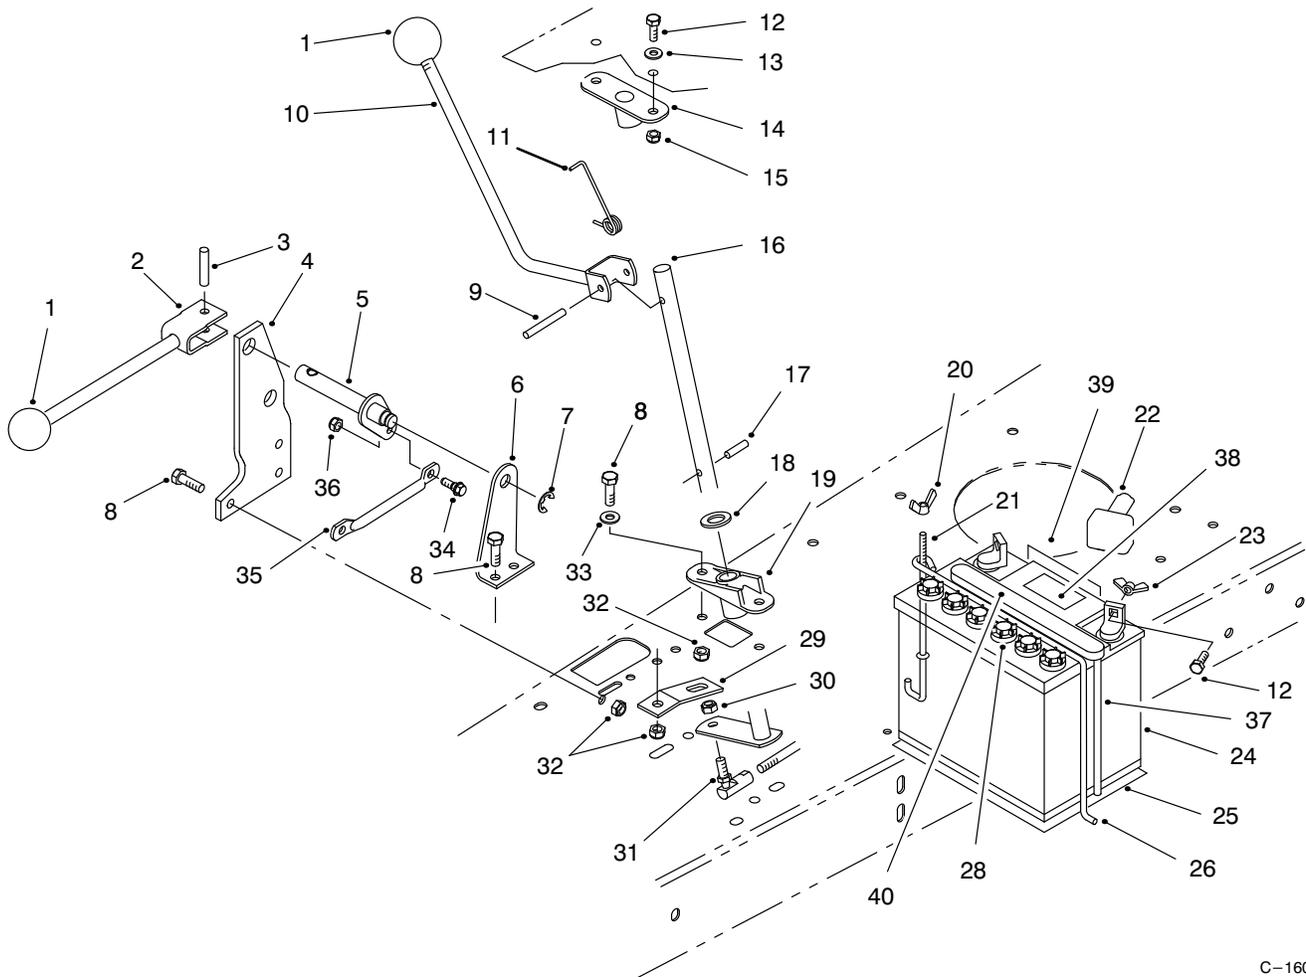


C-1601A

TRANSMISSION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-48	Knob	2
2	80-2400	Lever W.A. - Engage	1
3	32121-25	Pin - Roll	1
4	80-2350	Pivot - Outer	1
5	80-2370	Shaft W.A. - Pivot	1
6	80-2340	Bracket - Pivot, Inner	1
7	32120-47	Ring - Retaining	1
8	322-5	Screw - Cap Hex. Hd.	4
9	32121-78	Pin - Roll	1
10	92-0884	Lever W.A. - Shaft	1
11	92-0894	Spring - Torsion	1
12	321-4	Screw - Cap Hex. Hd.	2
13	3256-22	Washer - Flat	2
14	92-0888	Support - Shift, Upper	1
15	3296-42	Nut - Lock	2
16	92-0891	Shaft W. A. - Shift	1
17	32121-16	Pin - Roll	1
18	257-11	Washer	1
19	92-0887	Support - Shift, Lower	1
20	32103-12	Nut - Wing	1
21	56-7720	Post - Battery	1

Ref. No.	Part No.	Description	No. Used
22	28-8080	Boot - Terminal	1
23	32103-22	Nut - Wing	2
24	80-2600	Battery - 12 Volt (Incl. Ref. #28 & 37)	1
25	62-4300	Pad - Battery	1
26	56-7710	Hold Down - Battery	1
28	218-560	Cap - Battery	6
29	92-0896	Retainer - Spring	1
30	3296-4	Nut - Lock	1
31	2411-32	Ball Joint	1
32	3296-29	Nut - Lock	4
33	3256-23	Washer - Flat	2
34	65-5670	Screw - Shoulder	1
35	80-2330	Link - Bell Crank	1
36	3296-8	Nut - Lock	1
37	56-2540	Tube - Vent, Battery	1
38	93-6668	Decal - Battery Charging Instructions	1
39	93-7276	Decal - Danger	1
40	93-9354	Decal - Battery	1

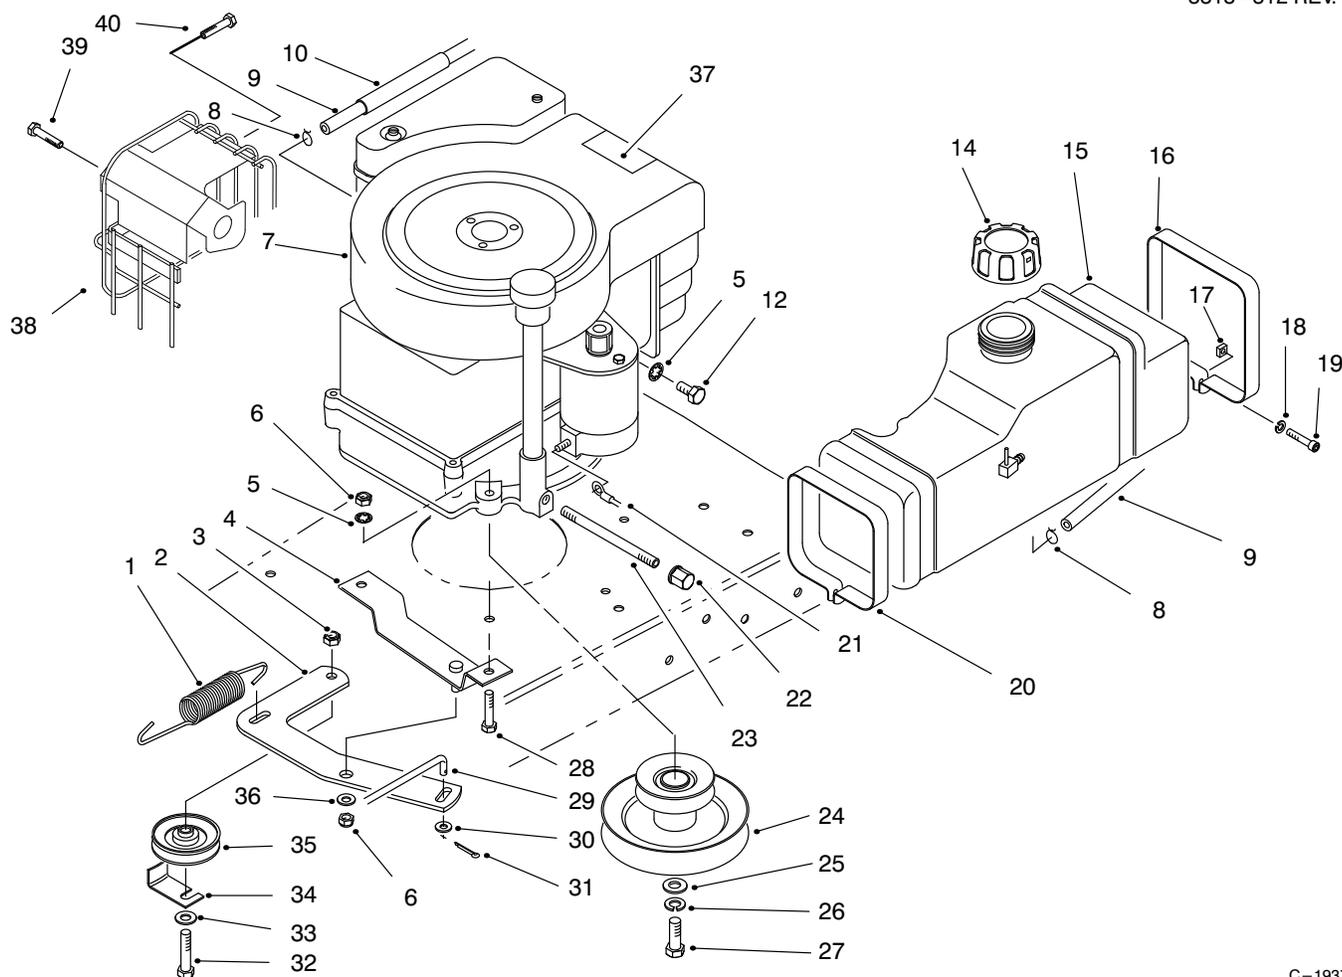


C-1937A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0879	Spring	1	23	289-19	Nipple - Pipe	1
2	92-0883	Plate - Mounting, Idler	1	24	92-0873	Pulley - Engine	1
3	3296-39	Nut - Lock	1	25	3256-25	Washer - Flat	1
4	92-0881	Bracket W.A. - Traction	1	26	3253-6	Washer - Lock	1
5	3254-2	Washer - Lock, Int. Tooth	3	27	62-3760	Screw - Cap Hex. Hd.	1
6	3296-29	Nut - Lock	2	28	322-7	Screw - Cap Hex. Hd.	4
7		Engine - 11.5 H.P.	1	29	92-0871	Rod - Traction	1
8	2412-98	Clamp - Hose	2	30	3256-22	Washer - Flat	1
9	47-2961	Hose - Fuel Line	1	31	3272-6	Pin - Cotter	1
10	62-5490	Support - Fuel Line	1	32	323-9	Screw - Cap Hex. Hd.	1
12	32144-14	Screw	2	33	3256-24	Washer - Flat	1
14	55-3570	Cap - Fuel	1	34	12-9020	Retainer - Belt	1
15	56-7050	Tank - Fuel	1	35	12-5820	Pulley - Idler	1
16	57-4060	Retainer - Front	1	36	3256-57	Washer - Flat	1
17	32107-11	Nut - Square	2	37	93-1192	Decal - Engine	1
18	3253-3	Washer - Lock	2	38	93-7446	Guard - Muffler	1
19	3274-51	Screw - Hex. Socket Hd.	2			(Incl. Ref. #39 & 40)	1
20	57-4070	Retainer - Rear	1	39	94-1278	Screw	3
21	56-7670	Cable - Battery, Positive	1	40	94-1277	Screw	1
22	288-10	Cap - Pipe	1	*	88-4490	Reducer - Throttle	1


*Not Illustrated

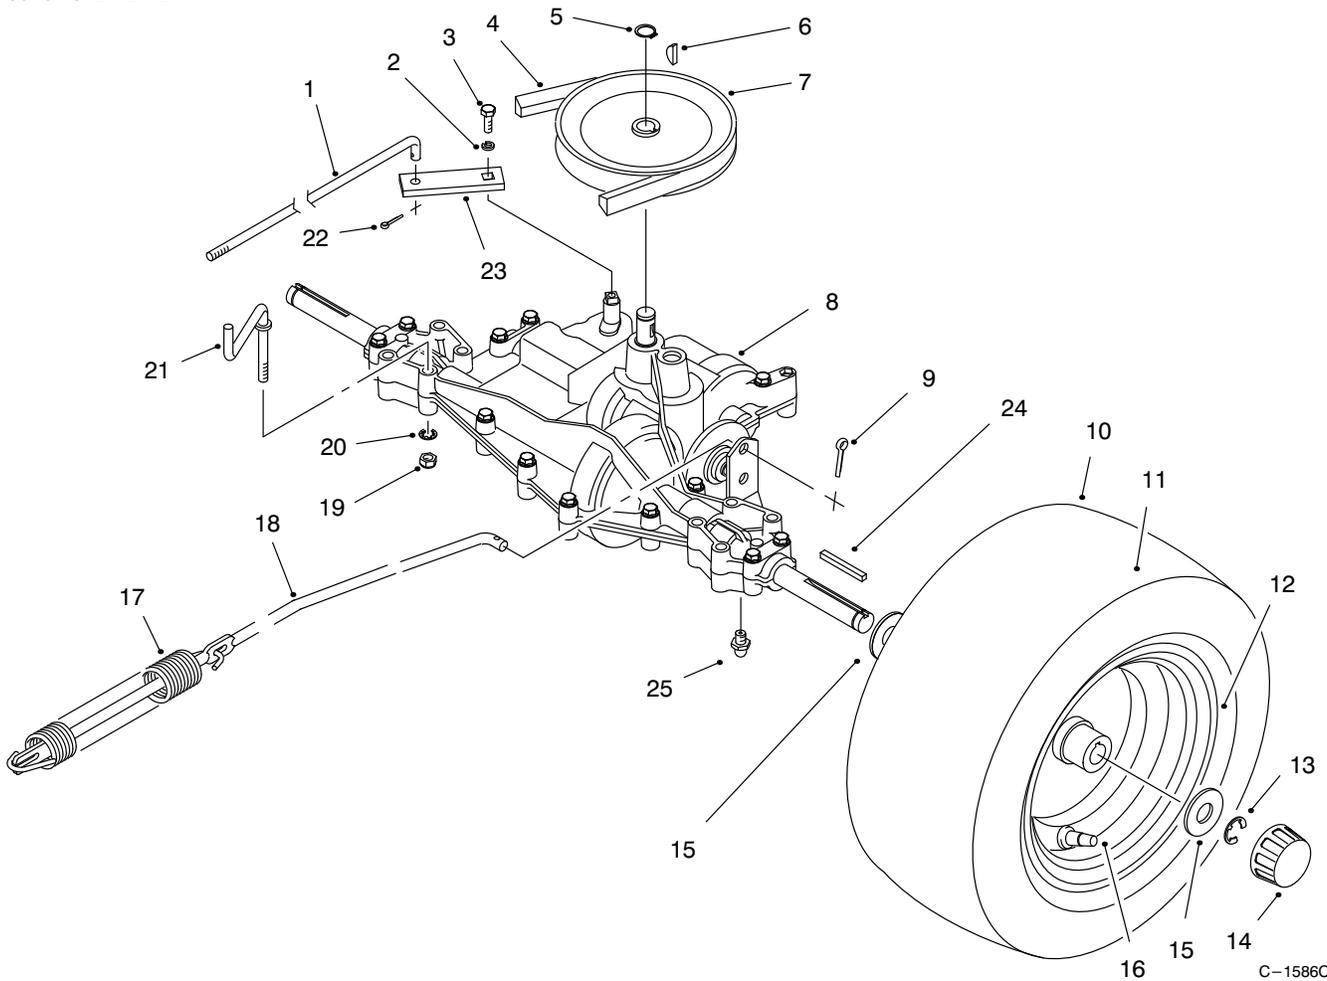

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0889	Link - Shift	1
2	3253-3	Washer - Lock	1
3	329-4	Screw - Cap Hex. Hd.	1
4	92-0870	V-Belt - Traction	1
5	32120-64	Ring - Retaining	1
6	3257-23	Key	1
7	92-0874	Pulley	1
8	92-0862	Transaxle	1
9	3272-16	Pin - Cotter	1
10	231-117	Tire	2
11	232-39	Tube - Inner	2
12	88-9730	Rim	2
13	32151-48	Ring - Retaining	2

Ref. No.	Part No.	Description	No. Used
14	61-9780	Cap - Hub	2
15	28-2480	Washer	4
16	232-27	Stem - Valve	2
17	57-9940	Spring - Brake	1
18	92-0872	Rod - Brake	1
19	3296-29	Nut - Lock	1
20	3254-2	Washer - Lock, Int. Tooth	1
21	92-0899	Guide - Belt, Lower	1
22	3272-6	Pin - Cotter	1
23	92-0880	Arm - Shift, Transaxle	1
24	7-0036	Key - Square	2
25	302-5	Fitting - Grease	2

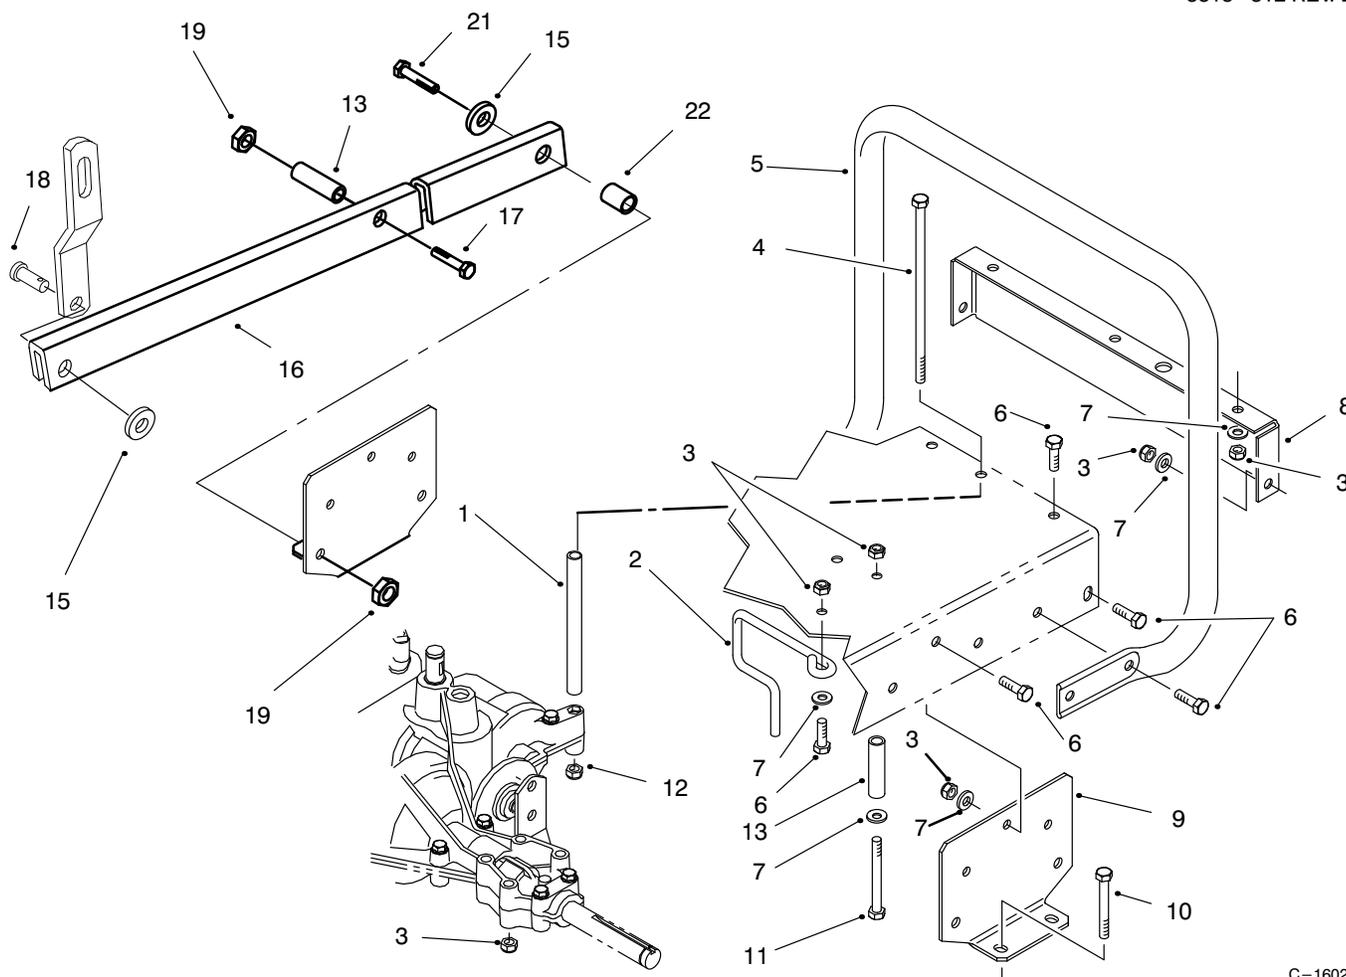


C-1602D

STAND BAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0897	Spacer	1
2	92-0898	Guide - Belt	1
3	3296-29	Nut - Lock	17
4	322-50	Screw - Cap Hex. Hd.	1
5	92-0864	Standbar	1
6	322-5	Screw - Cap Hex. Hd.	15
7	3256-23	Washer - Flat	12
8	92-0861	Frame - Rear	1
9	92-0865	Support - Axle	2
10	322-12	Screw - Cap Hex. Hd.	4
11	322-14	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
12	3296-47	Nut - Lock	1
13	76-1560	Spacer	4
15	3256-24	Washer - Flat	4
16	76-1540	Arm - Suspension R.H.	1
*	76-1550	Arm - Suspension L.H.	1
17	323-14	Screw - Hex Hd. Cap	2
18	283-42	Pin - Clevis	2
19	3296-39	Nut - Lock	4
21	323-9	Screw - Hex Hd. Cap	2
22	56-7430	Pin - Support	2

*Not Illustrated

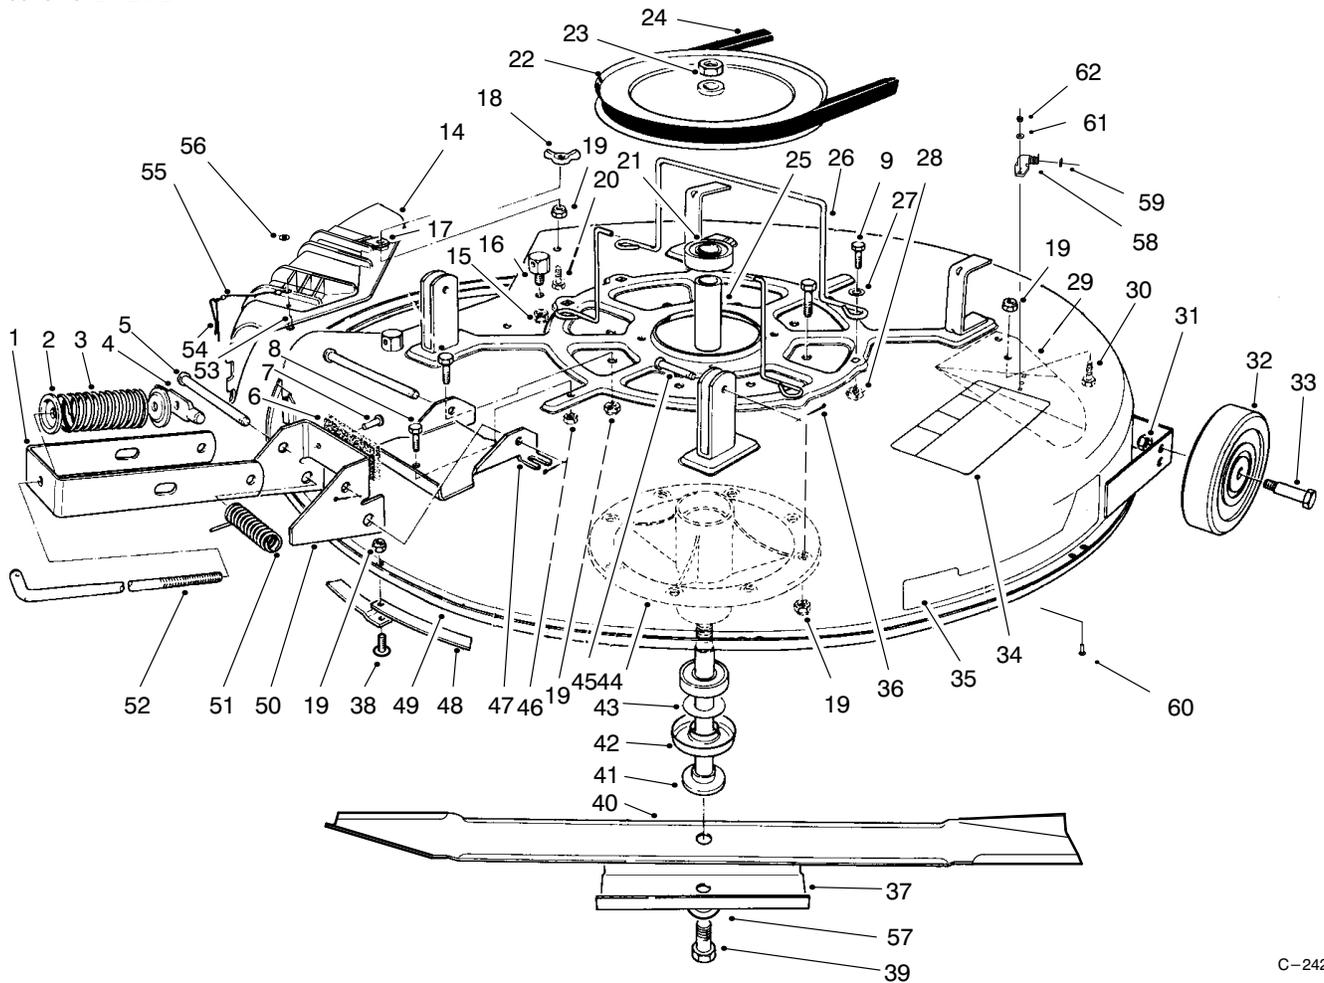


C-2425

MOWER ASSEMBLY – RECYCLER

Ref. No.	Part No.	Description	No. Used
1	47-1180	Bracket – Engagement	1
2	47-1140	Retainer – Spring, Top	2
3	47-0960	Spring – Compression	1
4	47-1200	Shaft – Adjusting	1
5	80-2570	Pin – Clevis	2
6	80-2550	Pad – Brake	1
7	3290-282	Rivet	2
8	321-4	Screw – Cap Hex. Hd.	1
9	322-5	Screw – Cap Hex. Hd.	6
14	82-6150	Assy. – Cover, Discharge (Incl. Ref. #53-56)	1
15	3296-59	Nut – Lock	1
16	28-7350	Post – Pivot	1
17	83-7010	Brace – Cover, Rear	1
18	32103-2	Nut – Wing	1
19	3296-29	Nut – Lock	24
20	322-6	Screw – Cap Hex. Hd.	1
21	251-297	Bearing	2
22	80-4470	Pulley	1
23	3219-7	Nut – Hex. Hd.	1
24	92-0875	V-Belt	1
25	83-7020	Spacer – Bearing	1
26	60-9730	Guide – Belt	2
27	3256-23	Washer – Flat	4
28	3290-496	Nut – Retainer	4
29	80-2630	Kicker – 32”	4
30	322-3	Screw – Cap Hex. Hd.	13


Ref. No.	Part No.	Description	No. Used
31	3296-39	Nut – Lock	2
32	61-9760	Wheel – Deck	2
33	56-6590	Bolt – Wheel	2
34	93-7010	Decal – Danger	1
35	92-7988	Decal – Recycler	1
36	3272-6	Pin – Cotter	2
37	80-4570	Stiffener – Blade	1
38	32122-14	Screw – Truss, Phillips Hd.	8
39	26-0671	Bolt – Blade	1
40	80-4430	Blade – Recycler	1
41	80-4350	Shaft – Spindle	1
42	80-4370	Shield – Bearing	1
43	80-4390	Spacer – Hardened	1
44	56-7030	Body – Spindle	1
45	283-2	Pin – Clevis	2
46	3296-8	Nut – Lock	1
47	80-2560	Plate – Deck, Brake Mtg.	1
48	80-4490	Ring – Deck	4
49	14-9999	Deck – Cutting, Recycler (Incl. Ref. #34) (Serial No. 6900001 – 7900999)	1
49	95-7850	Deck Assembly (Incl. Ref. #34 pg.12 & 5 pg. 14) (Serial No. 7901000 & Up)	1

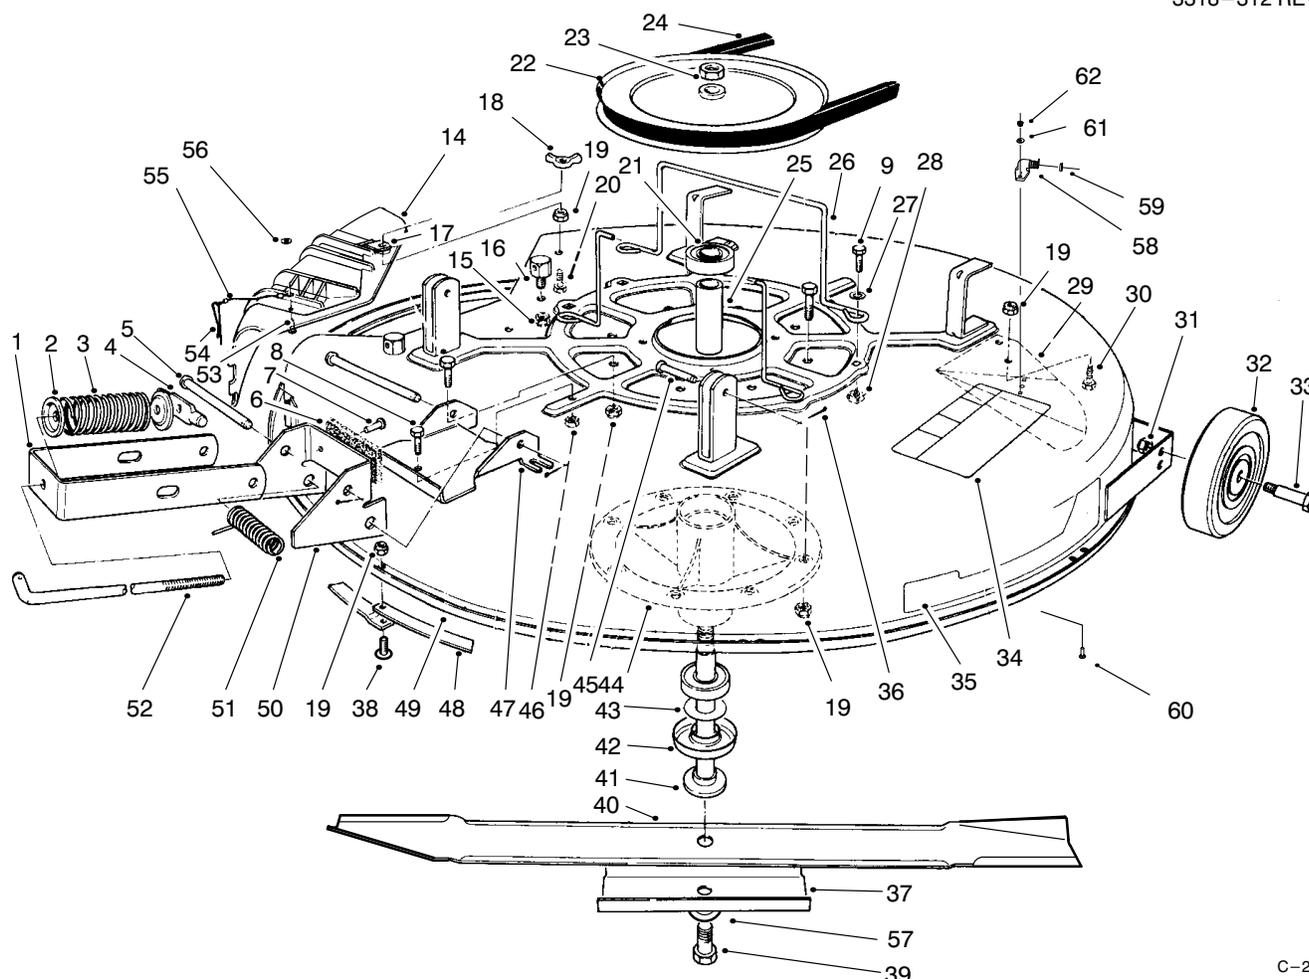

C-2425

MOWER ASSEMBLY – RECYCLER (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
50	80-2530	Assembly – Brake (Incl. Ref. #6-7)	1	59	46-6290	O-Ring (Serial No. 7901000 & Up)	1
51	40-6230	Spring – Torsion	1	60	3229-1	Bolt – Carriage (Serial No. 7901000 & Up)	2
52	80-2580	Rod – Adjusting	1	61	3256-1	Washer – Flat (Serial No. 7901000 & Up)	2
53	3290-282	Rivet	2	62	3296-16	Nut – Lock (Serial No. 7901000 & Up)	2
54	28-8130	Pin – Chute, Locking	1				
55	28-8070	Lanyard	1				
56	3256-49	Washer – Flat	1				
57	3290-465	Washer – Belleville	1				
58	95-2747	Fitting – Washout (Serial No. 7901000 & Up)	1				

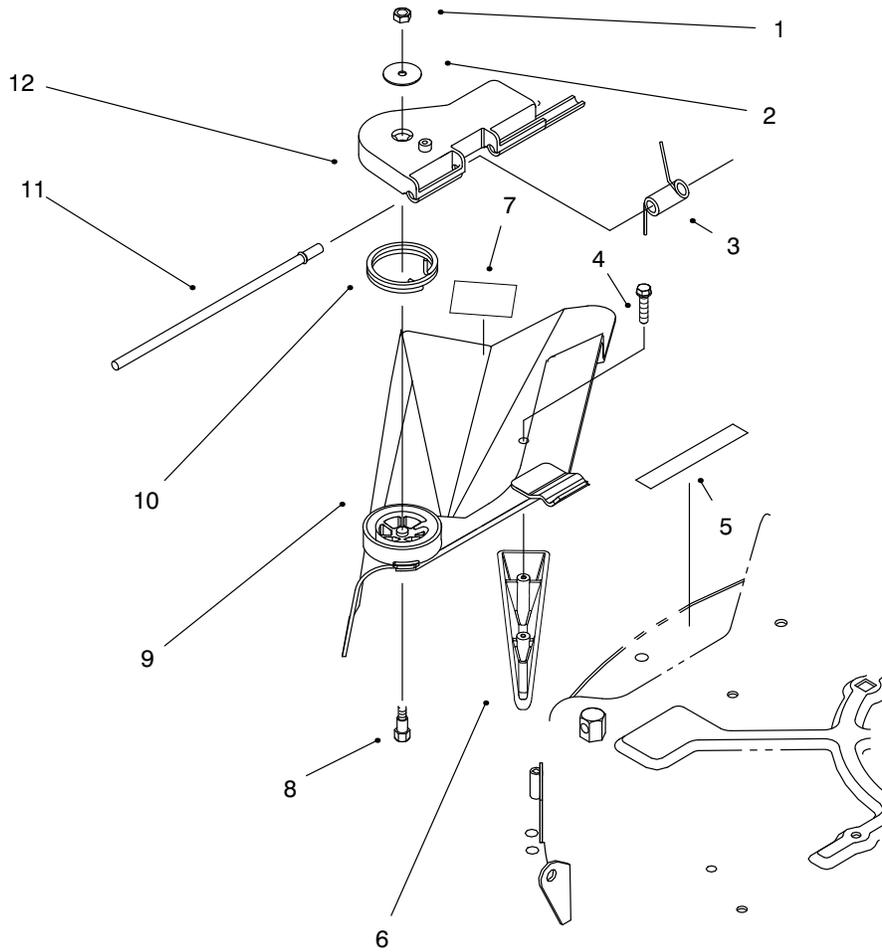


C-2426

DEFLECTOR ASSEMBLY – RECYCLER

Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut – Lock	1
2	3256-58	Washer – Fender	1
3	92-2493	Spring – Torsion	1
4	93-0231	Screw – Pan Hd.	4
5	93-7009	Decal – Deflector Danger	1
6	93-7696	Kicker – CE	2
7	93-7010	Decal – Danger	1

Ref. No.	Part No.	Description	No. Used
8	92-8916	Bolt – Shoulder	1
9	93-7694	Deflector Ass'y (Incl. Ref. #7)	1
10	88-6160	Spring – Torsion	1
11	88-6150	Rod – Deflector Hinge	1
12	88-4540	Hinge – Deflector Danger	1


ELECTRICAL SCHEMATIC

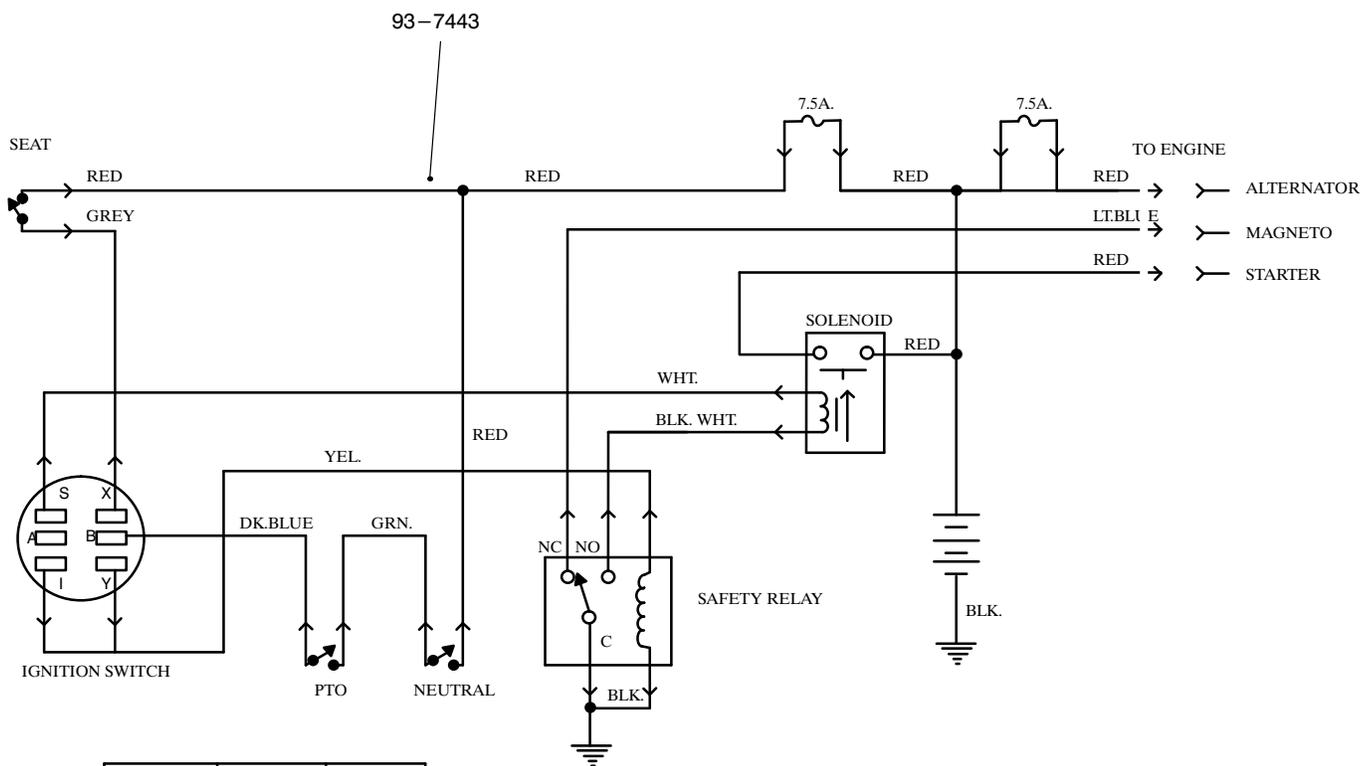

POSITION	CIRCUIT	MAKE
OFF	—	—
RUN	B+I+A	X+Y
START	B+I+S	—


C-2427

PEERLESS TRANSAXLE MODEL NO. 915-019

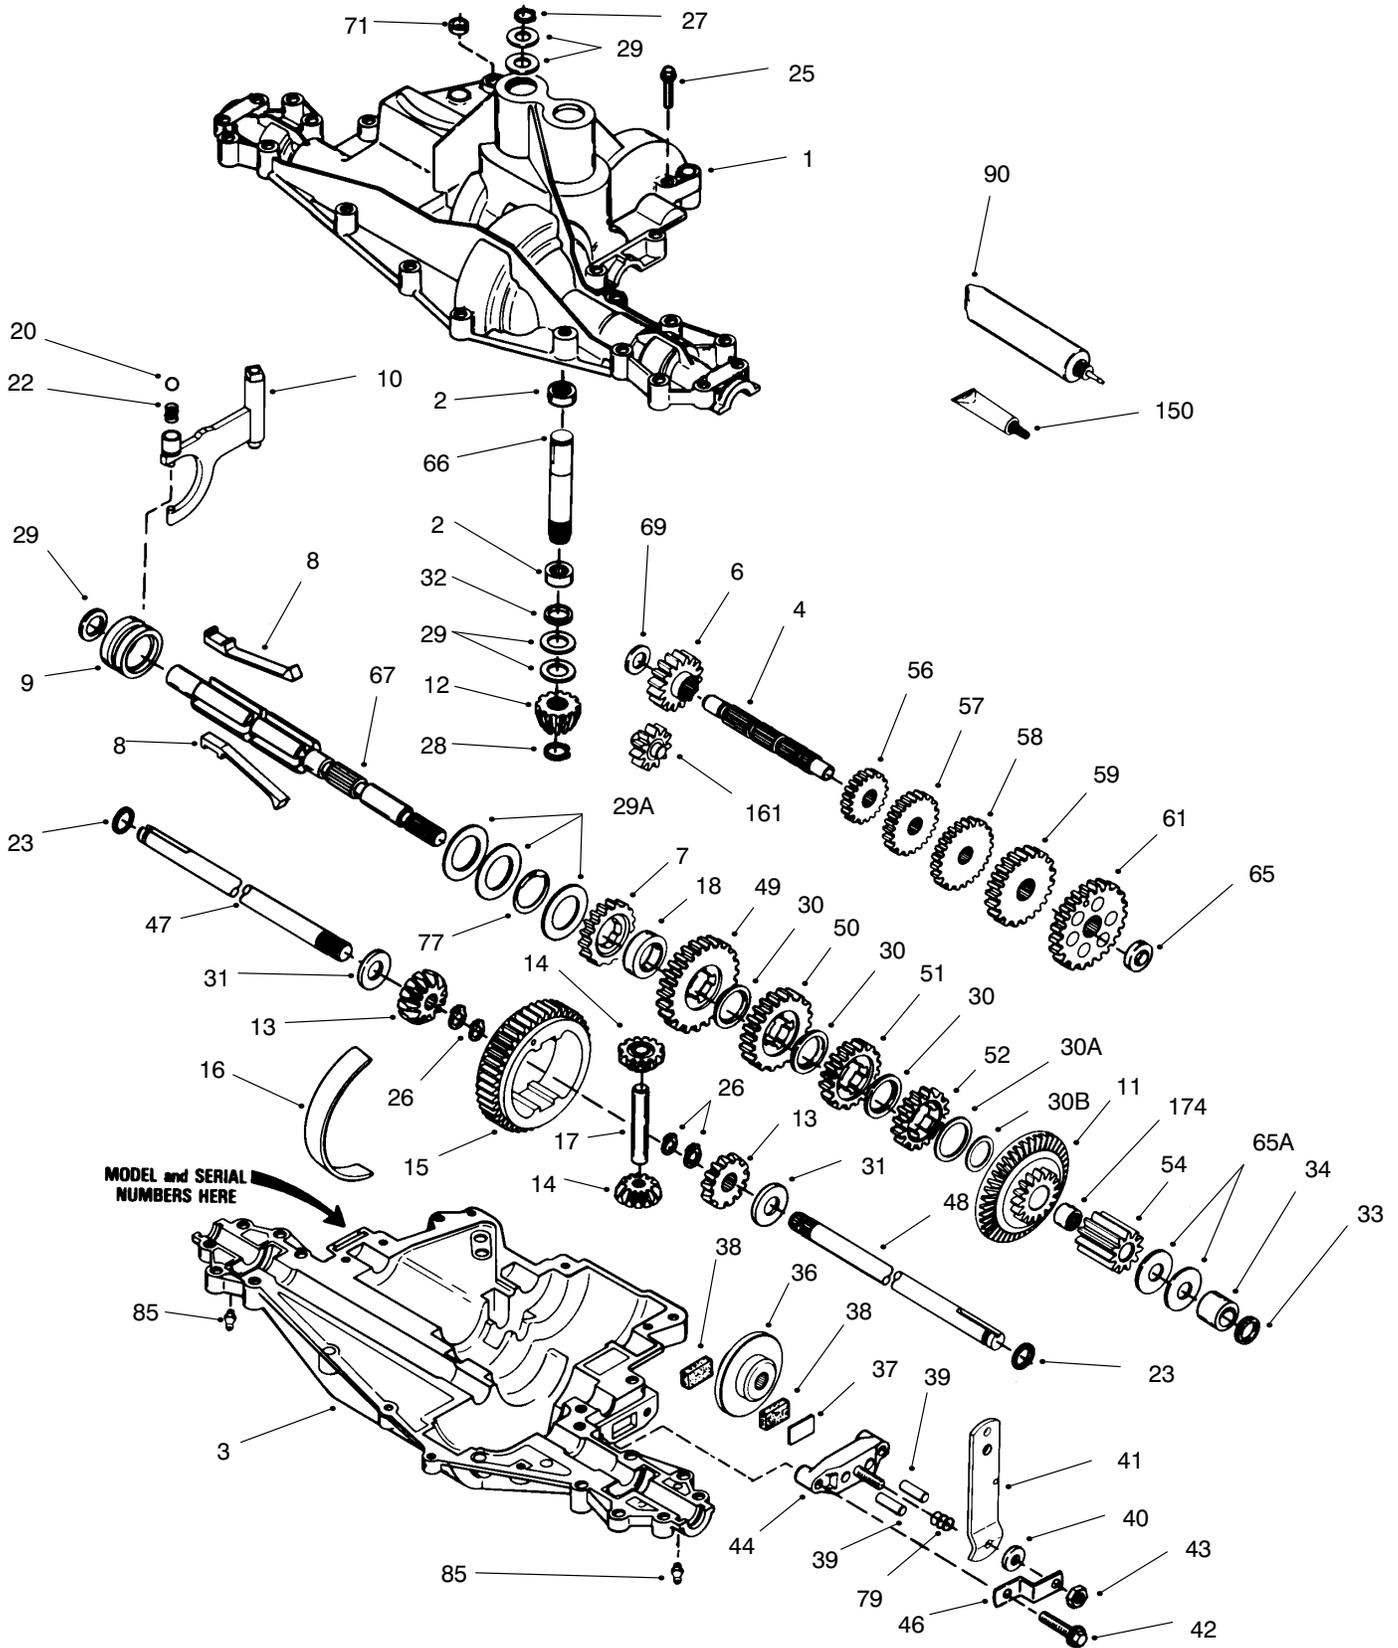

PEERLESS TRANSAXLE MODEL NO. 915-019

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	772117	Transaxle Cover	1	38	790006	Brake Pad	2
2	780086	Needle Bearing	2	39	786026	Dowel Pin	2
3	770114	Transaxle Case	1	40	792076	Washer	1
4	776300	Countershaft	1	41	790045	Brake Lever	1
6	778281	Spur Gear (16 Teeth)	1	42	792073	Screw	2
7	778122A	Spur Gear (22 Teeth)	1	43	792075	Locknut	1
8	792133	Shift Key	4	44	790025	Brake Pad Holder	1
9	784352	Shift Collar	1	46	786086	Brake Lever Bracket	1
10	784365	Shift Rod & Fork	1	47	774930	Axle (16-3/4" lg.)	1
11	778290	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1	48	774931	Axle (11-9/16" lg.) (Incl. Ref. #26)	1
12	778262	Bevel Pinion (14 Teeth)	1	49	778124A	Spur Gear (30 Teeth)	1
13	778221	Bevel Gear (16 Teeth)	2	50	778123A	Spur Gear (25 Teeth)	1
14	778068	Differential Pinion	2	51	778122A	Spur Gear (22 Teeth)	1
15	778260	Ring Gear	1	52	778273	Spur Gear (19 Teeth)	1
16	786150	Bearing Strip	1	54	778263	Spur Gear (11 Teeth)	1
17	78139	Drive Pin	1	56	778126A	Spur Gear (20 Teeth)	1
18	786147	Neutral Spacer	1	57	778127A	Spur Gear (25 Teeth)	1
20	792139	Ball (3/8" dia.)	1	58	778128A	Spur Gear (28 Teeth)	1
22	792142	Spring	1	59	778129A	Spur Gear (30 Teeth)	1
23	788061	Seal Ring	2	61	778265	Spur Gear (34 Teeth)	1
25	792073	Screw	17	65	780162	Washer	1
26	792125	Retaining Ring (pkg. of 2)	4	65A	780160	Washer	2
27	792035	Retaining Ring	1	66	776299	Input Shaft (3.522" lg.)	1
28	788040	Retaining Ring	1	67	776352	Shifter & Brake Shaft	1
29	780072	Washer	5	69	780161	Thrust Washer	1
29A	780090	Thrust Washer	3	71	788069	Square Cut Ring	1
30	780108	Washer	3	77	788078A	Inverted Retaining Ring (pkg. of 2)	1
30A	789145	Washer	1	79	792144	Spring	1
30B	780178	Washer	1	90	788067B	Grease (32 oz. btl. Bentonite grease)	1
31	780001	Washer	2	150	510334	Gasket Eliminator (Loctite #515)	1
32	792001	O-Ring	1	161	776302	Reverse Idler Assembly	1
33	788076	O-Ring	1	174	780085	Needle Bearing	1
34	780159	Bushing	1				
36	790071	Brake Disk	1				
37	790007	Brake Pad Plate	1				

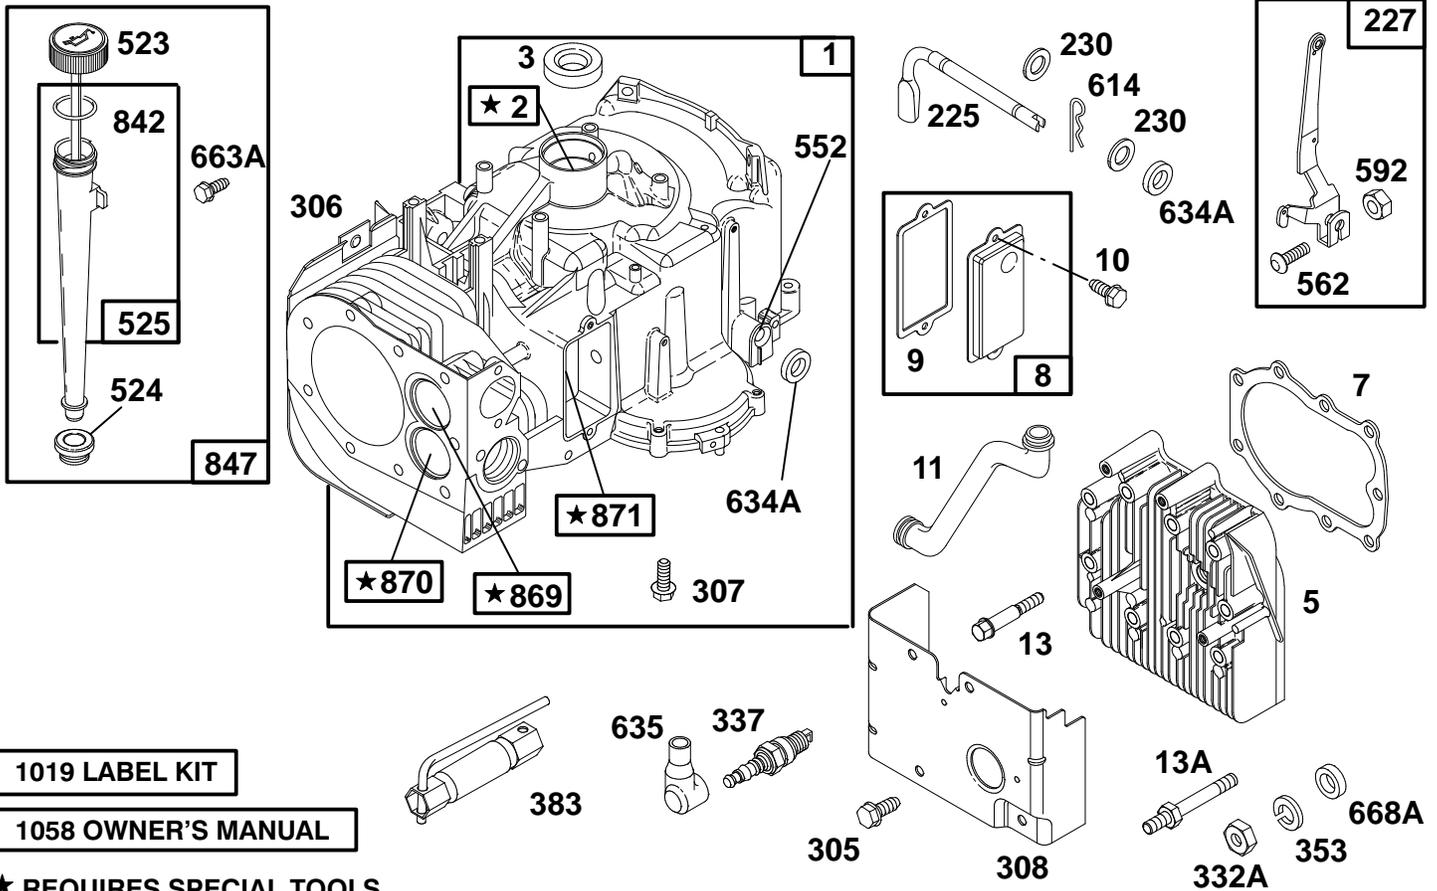

1019 LABEL KIT

1058 OWNER'S MANUAL

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	
2	399265	Bearing-Cylinder	
★3	391086	Seal-Oil	
5	494240	Head-Cylinder	
★7	271866	Gasket-Cylinder Head	
8	495735	Breather Assembly	
★9	27803	Gasket-Valve Cover	
10	94621	Screw-Sem	
11	281246	Tube-Breather	
13	94622	Screw-Cylinder Head	
13A	94776	Stud-Cylinder Head	
225	495157	Crank-Governor	
227	493935	Lever Assy.-Governor	
230	94742	Washer-Governor Lever	
305	94786	Screw-Hex. Head	
306	224545	Shield-Cylinder	
307	94386	Screw-Self Tap	
308	491490	Cover-Cylinder Head	
332A	94314	Nut-Hex.	
337	802592	Plug-Spark	
353	94315	Washer-Lock	

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench-Spark Plug	
523	495229	Cap-Oil Filler	
★524	68838	Seal-Filler Tube	
525	496068	Tube-Oil Filler	
552	231597	Bushing-Gov. Crank	
562	92613	Bolt-Governor Lever	
592	231082	Nut-Hex.	
614	93306	Pin-Cotter	
★634A	491323	Seal-Governor	
635	66538	Elbow-Spark Plug	
663A	94073	Screw-Hex. Head	
668A	231109	Spacer	
★842	270920	Seal-Oil Filler Cap	
847	496367	Fill Group-Oil	
869	261463	Seat-Intake Valve	
870	213316	Seat-Exhaust Valve	
871	261961	Guide-Exhaust Valve	
		Note: 231218 Guide-Intake Valve (Brass)	
1019	491254	Label Kit	
1058	272697	Owner's Manual	

★ Included in Gasket Set-Part No. 494241.
 ◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 497481.

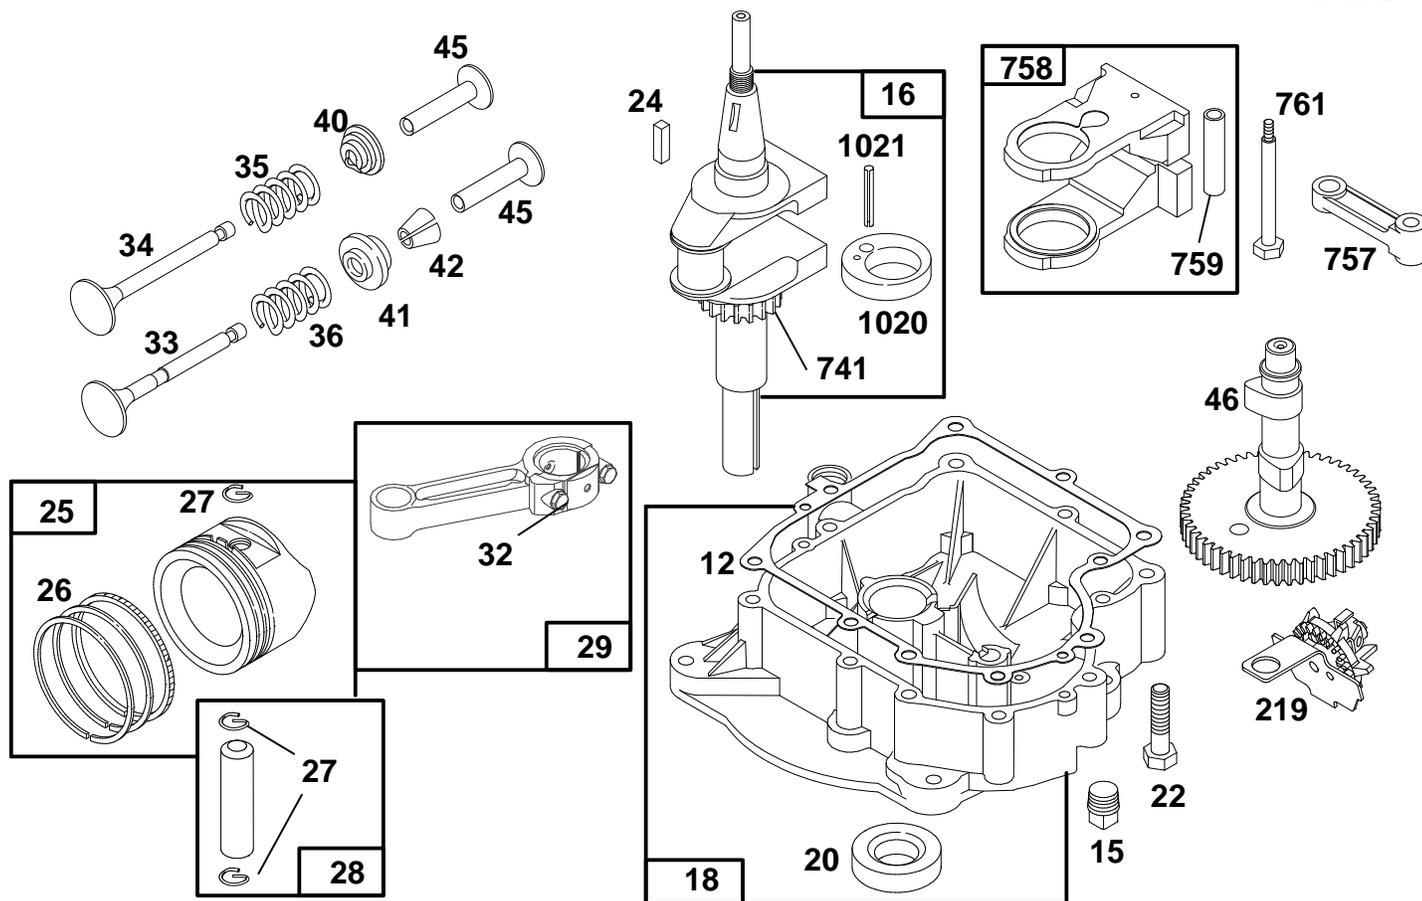

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket-Crankcase (.015" Thick)		27	260924	Lock-Piston Pin	
★	271997	Gasket-Crankcase (.005" Thick)		28	299691	Pin-Piston (Standard)	
★	271996	Gasket-Crankcase (.009" Thick)		391286	Pin-Piston (.005" O.S.)		
15	94239	Plug-Oil Drain		29	490348	Rod-Connecting	
16	495162	Crankshaft		490469	Rod-Conn. (.020" U.S.)		
		Note: For Timing Gear Key-Order 94196.		32	94671	Screw-Conn. Rod	
18	494238	Base-Engine		33	262246	Valve-Exhaust	
★20	291675	Seal-Oil		34	262247	Valve-Intake	
22	94624	Screw-Sem		35	65906	Spring-Valve	
24	222698	Key-Flywheel		36	26828	Spring-Valve	
25	394661	Piston Assembly (Standard)		40	221596	Retainer-Intake Valve	
	394662	Piston Assy. (.010" O.S.)		41	292260	Rotocoil-Ex. Valve	
	394663	Piston Assy. (.020" O.S.)		42	494553	Retainer-Rotocoil	
	394664	Piston Assy. (.030" O.S.)		45	262248	Tappet-Valve	
26	391780	Ring Set (Standard)		46	212897	Gear-Cam	
	392331	Ring Set (Chrome Std.)		219	490815	Gear-Gov.	
	391781	Ring Set (.010" O.S.)		741	262932	Gear-Timing	
	391782	Ring Set (.020" O.S.)		757	213998	Link-Counterweight	
	391783	Ring Set (.030" O.S.)		758	399891	Counterweight Assy.	
				759	298909	Pin-Counterweight	
				761	94593	Screw-Counterweight	
				1020	262243	Eccentric	
				1021	94853	Pin-Eccentric	

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 497481.

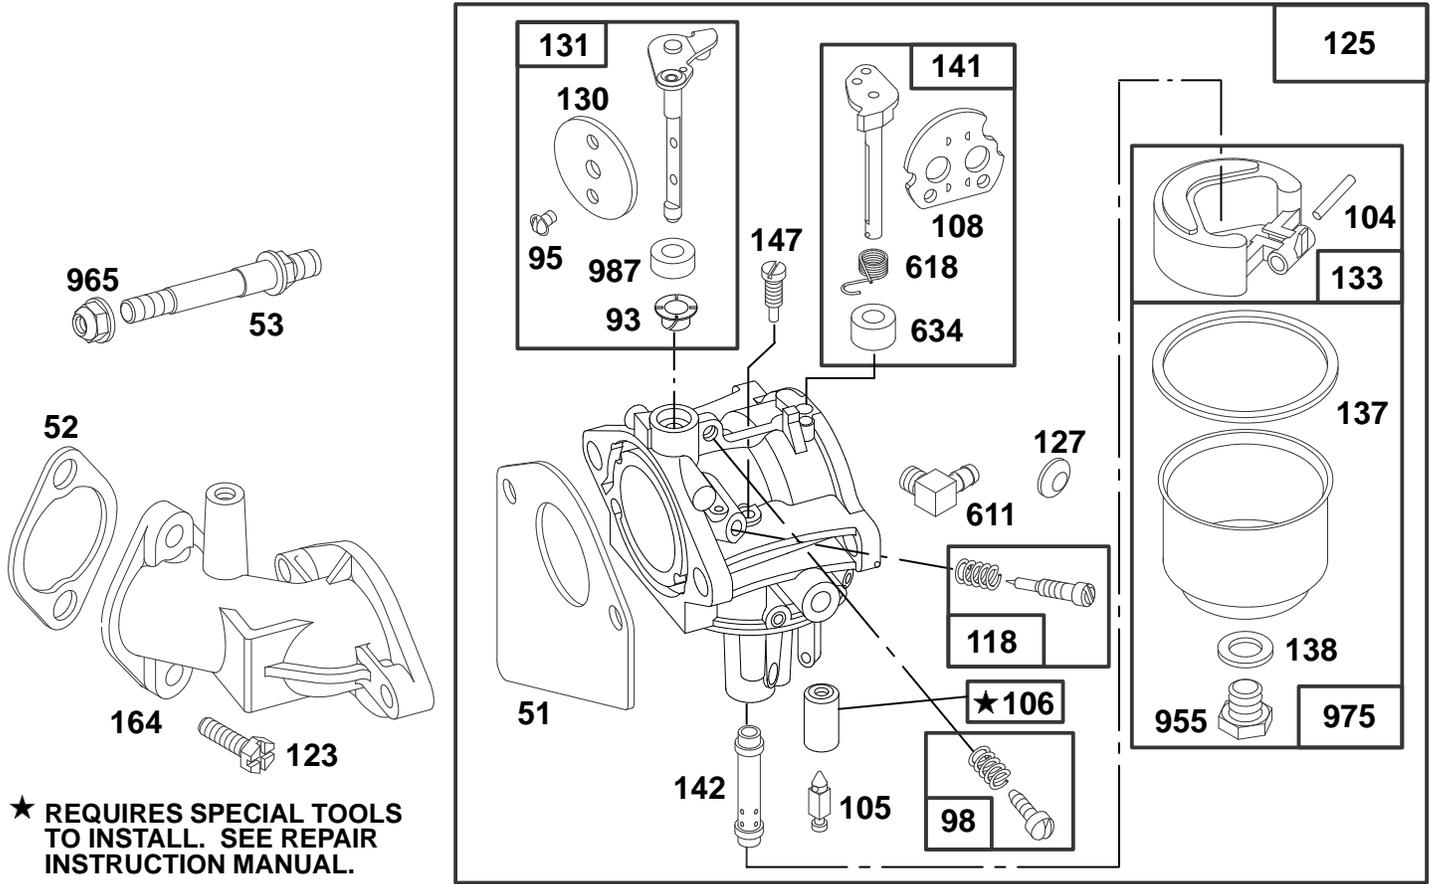

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
◆51	272465	Gasket—Carburetor	
★52	272554	Gasket—Carburetor	
53	94637	Stud—Carb. Mtg.	
●93	281346	Bushing—Throttle Shaft	
●95	94098	Screw—Throttle	
98	495800	Screw—Idle Adjust	
●104	231789	Pin—Float Hinge	
●105	231855	Valve—Inlet Needle	
●106	231854	Seat—Inlet	
108	224666	Valve—Choke	
118	496589	Valve—Needle	
123	94616	Screw—Elbow Mtg.	
125	496592	Carburetor	
●127		Plug—Welch (Sold in Kit Only).	
130	224668	Valve—Throttle	
131	494885	Shaft—Throttle	
133	494381	Float—Carburetor	

Ref. No.	Part No.	Description	No. Used
◆137	281165	Gasket—Float Bowl	
◆138	281164	Washer—Float Bowl	
141	495931	Shaft—Choke	
●142	496519	Nozzle—Carburetor Note: 496623 Nozzle—Carb. (High Altitude) Includes: 281164 Washer—Float Bowl	
●147	497472	Pilot—Jet	
164	213819	Carburetor—Elbow	
611	493496	Elbow—Fuel Pipe	
618	262803	Spring—Choke Return	
●634	281168	Seal—Choke Shaft	
955	94642	Screw—Fuel Bowl	
965	94010	Nut—Hex.	
975	494378	Bowl—Float	
●987	281166	Seal—Throttle Shaft	

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497481.

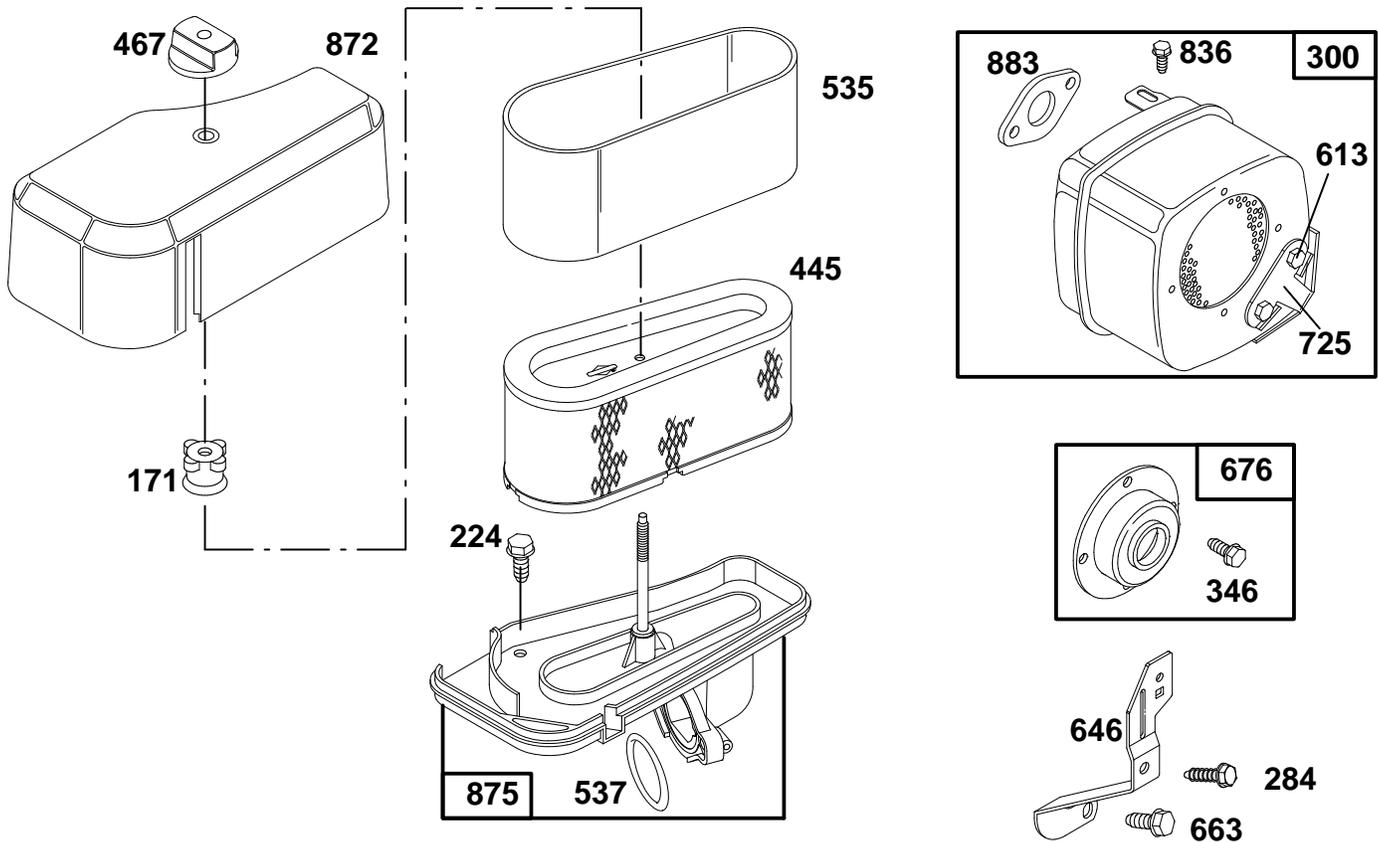

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	
224	94729	Screw—Air Cleaner Sem	
284	94704	Screw—Air Cleaner	
300	491413	Muffler—Exhaust	
346	93705	Screw—Hex. Head	
445	493910	Element—Air Cleaner	
467	493903	Knob—Air Cleaner	
535	272477	Element—Air Cleaner	
★537	281106	Gasket—Air Cleaner	

Ref. No.	Part No.	Description	No. Used
613	93927	Screw—Hex. Hd.	
646	224546	Brace—Air Cleaner	
663	94620	Screw—Hex. Hd.	
676	396903	Deflector—Muffler	
725	223023	Shield—Muffler	
836	94786	Screw—Hex. Hd.	
872	281105	Cover—Air Cleaner	
875	496368	Body—Air Cleaner	
★883	272293	Gasket—Exhaust Pipe	

★ Included in Gasket Set—Part No. 494241.
 ◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497481.

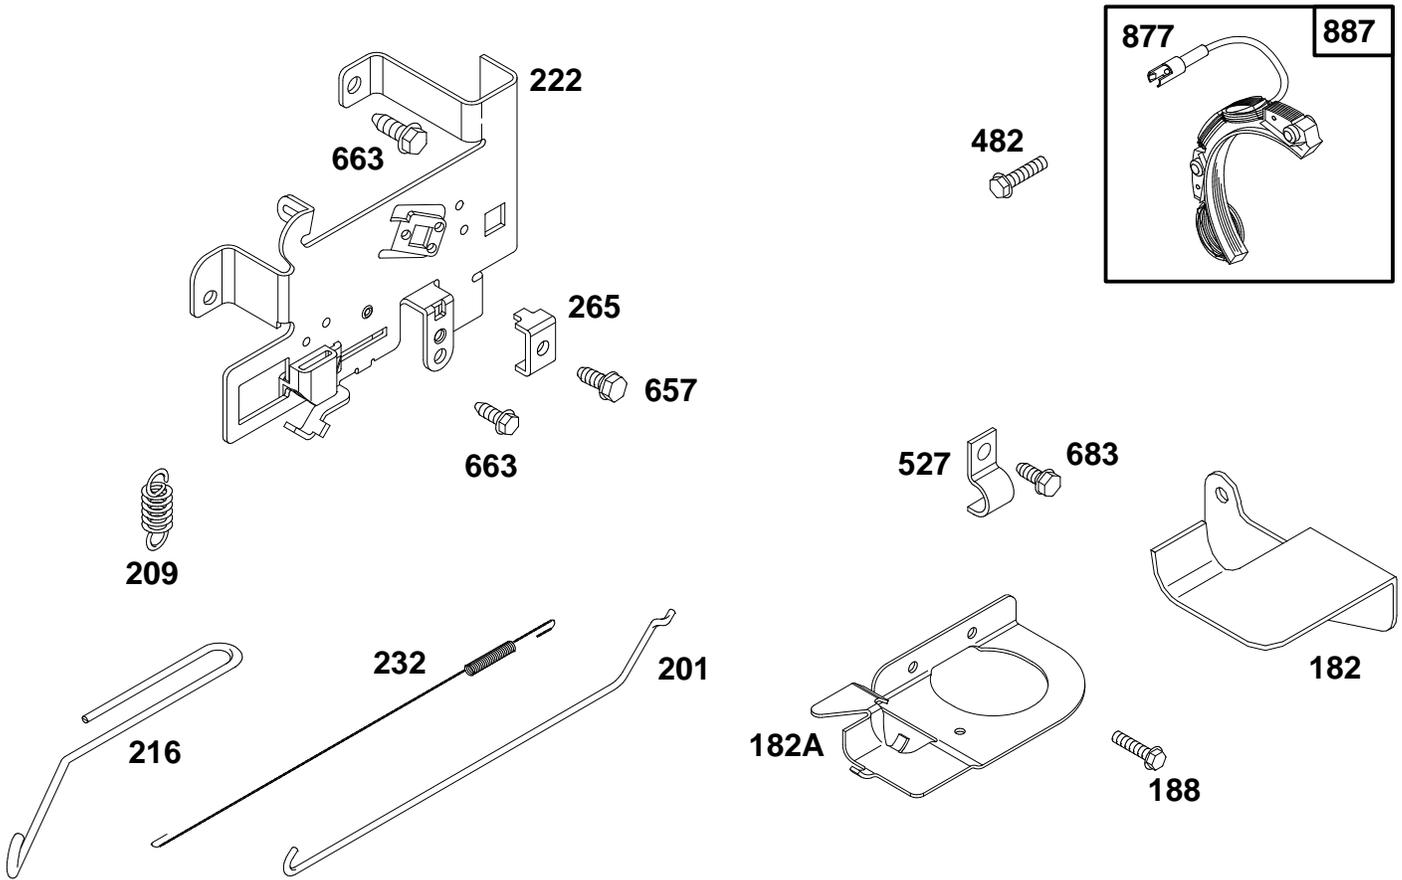

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
182	223925	Bracket-Fuel Tank (R.H.)	
182A	223866	Bracket-Fuel Tank (L.H.)	
188	94480	Screw-Sem	
201	262767	Link-Governor	
209	260871	Spring-Governor	
216	262766	Link-Choke	
222	495611	Plate-Gov. Control	
232	262785	Spring-Governor Link	

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp-Casing	
482	93621	Screw-Sem	
527	221428	Clamp	
657	93496	Screw-Sem	
663	94620	Screw-Hex. Hd.	
683	93572	Screw-Hex. Hd.	
877	393814	Diode Assy.	
887	391529	Alternator	

★ Included in Gasket Set-Part No. 494241.
 ◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 497481.

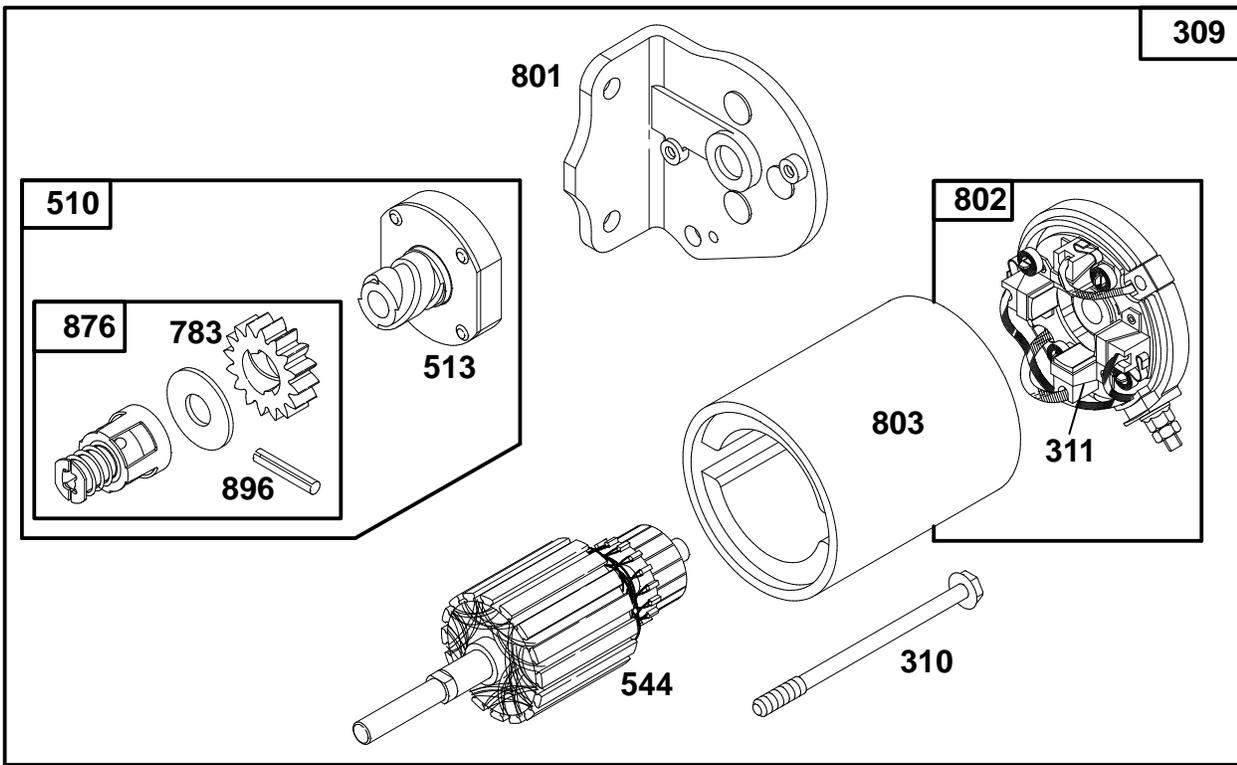

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor-Starter	
310	94003	Bolt-Thru	
311	395538	Brush Set-Starter	
510	495878	Drive-Starter	
513	398003	Clutch Assembly	
544	390837	Armature-Starter	


Ref. No.	Part No.	Description	No. Used
783	280104	Gear	
801	394856	Cap-Drive	
802	395537	Cap-End	
803	398159	Housing-Starter	
876	495877	Kit-Spring	
896	94288	Pin-Roll	

★ Included in Gasket Set-Part No. 494241.
 ◆ Included in Carburetor Gasket Set-Part No. 494385.


● Included in Carburetor Kit-Part No. 497481.

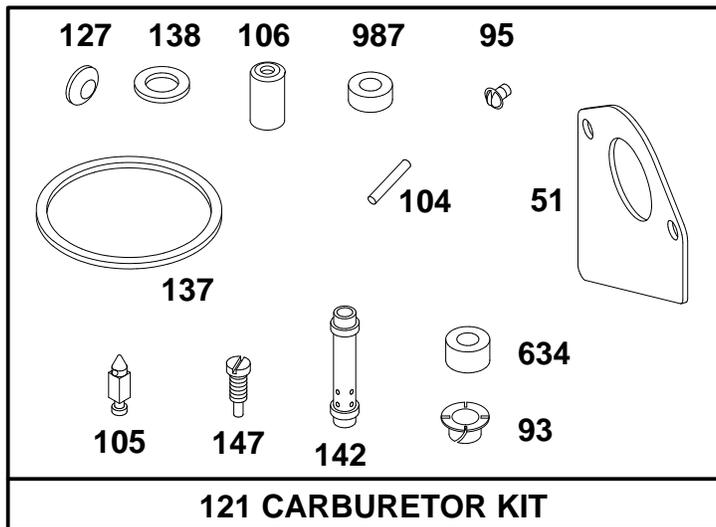

121 CARBURETOR KIT

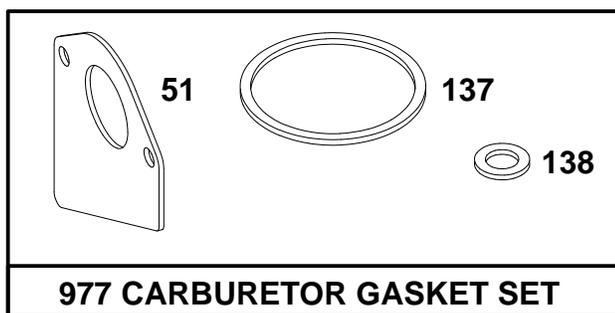

977 CARBURETOR GASKET SET

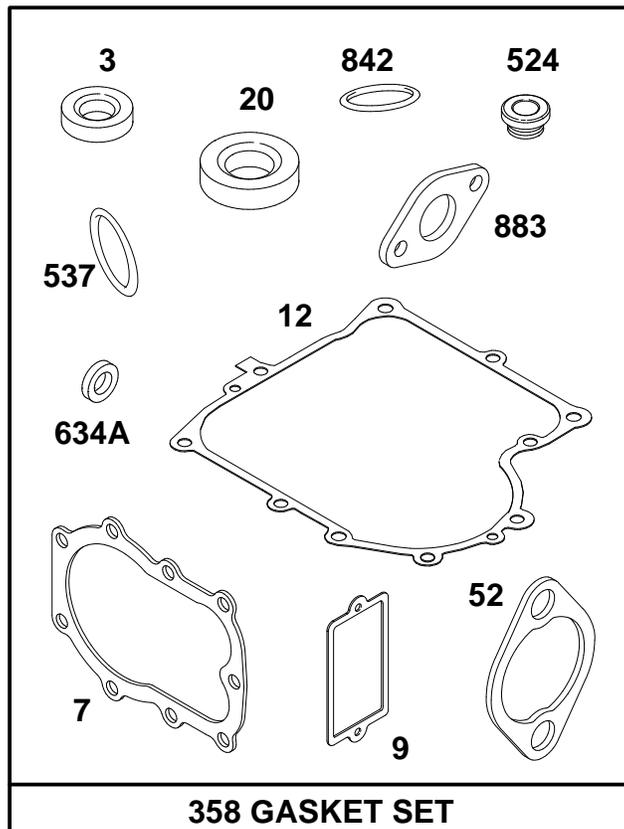

358 GASKET SET

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	
★7	271866	Gasket—Cylinder Head	
★9	27803	Gasket—Valve Cover	
★12	271916	Gasket—Crankcase (.015" Thick)	
★	271997	Gasket—Crankcase (.005" Thick)	
★	271996	Gasket—Crankcase (.009" Thick)	
★20	291675	Seal—Oil	
◆51	272465	Gasket—Carburetor	
★52	272554	Gasket—Carburetor	
●93	281346	Bushing—Throttle Shaft	
●95	94098	Screw—Throttle	
●104	231789	Pin—Float Hinge	
●105	231855	Valve—Inlet Needle	
●106	231854	Inlet Valve Seat	
121	497481	Carburetor Kit	

Ref. No.	Part No.	Description	No. Used
●127		Plug—Welch (Sold in Kit Only).	
◆137	281165	Gasket—Float Bowl	
◆138	281164	Washer—Float Bowl	
●142	496519	Nozzle—Carburetor Note: 496623 Nozzle—Carb. (High Altitude) Includes: 281164 Washer—Float Bowl	
●147	497472	Pilot—Jet	
358	494241	Gasket Set	
★524	281370	Seal—Filler Tube	
★537	281106	Gasket—Air Cleaner	
●634	281168	Seal—Choke Shaft	
★634A	491323	Seal—Governor	
★842	270920	Seal—Oil Filler Cap	
★883	272293	Gasket—Muffler	
977	494385	Carburetor Gasket Set	
●987	281166	Seal—Throttle	

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497481.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
8830	Clamp	4	17	2	56-7240	Bracket - Retaining, Spring	3	3	1
110513	Bearing	2	2	4	56-7400	Arm - Lever, H.O.C.	5	24	1
114621	Decal - Euro Noise	7	10	1	56-7430	Pin - Support	11	22	2
116397	Relay - Safety	6	11	1	56-7470	Bracket - Rack, Steering	2	33	1
147665	Screw - Phillips Hd.	6	1	2	56-7500	Shaft - Steering	2	31	1
147665	Screw - Phillips Head	4	1	2	56-7520	Bushing - Sector	2	22	1
3-6498	Washer - Thrust	2	5	5	56-7530	Bolt - Shoulder	2	20	1
7-0036	Key - Square	10	24	2	56-7570	Rod - Engagement	3	15	1
12-5820	Pulley - Idler	9	35	1	56-7650	Tube - Pivot	3	14	1
12-8819	Loose Parts	1	*	1	56-7670	Cable - Battery, Positive	9	21	1
12-8829	Loose Parts	1	*	1	56-7670	Cable - Positive	6	17	1
12-9020	Retainer - Belt	9	34	1	56-7710	Hold Down - Battery	8	26	1
14-9999	Deck - Cutting, Recycler	12	49	1	56-7720	Post - Battery	8	21	1
19-1470	Bolt - Shoulder	5	20	1	57-4060	Retainer - Front	9	16	1
26-0671	Bolt - Blade	12	39	1	57-4070	Retainer - Rear	9	20	1
27-9080	Bearing - Flange	2	15	4	57-9940	Spring - Brake	10	17	1
28-0380	Spacer - Axle, Front	2	24	1	60-9730	Guide - Belt	12	26	2
28-0540	Bolt - Shoulder	5	8	1	61-9760	Wheel - Deck	12	32	2
28-2480	Washer	10	15	4	61-9780	Cap - Hub	10	14	2
28-2480	Washer	2	43	2	61-9780	Cap - Hub	2	44	2
28-7350	Post - Pivot	12	16	1	62-3760	Screw - Cap Hex. Hd.	9	27	1
28-8070	Lanyard	13	55	1	62-3930	Spring - Extension	5	5	1
28-8080	Boot - Terminal	8	22	1	62-3930	Spring - Extension	3	6	1
28-8130	Pin - Chute, Locking	13	54	1	62-4300	Pad - Battery	8	25	1
38-1420	Switch - Interlock	7	2	1	62-5480	Isolator - Seat	7	11	4
40-6230	Spring - Torsion	13	51	1	62-5490	Support - Fuel Line	9	10	1
46-6290	O-Ring	13	59	1	63-5540	Base - Seat	7	3	1
47-0010	Arm - Suspension, Front	2	13	2	63-5670	Tube - Bumper, Seat Rod	7	7	1
47-0540	Pedal	3	19	2	63-5830	Link - Suspension, Deck	5	16	2
47-0550	Bracket - Brake, Pedal	3	17	1	63-8360	Key	4	6	1
47-0560	Bracket - Clutch, Pedal	3	12	1	65-2920	Pad - Pedal, Foot	3	5	2
47-0570	Spacer - Pedal	3	16	3	65-5670	Bolt - Shoulder	5	21	1
47-0590	Spindle - L.H.	2	*	1	65-5670	Screw - Shoulder	8	34	1
47-0600	Spindle - R.H.	2	4	1	66-6740	Cover - Shaft, Steering	4	2	1
47-0610	Tie Rod - Adjustable	2	34	1	76-1540	Arm - Suspension R.H.	11	16	1
47-0700	Bearing - Flange	2	27	1	76-1550	Arm - Suspension L.H.	11	*	1
47-0760	Support - Axle, Front	2	11	1	76-1560	Spacer	11	13	4
47-0770	Shaft - Pivot, Pedal	3	8	1	80-2310	Bracket - Bell Crank Mount	5	2	1
47-0780	Retainer - Shaft	3	9	1	80-2321	Bracket - H.O.C., Engage	5	15	1
47-0930	Footrest - R.H.	1	22	1	80-2330	Link - Bell Crank	8	35	1
47-0940	Footrest - L.H.	1	16	1	80-2340	Bracket - Pivot, Inner	8	6	1
47-0960	Spring - Compression	12	3	1	80-2350	Pivot - Outer	8	4	1
47-1140	Retainer - Spring, Top	12	2	2	80-2360	Crank - Bell, Deck Engage	5	22	1
47-1180	Bracket - Engagement	12	1	1	80-2370	Shaft W.A. - Pivot	8	5	1
47-1200	Shaft - Adjusting	12	4	1	80-2400	Lever W.A. - Engage	8	2	1
47-1290	Brake - Parking	1	10	1	80-2430	Axle - Front	2	18	1
47-1840	Bracket - Height-of-Cut	5	13	1	80-2450	Rack - Steering	2	19	1
47-1850	Lever - Height-of-Cut	5	6	1	80-2460	Tie Rod - Fixed	2	*	1
47-1910	Solenoid	6	12	1	80-2530	Assembly - Brake	13	50	1
47-2060	Bracket - Brake, Parking	1	19	1	80-2550	Pad - Brake	12	6	1
47-2961	Hose - Fuel Line	9	9	1	80-2560	Plate - Deck, Brake Mtg.	12	47	1
49-3242	Assy. - Wheel, Steering	4	5	1	80-2570	Pin - Clevis	12	5	2
54-3090	Wire Assembly	4	25	1	80-2580	Rod - Adjusting	13	52	1
55-3570	Cap - Fuel	9	14	1	80-2600	Battery - 12 Volt	8	24	1
56-2540	Tube - Vent, Battery	8	37	1	80-2620	Rod - Base, Seat	7	8	1
56-6590	Bolt - Wheel	12	33	2	80-2630	Kicker - 32	12	29	4
56-7030	Body - Spindle	12	44	1	80-4350	Shaft - Spindle	12	41	1
56-7050	Tank - Fuel	9	15	1	80-4370	Shield - Bearing	12	42	1
56-7070	Spring - Torsion, Clutch	3	11	1	80-4390	Spacer - Hardened	12	43	1
56-7080	Spring - Torsion, Brake	3	18	1	80-4430	Blade - Recycler	12	40	1
56-7130	Tower - Front	1	4	1	80-4470	Pulley	12	22	1
56-7140	Tower - Rear	1	8	1	80-4490	Ring - Deck	12	48	4
56-7170	Guide - Shaft, Steering	1	6	1	80-4570	Stiffener - Blade	12	37	1
56-7180	Cover - Front	2	30	1	82-6150	Assy. - Cover, Discharge	12	14	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
83-7010	Brace - Cover, Rear	12 17 1	93-7276	Decal - Danger	8 39 1
83-7020	Spacer - Bearing	12 25 1	93-7446	Guard - Muffler	9 38 1
88-3950	Assembly - Seat	7 1 1	93-7694	Deflector Ass'y	14 9 1
88-4490	Reducer - Throttle	9 * 1	93-7696	Kicker - CE	14 6 2
88-4540	Hinge - Deflector Danger	14 12 1	93-9354	Decal - Battery	8 40 1
88-6150	Rod - Deflector Hinge	14 11 1	94-1277	Screw	9 40 1
88-6160	Spring - Torsion	14 10 1	94-1278	Screw	9 39 3
88-9730	Rim	10 12 2	95-2747	Fitting - Washout	13 58 1
88-9800	Cover - Gate, Shift	6 24 1	95-7850	Deck Assembly	12 49 1
88-9830	Switch - Ignition	4 10 1	217-80	Rim	2 3 2
88-9930	Switch - Micro, Short	6 4 1	218-461	Nut - Lock	4 7 1
88-9932	Switch - Micro	4 24 1	218-560	Cap - Battery	8 28 6
92-0860	Frame	6 14 1	231-116	Tire	2 42 2
92-0861	Frame - Rear	11 8 1	231-117	Tire	10 10 2
92-0862	Transaxle	10 8 1	232-27	Stem - Valve	10 16 2
92-0864	Standbar	11 5 1	232-27	Valve Stem w/Cap	2 41 2
92-0865	Support - Axle	11 9 2	232-39	Tube - Inner	10 11 2
92-0866	Body W.A. - Seat Support	6 8 1	232-44	Tube - Inner	2 { 2
92-0870	V-Belt - Traction	10 4 1	233-25	Knob	4 13 1
92-0871	Rod - Traction	9 29 1	233-48	Knob	8 1 2
92-0872	Rod - Brake	10 18 1	233-48	Knob	5 19 1
92-0873	Pulley - Engine	9 24 1	2411-32	Ball Joint	8 31 1
92-0874	Pulley	10 7 1	2412-68	Clamp - Wire	7 4 1
92-0875	V-Belt	12 24 1	2412-98	Clamp - Hose	9 8 2
92-0876	Guard - Front	2 37 1	251-297	Bearing	12 21 2
92-0877	Panel - Seat Base, R.H.	6 21 1	257-11	Washer	8 18 1
92-0878	Panel L.H. - Base, Seat	5 9 1	283-2	Pin - Clevis	2 16 2
92-0879	Spring	9 1 1	283-2	Pin - Clevis	12 45 2
92-0880	Arm - Shift, Transaxle	10 23 1	283-42	Pin - Clevis	11 18 2
92-0881	Bracket W.A. - Traction	9 4 1	283-52	Pin - Clevis	1 20 1
92-0883	Plate - Mounting, Idler	9 2 1	288-10	Cap - Pipe	9 22 1
92-0884	Lever W.A. - Shaft	8 10 1	289-19	Nipple - Pipe	9 23 1
92-0887	Support - Shift, Lower	8 19 1	302-5	Fitting - Grease	2 1 2
92-0888	Support - Shift, Upper	8 14 1	302-5	Fitting - Grease	2 17 2
92-0889	Link - Shift	10 1 1	302-5	Fitting - Grease	10 25 2
92-0890	Control - Throttle	4 15 1	321-4	Screw - Cap Hex. Hd.	12 8 1
92-0891	Shaft W. A. - Shift	8 16 1	321-4	Screw - Cap Hex. Hd.	3 10 1
92-0894	Spring - Torsion	8 11 1	321-4	Screw - Cap Hex. Hd.	5 11 4
92-0895	Gate - Shift	6 3 1	321-4	Screw - Cap Hex. Hd.	8 12 2
92-0896	Retainer - Spring	8 29 1	321-4	Screw - Cap Hex. Hd.	6 13 2
92-0897	Spacer	11 1 1	321-4	Screw - Cap Hex. Hd.	1 21 2
92-0898	Guide - Belt	11 2 1	322-5	Screw - Cap Hex. Hd.	3 2 1
92-0899	Guide - Belt, Lower	10 21 1	322-5	Screw - Cap Hex. Hd.	11 6 15
92-2493	Spring - Torsion	14 3 1	322-5	Screw - Cap Hex. Hd.	6 6 2
92-7974	Tread - Foot R.H.	1 * 1	322-5	Screw - Cap Hex. Hd.	3 7 2
92-7975	Tread - Foot L.H.	1 15 1	322-5	Screw - Cap Hex. Hd.	8 8 4
92-7982	Decal - Control Panel	5 27 1	322-5	Screw - Cap Hex. Hd.	12 9 6
92-7983	Decal - Deck Engage	4 9 1	322-5	Screw - Cap Hex. Hd.	2 9 8
92-7984	Decal - H.O.C.	4 21 1	322-5	Screw - Cap Hex. Hd.	5 12 2
92-7987	Decal - Recycler	1 3 1	322-5	Screw - Cap Hex. Hd.	1 14 10
92-7988	Decal - Recycler	12 35 1	322-5	Screw - Cap Hex. Hd.	4 16 8
92-7990	Insert - Wheel, Steering	4 4 1	322-6	Screw - Cap Hex. Hd.	12 20 1
92-8916	Bolt - Shoulder	14 8 1	322-7	Screw - Cap Hex. Hd.	9 28 4
93-0231	Screw - Pan Hd.	14 4 4	322-12	Screw - Cap Hex. Hd.	11 10 4
93-1192	Decal - Engine	9 37 1	322-14	Screw - Cap Hex. Hd.	11 11 2
93-1194	Decal - L.H.	5 10 1	322-50	Screw - Cap Hex. Hd.	11 4 1
93-3190	Boot - Terminal	6 25 1	323-9	Screw - Cap Hex. Hd.	9 32 1
93-6668	Decal - Battery Charging	8 38 1	323-9	Screw - Hex Hd. Cap	11 21 2
93-7006	Decal - Instructions	4 23 1	323-14	Screw - Hex Hd. Cap	11 17 2
93-7007	Decal - Shift Pattern	6 2 1	325-6	Screw - Cap Hex. Hd.	2 8 1
93-7008	Decal - Brake, Parking	1 9 1	329-4	Screw - Cap Hex. Hd.	10 3 1
93-7009	Decal - Deflector Danger	14 5 1	3218-1	Nut - Jam	6 18 3
93-7010	Decal - Danger	14 7 1	3219-7	Nut - Hex. Hd.	12 23 1
93-7010	Decal - Danger	12 34 1	3220-2	Nut - Hex. Jam	2 7 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3229-1	Bolt - Carriage	13	60	2	3296-8	Nut - Lock	2	12	1
3230-18	Bolt - Carriage	2	32	2	3296-8	Nut - Lock	5	23	1
3253-3	Washer - Lock	10	2	1	3296-8	Nut - Lock	8	36	1
3253-3	Washer - Lock	6	16	2	3296-8	Nut - Lock	12	46	1
3253-3	Washer - Lock	9	18	2	3296-16	Nut - Lock	13	62	2
3253-6	Washer - Lock	9	26	1	3296-29	Nut - Lock	5	1	7
3254-2	Washer - Lock, Int. Tooth	9	5	3	3296-29	Nut - Lock	1	2	14
3254-2	Washer - Lock, Int. Tooth	10	20	1	3296-29	Nut - Lock	11	3	17
3254-5	Washer - Lock, Int. Tooth	4	8	1	3296-29	Nut - Lock	3	4	3
3256-1	Washer - Flat	13	61	2	3296-29	Nut - Lock	6	5	2
3256-14	Washer - Flat	6	9	1	3296-29	Nut - Lock	9	6	2
3256-22	Washer - Flat	8	13	2	3296-29	Nut - Lock	2	10	8
3256-22	Washer - Flat	1	18	2	3296-29	Nut - Lock	10	19	1
3256-22	Washer - Flat	9	30	1	3296-29	Nut - Lock	12	19	24
3256-23	Washer - Flat	11	7	12	3296-29	Nut - Lock	4	19	4
3256-23	Washer - Flat	6	7	2	3296-29	Nut - Lock	8	32	4
3256-23	Washer - Flat	1	13	8	3296-39	Nut - Lock	9	3	1
3256-23	Washer - Flat	5	17	4	3296-39	Nut - Lock	11	19	4
3256-23	Washer - Flat	4	18	7	3296-39	Nut - Lock	12	31	2
3256-23	Washer - Flat	2	23	6	3296-42	Nut - Lock	14	1	1
3256-23	Washer - Flat	12	27	4	3296-42	Nut - Lock	6	15	2
3256-23	Washer - Flat	8	33	2	3296-42	Nut - Lock	8	15	2
3256-24	Washer - Flat	1	11	1	3296-42	Nut - Lock	1	17	2
3256-24	Washer - Flat	11	15	4	3296-42	Nut - Lock	5	18	4
3256-24	Washer - Flat	9	33	1	3296-47	Nut - Lock	11	12	1
3256-25	Washer - Flat	9	25	1	3296-59	Nut - Lock	12	15	1
3256-26	Washer - Flat	5	25	2	32103-2	Nut - Wing	12	18	1
3256-27	Washer - Flat	3	13	3	32103-12	Nut - Wing	8	20	1
3256-35	Washer - Flat	1	1	4	32103-22	Nut - Wing	8	23	2
3256-49	Washer - Flat	13	56	1	32104-76	Screw - Self Tap Acorn Hd.	1	5	9
3256-57	Washer - Flat	9	36	1	32104-76	Screw - Self-Tapping	4	14	2
3256-58	Washer - Fender	14	2	1	32107-11	Nut - Square	9	17	2
3257-23	Key	10	6	1	32120-47	Ring - Retaining	8	7	1
3272-6	Pin - Cotter	3	1	3	32120-64	Ring - Retaining	10	5	1
3272-6	Pin - Cotter	5	4	2	32121-9	Pin - Roll	2	28	1
3272-6	Pin - Cotter	1	12	1	32121-16	Pin - Roll	8	17	1
3272-6	Pin - Cotter	2	14	2	32121-25	Pin - Roll	8	3	1
3272-6	Pin - Cotter	10	22	1	32121-78	Pin - Roll	4	3	1
3272-6	Pin - Cotter	9	31	1	32121-78	Pin - Roll	8	9	1
3272-6	Pin - Cotter	12	36	2	32122-14	Screw - Truss, Phillips Hd.	12	38	8
3272-12	Pin - Cotter	2	45	2	32128-20	Nut - Flange Hd.	7	5	4
3272-16	Pin - Cotter	10	9	1	32128-21	Nut - Lock, Flange Hd.	2	25	1
3274-51	Screw - Hex. Socket Hd.	9	19	2	32128-23	Nut - Lock, Flange Hd.	2	26	1
3290-134	Screw - Machine	6	10	1	32144-4	Screw - Special	2	21	2
3290-191	Nut - Speed	6	23	2	32144-14	Screw	9	12	2
3290-282	Rivet	12	7	2	32144-14	Screw - Thread Forming	2	38	2
3290-282	Rivet	13	53	2	32144-112	Screw - Sems	6	22	2
3290-307	Pin - Cotter, Hair	7	9	1	32151-48	Ring - Retaining	10	13	2
3290-354	Nut - Double	6	20	1	32151-48	Ring - Retaining, External	2	35	2
3290-354	Nut - Double	4	22	1	32151-61	Ring - Retaining	5	14	2
3290-378	Tie - Cable	7	6	1					
3290-378	Tie - Cable	4	26	1					
3290-413	Washer - Belleville	5	7	8					
3290-465	Washer - Belleville	13	57	1					
3290-496	Nut - Retainer	12	28	4					
3296-2	Nut - Lock	6	19	1					
3296-4	Nut - Lock	8	30	1					
3296-4	Nut - Lock	2	36	4					

OPTIONAL EQUIPMENT

Easy Empty Bagging Kit Model No. 79095
Twin Bag Bagger Kit Model No. 79085
Tire Chains Part No. 23-2340
Wet Grass Bagging Kit Part No. 38-5730