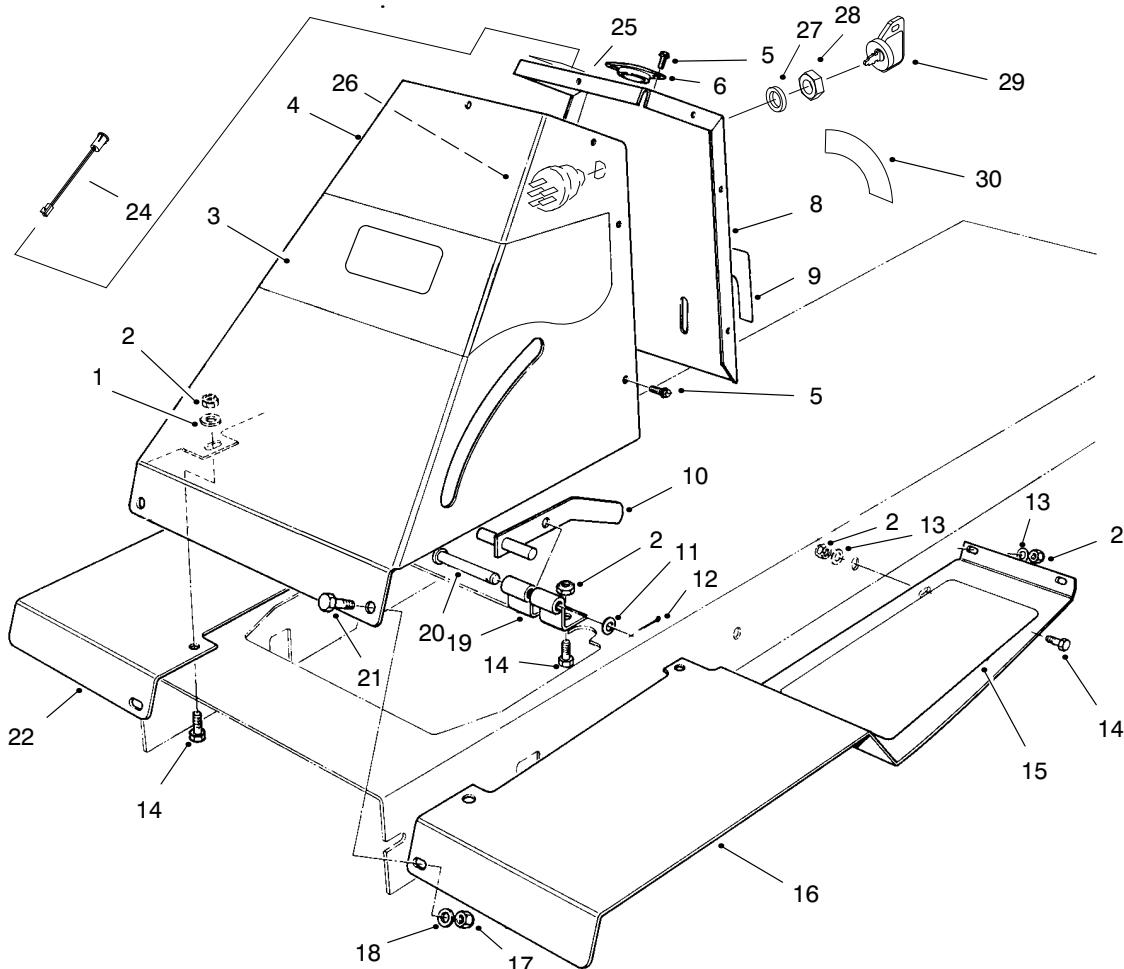


TORO®

MODEL NO. 70171-9900001 & UP

PARTS
CATALOG**WHEEL HORSE®**
1232 RIDING MOWER

C-1933A

FRONT TOWER ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3256-35	Washer - Flat	4	17	3296-42	Nut - Lock	2
2	3296-29	Nut - Lock	14	18	3256-22	Washer - Flat	2
3	98-2384	Decal - Recycler	1	19	47-2060-03	Bracket - Brake, Parking	1
4	56-7130-01	Tower - Front	1	20	283-52	Pin - Clevis	1
5	32104-76	Screw - Self Tap Acorn Hd.	9	21	321-4	Screw - Cap Hex. Hd.	2
6	56-7170	Guide - Shaft, Steering	1	22	47-0930	Footrest - R.H.	1
8	99-2965-03	Tower - Rear	1	24	95-7652	Light - Indicator	1
9	93-7008	Decal - Brake, Parking	1	25	99-2982	Decal - Indicator Light	1
10	47-1290-03	Brake - Parking	1	26	88-9830	Switch - Ignition	1
11	3256-24	Washer - Flat	1	27	3253-5	Washer - Lock Int.	1
12	3272-6	Pin - Cotter	1	28	218-461	Nut - Lock	1
13	3256-23	Washer - Flat	8	29	63-8360	Key - Ignition	1
14	322-5	Screw - Cap Hex. Hd.	10	30	99-6825	Decal - Ignition	1
15	92-7975	Tread - Foot L.H.	1	*	12-8829	Loose Parts	1
*	92-7974	Tread - Foot R.H.	1	*	12-8819	Loose Parts (Includes Steering Wheel)	1
16	47-0940	Footrest - L.H.	1				

*Not Illustrated

© The TORO Company -1999

All Rights Reserved

TPS

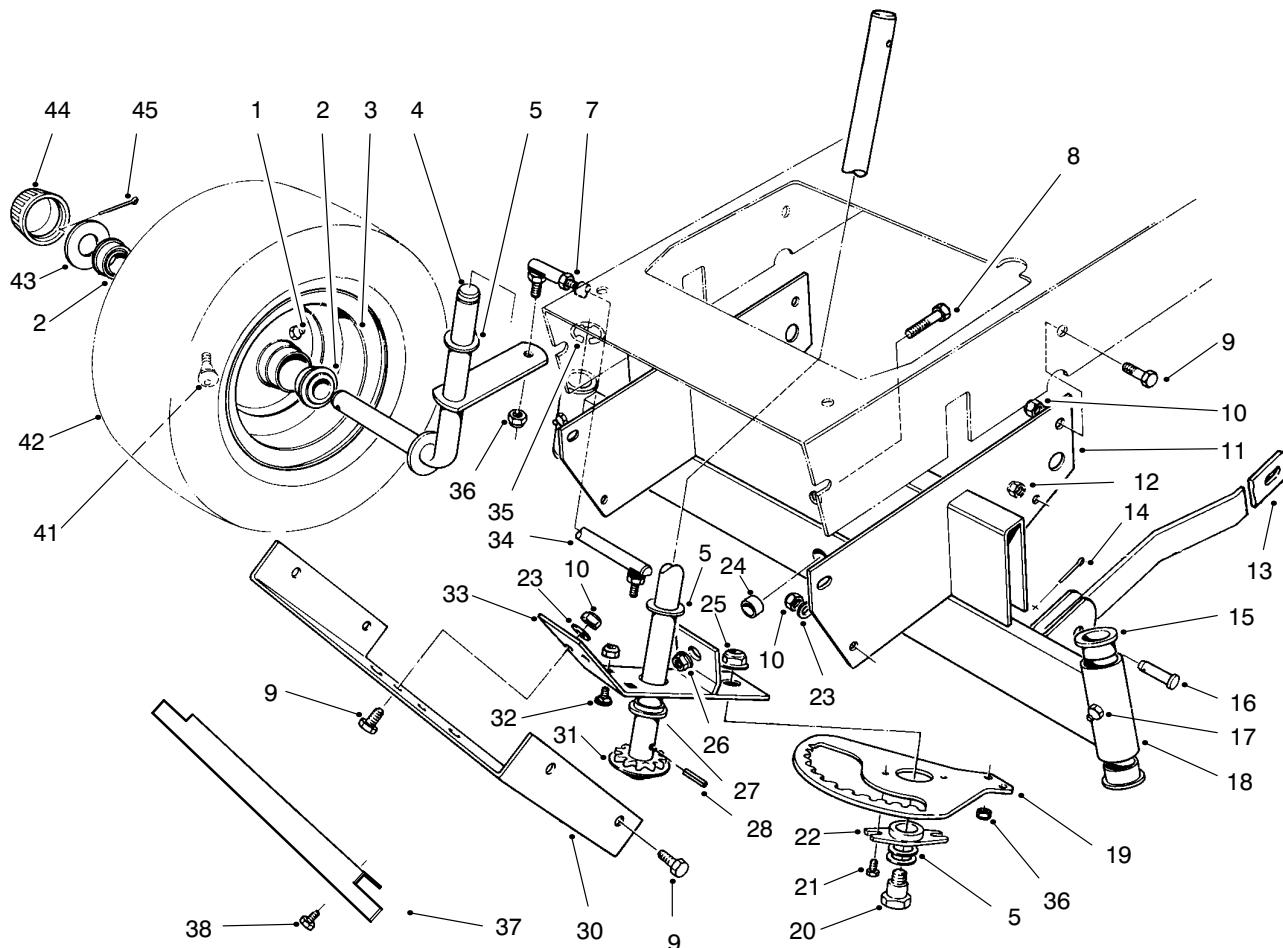

C-0438C


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	2
2	110513	Bearing	4
3	217-80	Rim	2
4	47-0600-01	Spindle - R.H.	1
* 47-0590-01		Spindle - L.H.	1
5	3-6498	Washer - Thrust	5
7	3220-2	Nut - Hex. Jam	1
8	325-6	Screw - Cap Hex. Hd.	1
9	322-5	Screw - Cap Hex. Hd.	8
10	3296-29	Nut - Lock	8
11	47-0760-01	Support - Axle, Front	1
12	3296-8	Nut - Lock	1
13	47-0010-01	Arm - Suspension, Front	2
14	3272-6	Pin - Cotter	2
15	27-9080	Bearing - Flange	4
16	283-2	Pin - Clevis	2
17	302-5	Fitting - Grease	2
18	80-2430	Axle - Front (Incl. Ref. #15 & 17)	1
19	80-2450-03	Rack - Steering	1
20	56-7530	Bolt - Shoulder	1
21	32144-4	Screw - Special	2
22	56-7520	Bushing - Sector	1
23	3256-23	Washer - Flat	6

Ref. No.	Part No.	Description	No. Used
24	28-0380	Spacer - Axle, Front	1
25	32128-21	Nut - Lock, Flange Hd.	1
26	32128-23	Nut - Lock, Flange Hd.	1
27	47-0700	Bearing - Flange	1
28	32121-9	Pin - Roll	1
30	56-7180-01	Cover - Front	1
31	56-7500	Shaft - Steering	1
32	3230-18	Bolt - Carriage	2
33	56-7470	Bracket - Rack, Steering (Incl. Ref. #27)	1
34	47-0610	Tie Rod - Adjustable (Incl. Ref. #7)	1
*	80-2460	Tie Rod - Fixed	1
35	32151-48	Ring - Retaining, External	2
36	3296-4	Nut - Lock	4
37	92-0876-01	Guard - Front	1
38	32144-14	Screw - Thread Forming	2
41	232-27	Valve Stem w/Cap	2
42	99-2990	Tire	2
43	28-2480	Washer	2
44	61-9780	Cap - Hub	2
45	3272-12	Pin - Cotter	2
†	232-44	Tube - Inner	2

*Not Illustrated


†Service Replacement Part

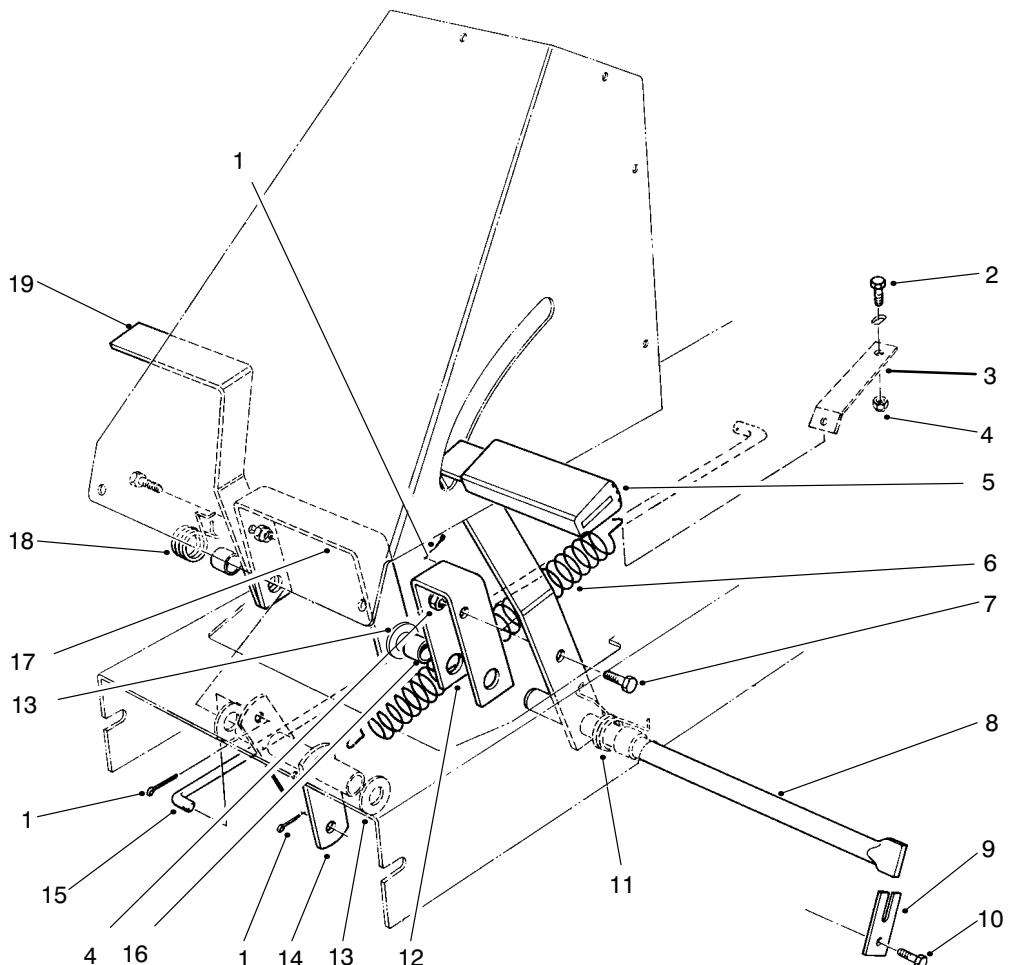

C-0439A

BRAKE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	3	11	56-7070	Spring - Torsion, Clutch	1
2	322-5	Screw - Cap Hex. Hd.	1	12	47-0560-03	Bracket - Clutch, Pedal	1
3	56-7240	Bracket - Retaining, Spring	1	13	3256-27	Washer - Flat	3
4	3296-29	Nut - Lock	3	14	56-7650-03	Tube - Pivot	1
5	65-2920	Pad - Pedal, Foot	2	15	56-7570	Rod - Engagement	1
6	62-3930	Spring - Extension	1	16	47-0570	Spacer - Pedal	3
7	322-5	Screw - Cap Hex. Hd.	2	17	47-0550-03	Bracket - Brake, Pedal	1
8	47-0770	Shaft - Pivot, Pedal	1	18	56-7080	Spring - Torsion, Brake	1
9	47-0780	Retainer - Shaft	1	19	47-0540-03	Pedal	2
10	321-4	Screw - Cap Hex. Hd.	1				

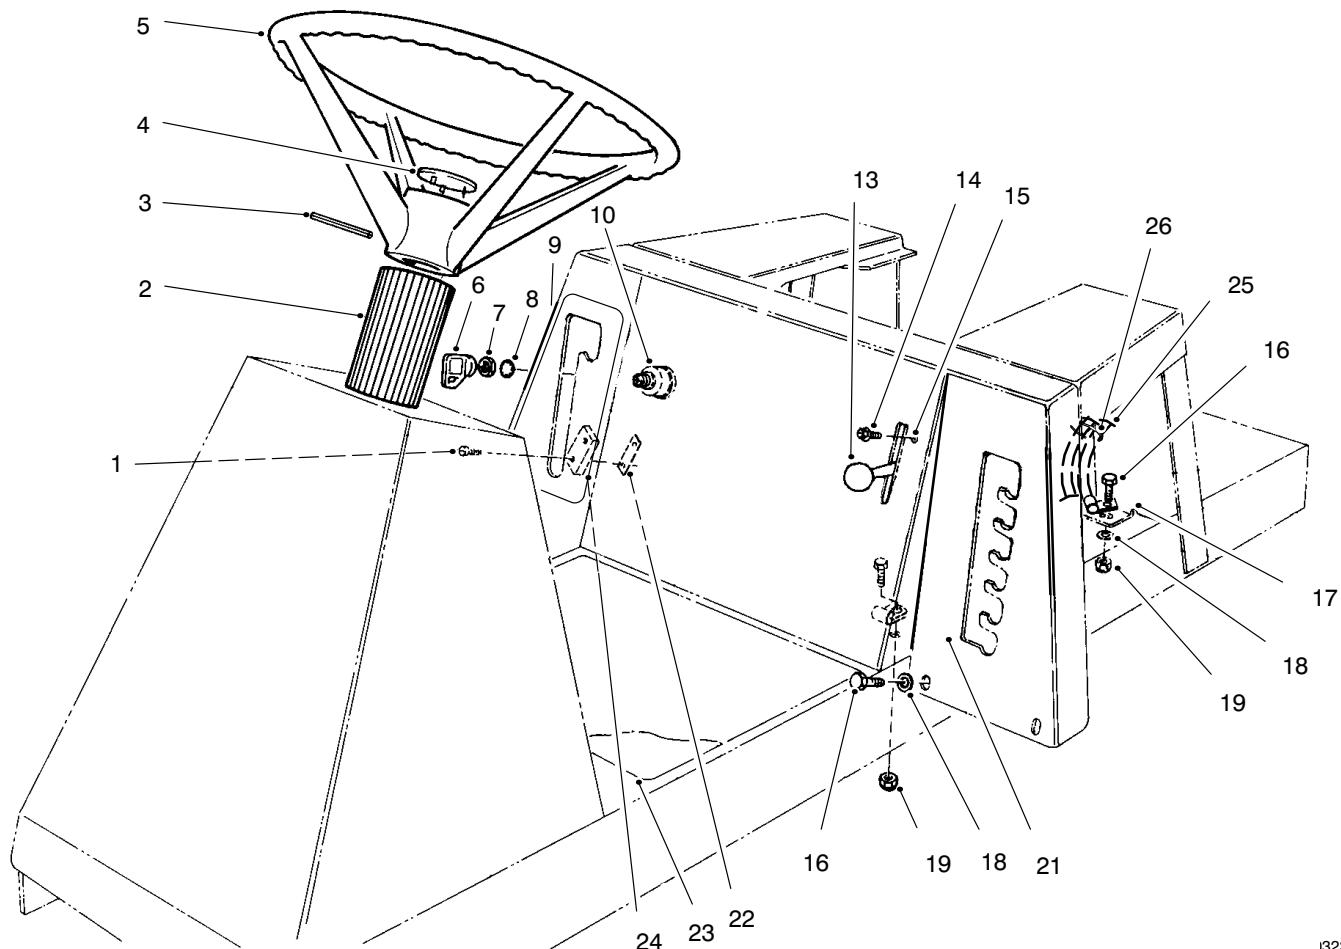


1323

STEERING WHEEL, SWITCHES & DECALS

Ref. No.	Part No.	Description	No. Used
1	95-3003	Screw - Phillips Head	2
2	66-6740	Cover - Shaft, Steering	1
3	32121-78	Pin - Roll	1
4	92-7990	Insert - Wheel, Steering	1
5	49-3242	Assy. - Wheel, Steering (Incl. Ref. #4)	1
6	63-8360	Key	1
7	218-461	Nut - Lock	1
8	3254-5	Washer - Lock, Int. Tooth	1
9	92-7983	Decal - Deck Engage	1
10	46-5780	Switch - Ignition (Incl. Ref. #6-8)	1
13	233-25	Knob	1


Ref. No.	Part No.	Description	No. Used
14	32104-76	Screw - Self-Tapping	2
15	92-0890	Control - Throttle (Incl. Ref. #13)	1
16	322-5	Screw - Cap Hex. Hd.	8
17	8830	Clamp	2
18	3256-23	Washer - Flat	7
19	3296-29	Nut - Lock	4
21	92-7984	Decal - H.O.C.	1
22	3290-354	Nut - Double	1
23	93-7006	Decal - Instructions	1
24	88-9932	Switch - Micro	1
25	54-3090	Wire Assembly	1
26	3290-378	Tie - Cable	1

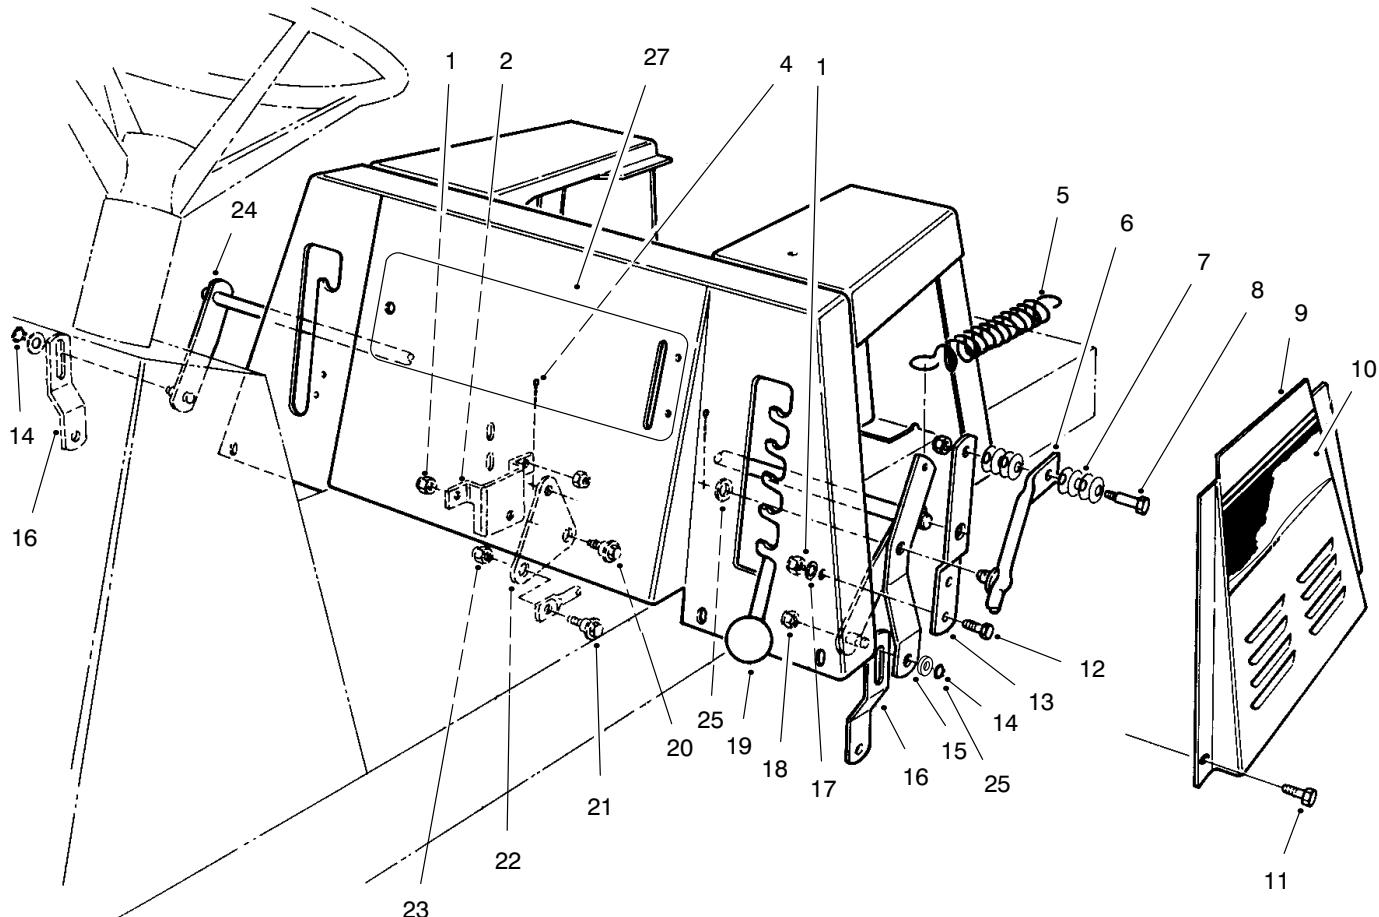

C-1935B

LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	7	15	80-2321	Bracket - H.O.C., Engage	1
2	80-2310	Bracket - Bell Crank Mount	1	16	63-5830-01	Link - Suspension, Deck	2
4	3272-6	Pin - Cotter	2	17	3256-23	Washer - Flat	4
5	62-3930	Spring - Extension	1	18	3296-42	Nut - Lock	4
6	47-1850-03	Lever - Height-of-Cut	1	19	233-48	Knob	1
7	3290-413	Washer - Belleville	8	20	19-1470	Bolt - Shoulder	1
8	28-0540	Bolt - Shoulder	1	21	65-5670	Bolt - Shoulder	1
9	92-0878-01	Panel L.H. - Base, Seat	1	22	80-2360	Crank - Bell, Deck Engage	1
10	98-1454	Decal - L.H.	1	23	3296-8	Nut - Lock	1
11	321-4	Screw - Cap Hex. Hd.	4	24	56-7400-03	Arm - Lever, H.O.C.	1
12	322-5	Screw - Cap Hex. Hd.	2	25	3256-26	Washer - Flat	2
13	47-1840-01	Bracket - Height-of-Cut	1	27	99-2980	Decal - Control Panel	1
14	32151-61	Ring - Retaining	2				

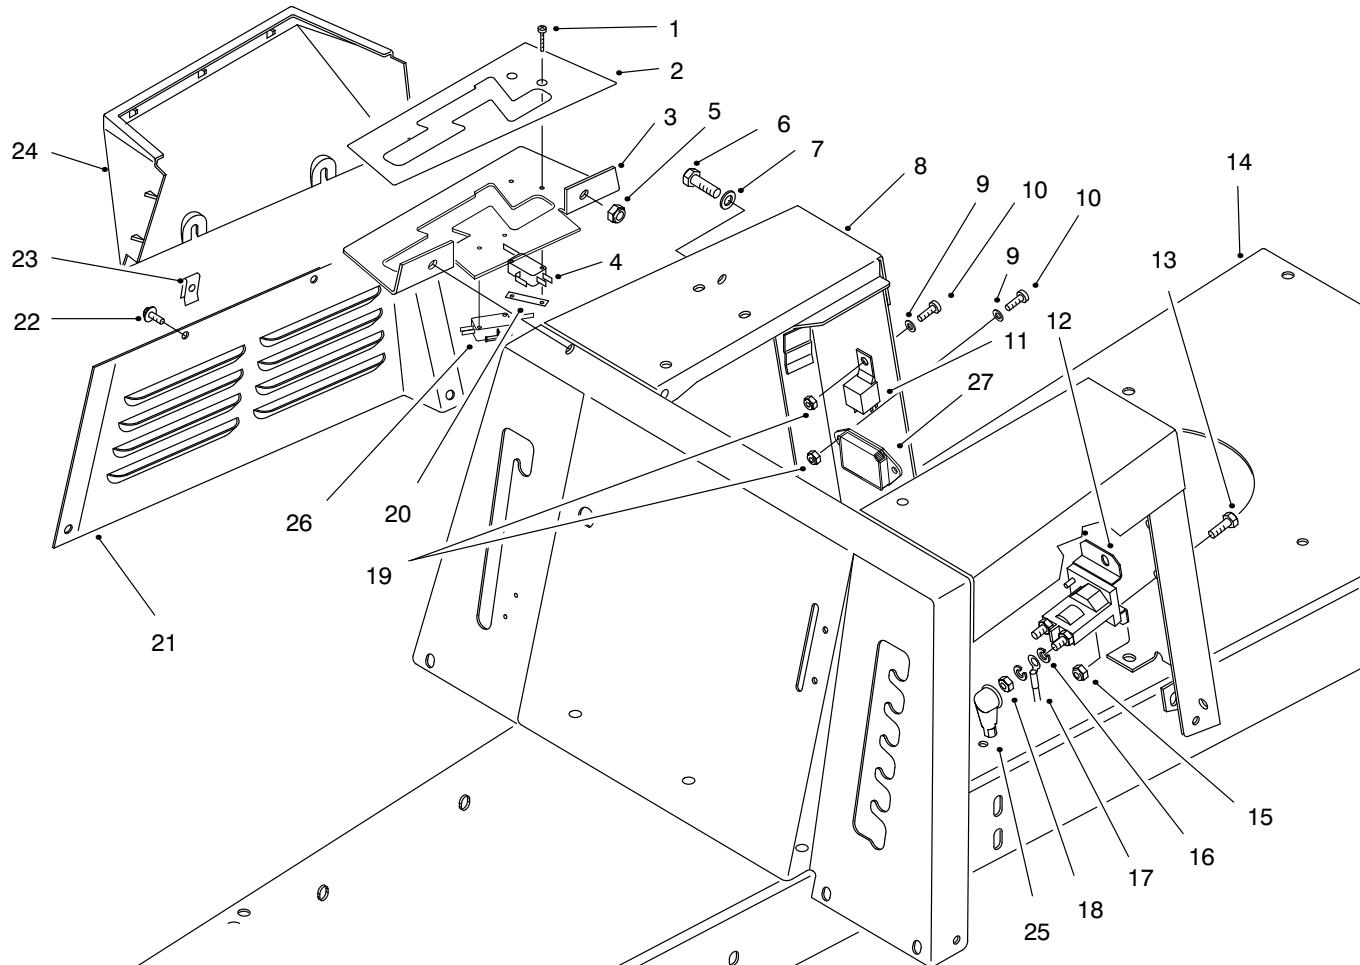


C-1587A

SEAT BODY & SIDE PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	147665	Screw - Phillips Hd.	2
2	93-7007	Decal - Shift Pattern	1
3	99-2969-03	Gate - Shift	1
4	88-9930	Switch - Micro, Short	1
5	3296-29	Nut - Lock	2
6	322-5	Screw - Cap Hex. Hd.	2
7	3256-23	Washer - Flat	2
8	99-2967-01	Body W.A. - Seat Support	1
9	3256-14	Washer - Flat	6
10	3290-134	Screw - Machine	3
11	98-7249	Relay - Safety	1
12	47-1910	Solenoid	1
13	321-4	Screw - Cap Hex. Hd.	2
14	99-2962-01	Frame	1


Ref. No.	Part No.	Description	No. Used
15	3296-42	Nut - Lock	2
16	3253-3	Washer - Lock	2
17	56-7670	Cable - Positive	1
18	3218-1	Nut - Jam	3
19	3296-2	Nut - Lock	3
20	3290-354	Nut - Double	2
21	92-0877-01	Panel - Seat Base, R.H.	1
22	32144-112	Screw - Sems	2
23	3290-191	Nut - Speed	2
24	88-9800	Cover - Gate, Shift	1
25	93-3190	Boot - Terminal	1
26	88-9931	Switch - Micro	1
27	99-3700	Module - NMIR	1

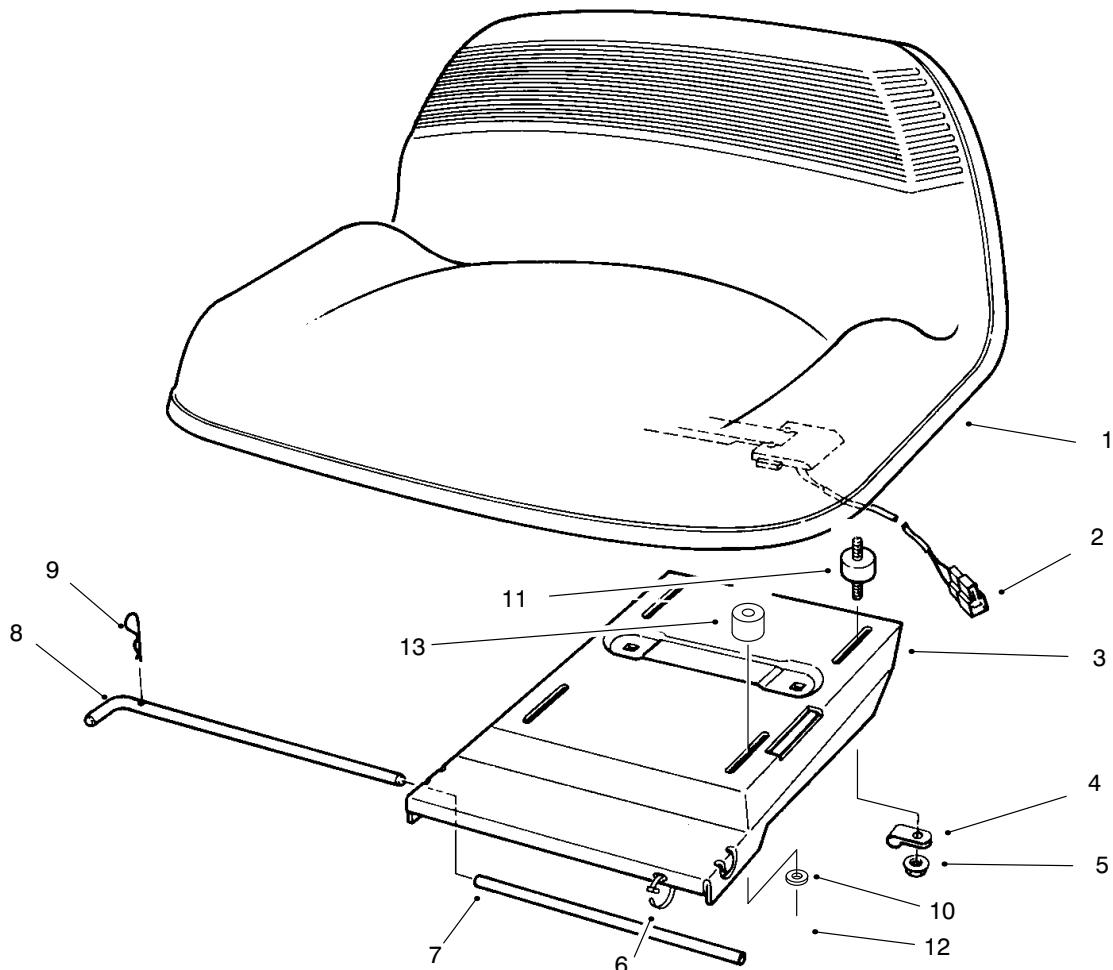

C-0745A

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-3950	Assembly - Seat	1	8	80-2620	Rod - Base, Seat	1
2	38-1420	Switch - Interlock	1	9	3290-307	Pin - Cotter, Hair	1
3	63-5540-01	Base - Seat	1	10	3256-23	Washer - Flat	2
4	2412-68	Clamp - Wire	1	11	62-5480	Isolator - Seat	2
5	32128-20	Nut - Flange Hd.	2	12	322-7	Screw - Hex Hd.	2
6	3290-378	Tie - Cable	1	13	92-5791	Spacer	2
7	63-5670	Tube - Bumper, Seat Rod	1				

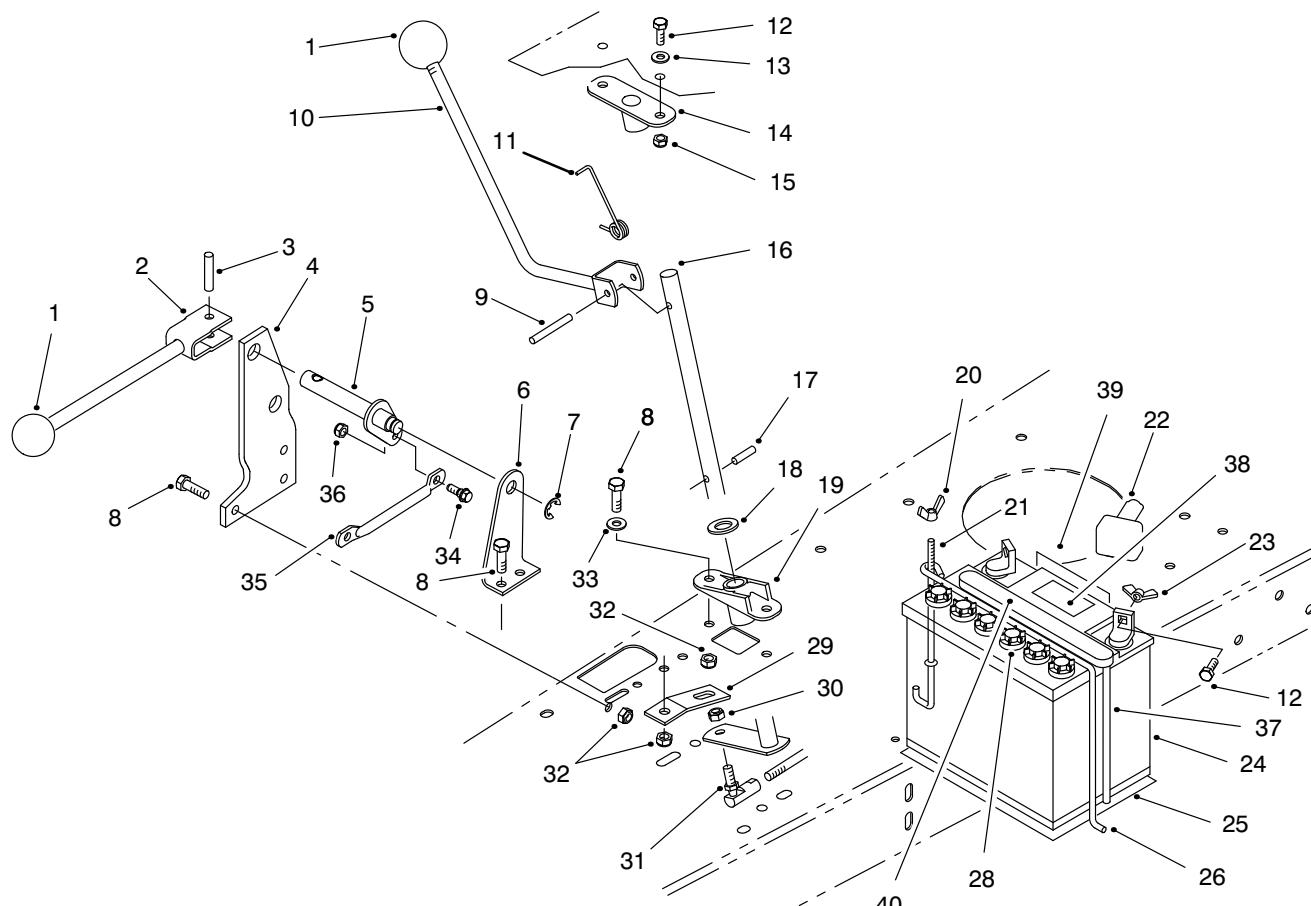


C-1601A

TRANSMISSION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-48	Knob	2
2	80-2400-03	Lever W.A. - Engage	1
3	32121-25	Pin - Roll	1
4	80-2350-03	Pivot - Outer	1
5	80-2370-03	Shaft W.A. - Pivot	1
6	80-2340-03	Bracket - Pivot, Inner	1
7	32120-47	Ring - Retaining	1
8	322-5	Screw - Cap Hex. Hd.	4
9	32121-78	Pin - Roll	1
10	92-0884-03	Lever W.A. - Shaft	1
11	92-0894	Spring - Torsion	1
12	321-4	Screw - Cap Hex. Hd.	2
13	3256-22	Washer - Flat	2
14	92-0888	Support - Shift, Upper	1
15	3296-42	Nut - Lock	2
16	92-0891	Shaft W. A. - Shift	1
17	32121-16	Pin - Roll	1
18	257-11	Washer	1
19	92-0887	Support - Shift, Lower	1
20	32103-12	Nut - Wing	1
21	56-7720	Post - Battery	1

Ref. No.	Part No.	Description	No. Used
22	109553	Boot - Terminal	1
23	32103-22	Nut - Wing	2
24	80-2600	Battery - 12 Volt (Incl. Ref. #28 & 37)	1
25	62-4300	Pad - Battery	1
26	56-7710	Hold Down - Battery	1
28	218-560	Cap - Battery	6
29	92-0896	Retainer - Spring	1
30	3296-4	Nut - Lock	1
31	2411-32	Ball Joint	1
32	3296-29	Nut - Lock	4
33	3256-23	Washer - Flat	2
34	65-5670	Screw - Shoulder	1
35	80-2330	Link - Bell Crank	1
36	3296-8	Nut - Lock	1
37	56-2540	Tube - Vent, Battery	1
38	93-6668	Decal - Battery Charging Instructions	1
39	93-7276	Decal - Danger	1
40	93-9354	Decal - Battery	1

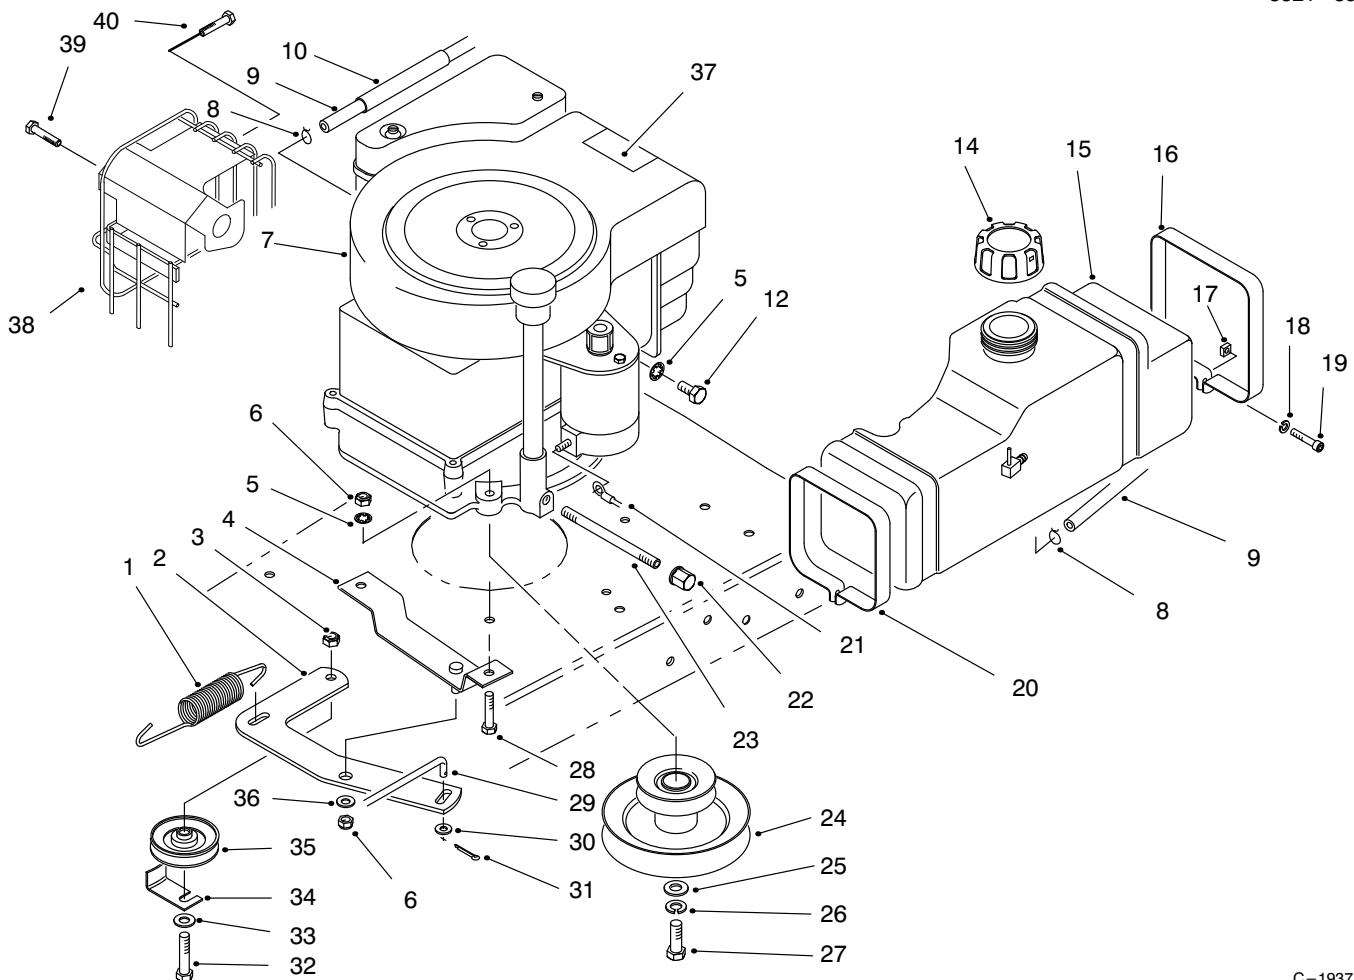


C-1937A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0879	Spring	1	23	289-19	Nipple - Pipe	1
2	92-0883-03	Plate - Mounting, Idler	1	24	92-0873	Pulley - Engine	1
3	3296-39	Nut - Lock	1	25	3256-25	Washer - Flat	1
4	92-0881-03	Bracket W.A. - Traction	1	26	3253-6	Washer - Lock	1
5	3254-2	Washer - Lock, Int. Tooth	3	27	62-3760	Screw - Cap Hex. Hd.	1
6	3296-29	Nut - Lock	2	28	322-7	Screw - Cap Hex. Hd.	4
7		Engine - 11.5 H.P.	1	29	92-0871	Rod - Traction	1
8	2412-98	Clamp - Hose	2	30	3256-22	Washer - Flat	1
9	47-2961	Hose - Fuel Line	1	31	3272-6	Pin - Cotter	1
10	62-5490	Support - Fuel Line	1	32	323-9	Screw - Cap Hex. Hd.	1
12	32144-14	Screw	2	33	3256-24	Washer - Flat	1
14	55-3570	Cap - Fuel	1	34	12-9020	Retainer - Belt	1
15	56-7050	Tank - Fuel	1	35	12-5820	Pulley - Idler	1
16	57-4060-03	Retainer - Front	1	36	3256-57	Washer - Flat	1
17	32107-11	Nut - Square	2	37	98-0745	Decal - Engine	1
18	3253-3	Washer - Lock	2	38	93-7446	Guard - Muffler (Incl. Ref. #39 & 40)	1
19	3274-51	Screw - Hex. Socket Hd.	2	39	94-1278	Screw	3
20	57-4070-03	Retainer - Rear	1	40	94-1277	Screw	1
21	56-7670	Cable - Battery, Positive	1	*	88-4490	Reducer - Throttle	1
22	288-10	Cap - Pipe	1				


*Not Illustrated

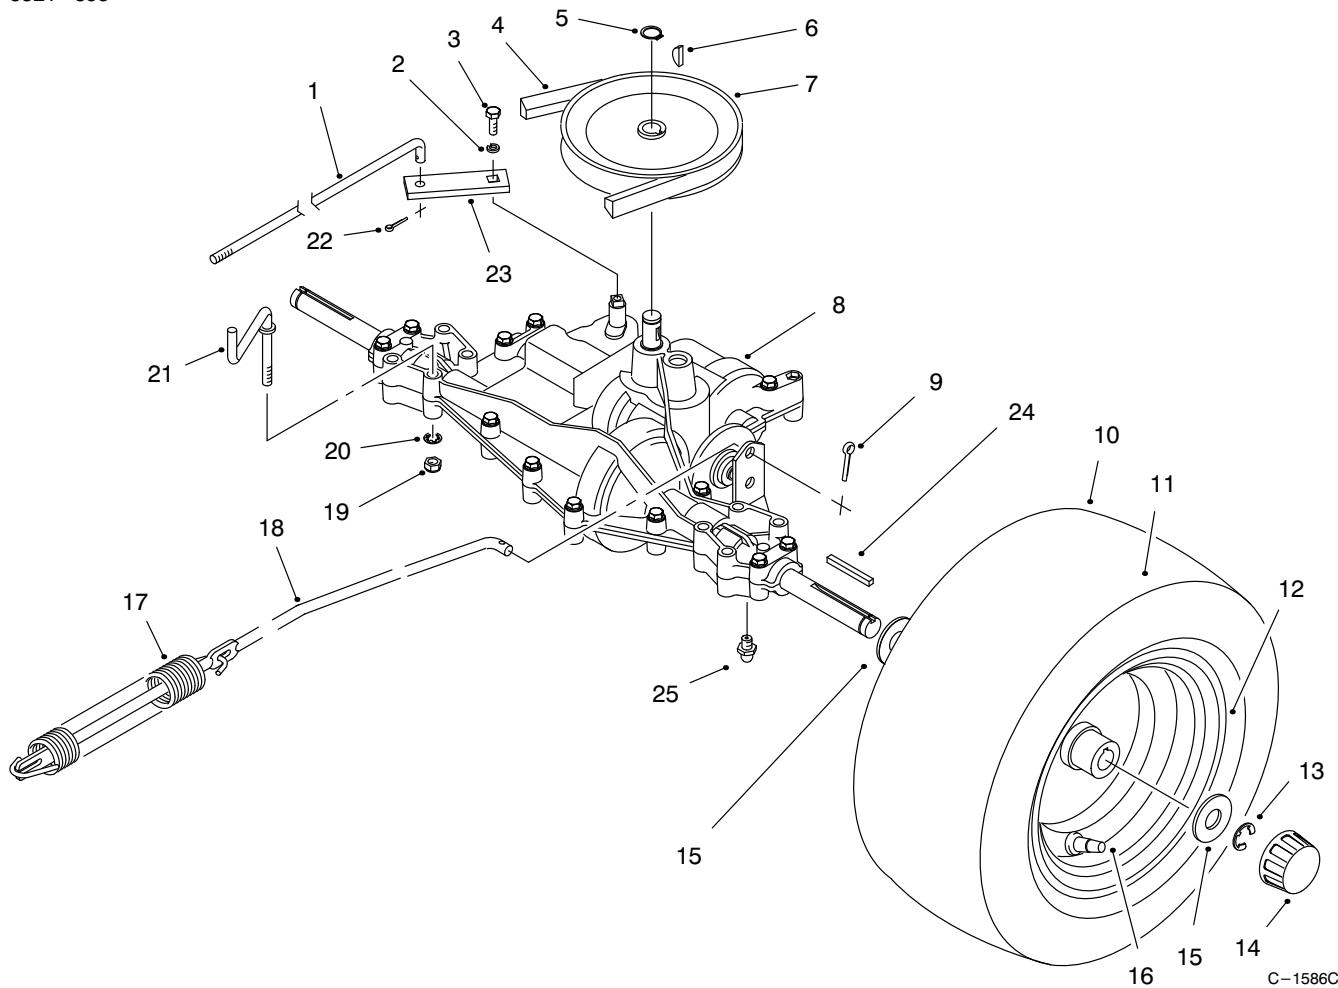

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0889	Link - Shift	1
2	3253-3	Washer - Lock	1
3	329-4	Screw - Cap Hex. Hd.	1
4	92-0870	V-Belt - Traction	1
5	32120-64	Ring - Retaining	1
6	3257-23	Key	1
7	92-0874	Pulley	1
8	92-0862	Transaxle	1
9	3272-16	Pin - Cotter	1
10	99-2988	Tire	2
11	232-39	Tube - Inner	2
12	88-9730	Rim	2
13	32151-48	Ring - Retaining	2

Ref. No.	Part No.	Description	No. Used
14	61-9780	Cap - Hub	2
15	28-2480	Washer	4
16	232-27	Stem - Valve	2
17	57-9940	Spring - Brake	1
18	92-0872	Rod - Brake	1
19	3296-29	Nut - Lock	1
20	3254-2	Washer - Lock, Int. Tooth	1
21	92-0899	Guide - Belt, Lower	1
22	3272-6	Pin - Cotter	1
23	92-0880	Arm - Shift, Transaxle	1
24	7-0036	Key - Square	2
25	302-5	Fitting - Grease	2

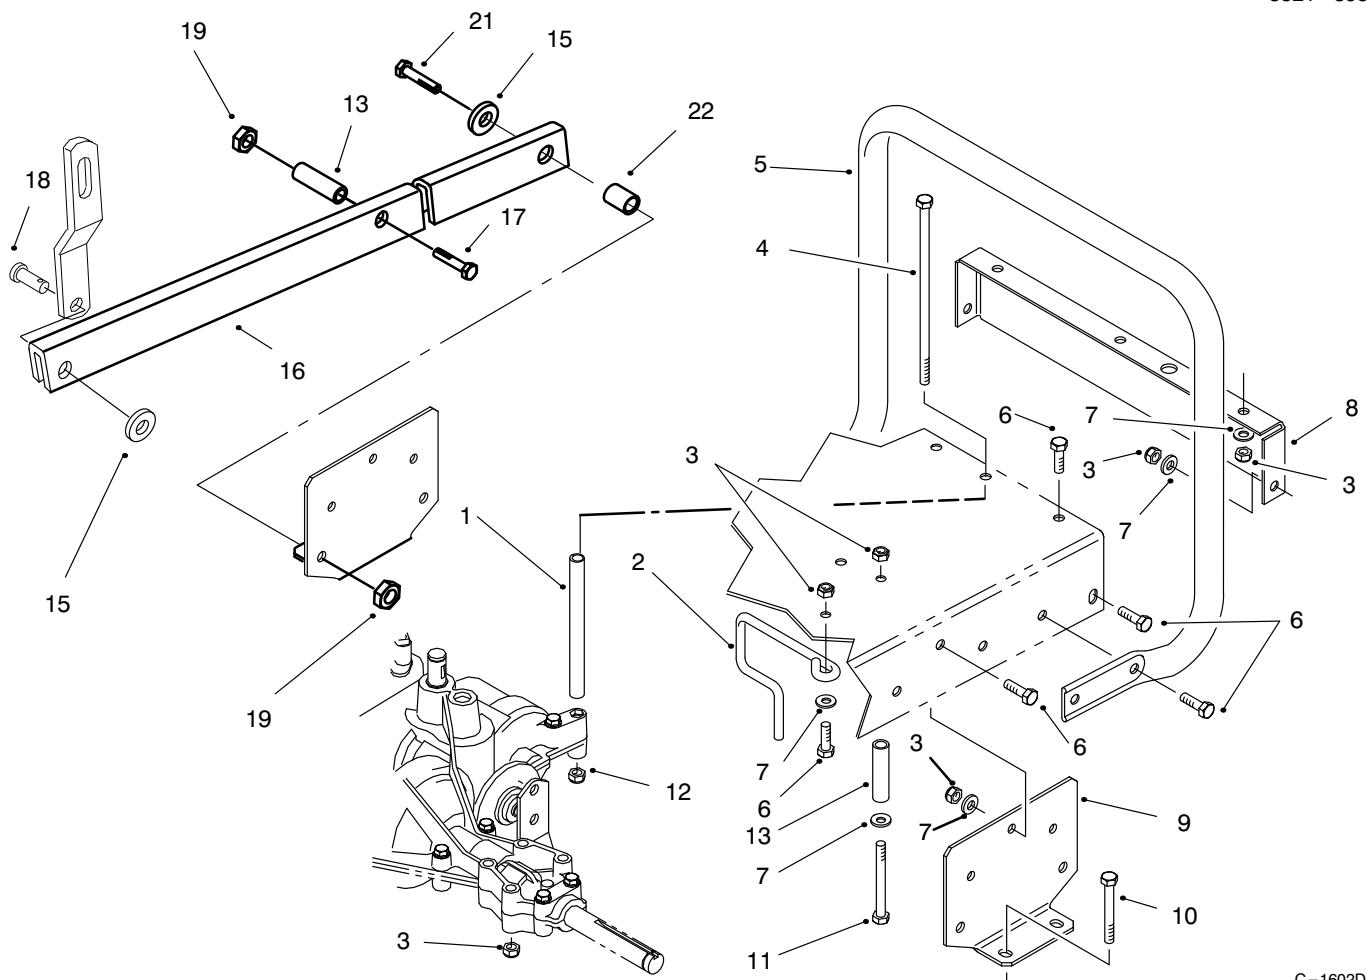


C-1602D

STAND BAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0897	Spacer	1
2	92-0898	Guide - Belt	1
3	3296-29	Nut - Lock	17
4	322-50	Screw - Cap Hex. Hd.	1
5	92-0864-03	Standbar	1
6	322-5	Screw - Cap Hex. Hd.	15
7	3256-23	Washer - Flat	12
8	92-0861-01	Frame - Rear	1
9	92-0865	Support - Axle	2
10	322-12	Screw - Cap Hex. Hd.	4
11	322-14	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
12	3296-47	Nut - Lock	1
13	76-1560	Spacer	4
15	3256-24	Washer - Flat	4
16	76-1540-01	Arm - Suspension R.H.	1
*	76-1550-01	Arm - Suspension L.H.	1
17	323-14	Screw - Hex Hd. Cap	2
18	283-42	Pin - Clevis	2
19	3296-39	Nut - Lock	4
21	323-9	Screw - Hex Hd. Cap	2
22	56-7430	Pin - Support	2


*Not Illustrated

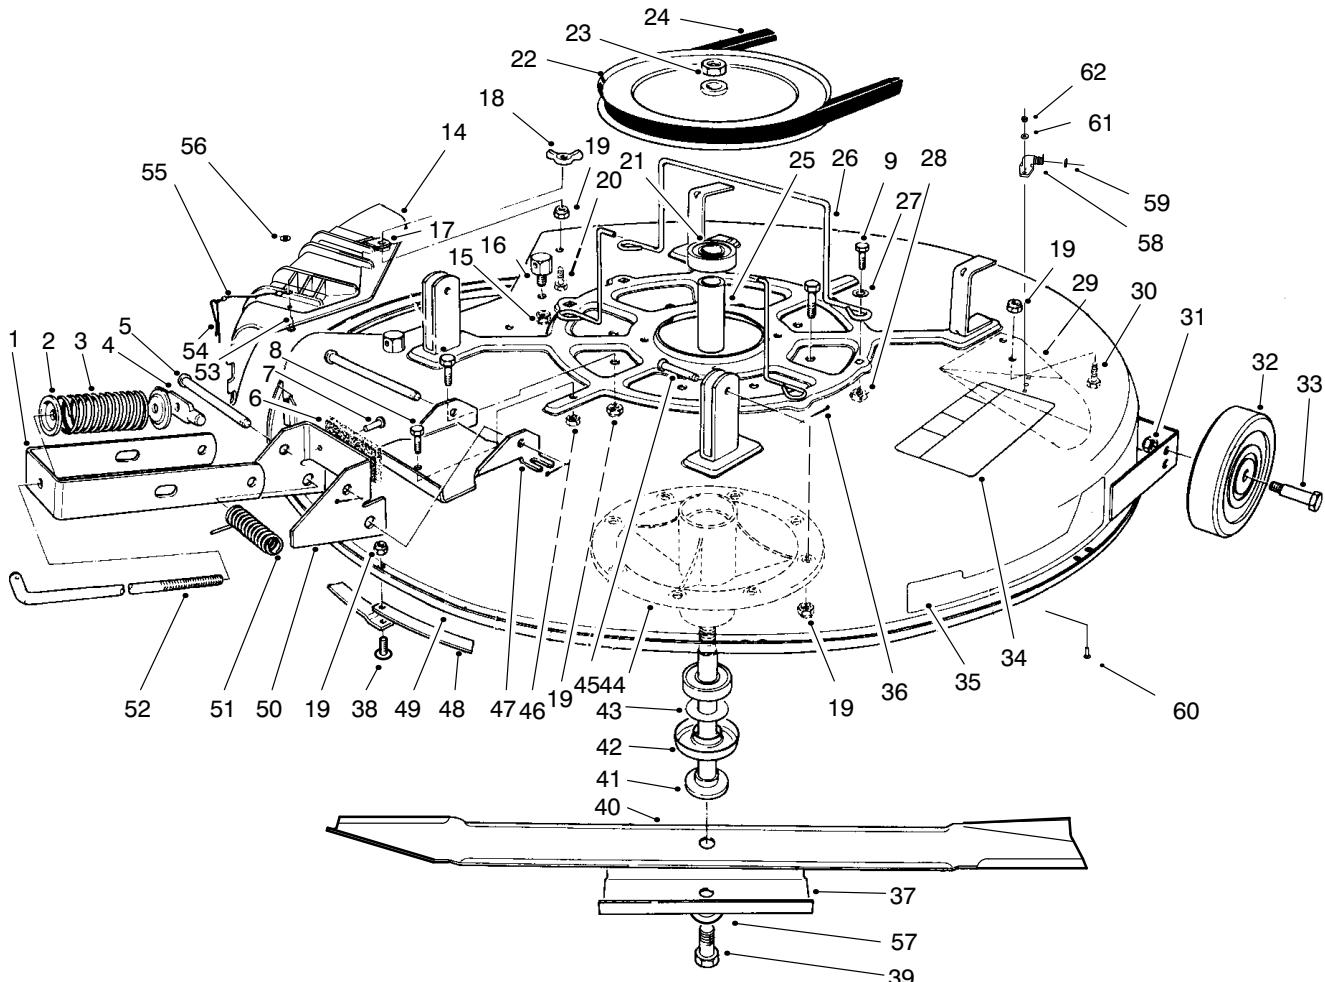

25

MOWER ASSEMBLY – RECYCLER


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	47-1180	Bracket – Engagement	1	32	61-9760	Wheel – Deck	2
2	47-1140	Retainer – Spring, Top	2	33	56-6590	Bolt – Wheel	2
3	47-0960	Spring – Compression	1	34	93-7010	Decal – Danger	1
4	47-1200	Shaft – Adjusting	1	35	92-7988	Decal – Recycler	1
5	80-2570	Pin – Clevis	2	36	3272-6	Pin – Cotter	2
6	80-2550	Pad – Brake	1	37	80-4570	Stiffener – Blade	1
7	3290-282	Rivet	2	38	32122-14	Screw – Truss, Phillips Hd.	8
8	321-4	Screw – Cap Hex. Hd.	1	39	26-0671	Bolt – Blade	1
9	322-5	Screw – Cap Hex. Hd.	6	40	80-4430	Blade – Recycler	1
14	82-6150	Assy. – Cover, Discharge (Incl. Ref. #53-56)	1	41	80-4350	Shaft – Spindle	1
15	3296-59	Nut – Lock	1	42	80-4370	Shield – Bearing	1
16	28-7350	Post – Pivot	1	43	80-4390	Spacer – Hardened	1
17	83-7010	Brace – Cover, Rear	1	44	56-7030	Body – Spindle	1
18	32103-2	Nut – Wing	1	45	283-2	Pin – Clevis	2
19	3296-29	Nut – Lock	24	46	3296-8	Nut – Lock	1
20	322-6	Screw – Cap Hex. Hd.	1	47	80-2560	Plate – Deck, Brake Mtg.	1
21	251-297	Bearing	2	48	80-4490	Ring – Deck	4
22	80-4470	Pulley	1	49	95-7850	Deck Assembly (Incl. Ref. #34 pg.12 & 5 pg. 14)	1
23	3219-7	Nut – Hex. Hd.	1	50	80-2530	Assembly – Brake (Incl. Ref. #6-7)	1
24	92-0875	V-Belt	1	51	40-6230	Spring – Torsion	1
25	83-7020	Spacer – Bearing	1	52	80-2580	Rod – Adjusting	1
26	60-9730	Guide – Belt	2	53	3290-282	Rivet	2
27	3256-23	Washer – Flat	4	54	28-8130	Pin – Chute, Locking	1
28	3290-496	Nut – Retainer	4	55	28-8070	Lanyard	1
29	80-2630	Kicker – 32"	4	56	3256-49	Washer – Flat	1
30	322-3	Screw – Cap Hex. Hd.	13				
31	3296-39	Nut – Lock	2				

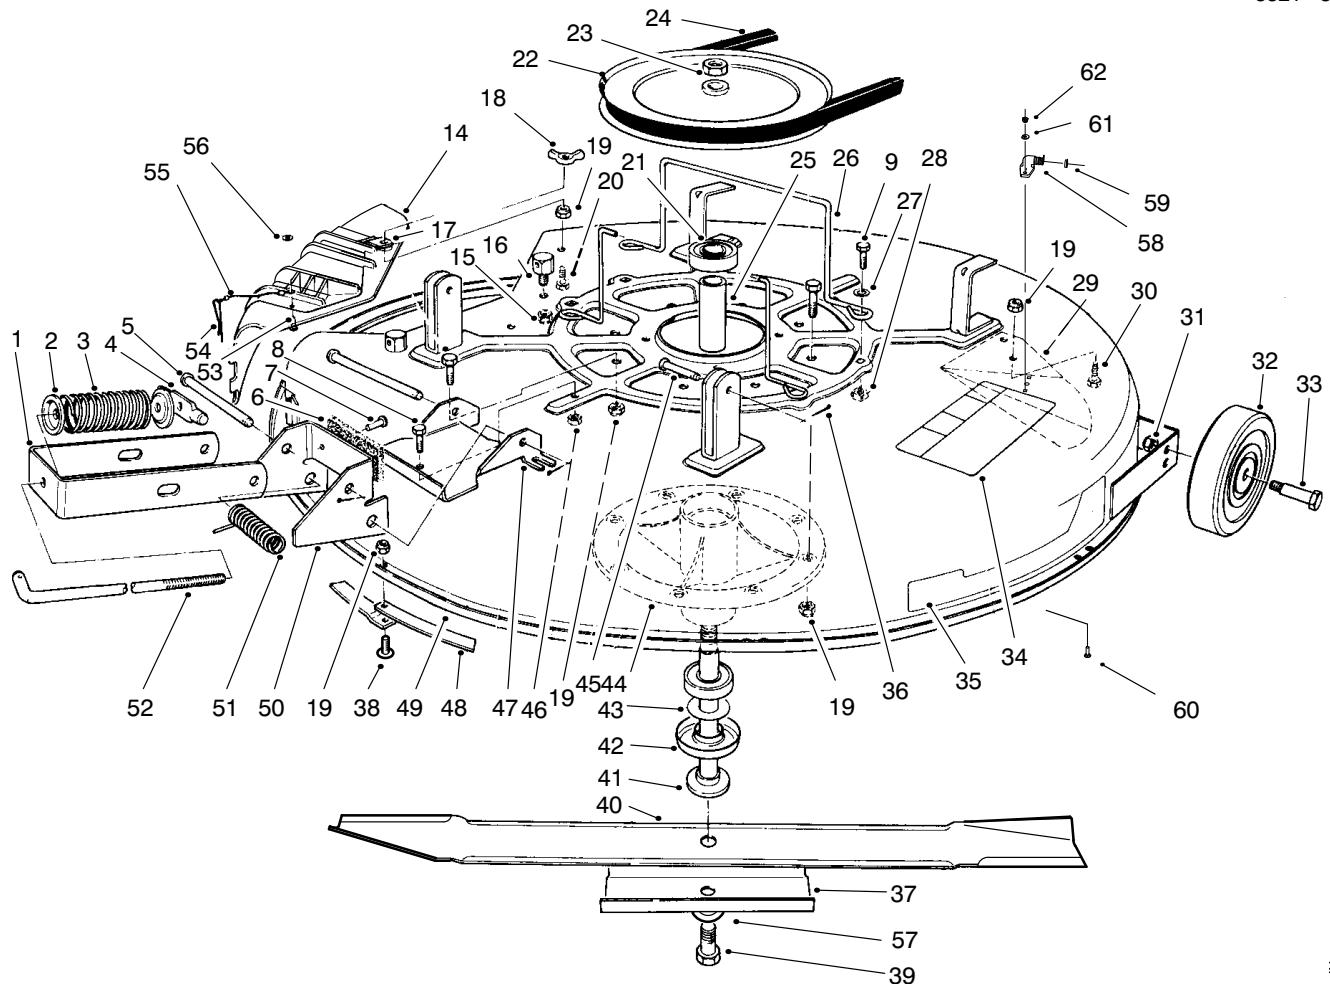

25

MOWER ASSEMBLY – RECYCLER (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
57	3290-465	Washer – Belleville	1	60	3229-1	Bolt – Carriage	2
58	95-2747	Fitting – Washout	1	61	3256-1	Washer – Flat	2
59	46-6290	O-Ring	1	62	3296-16	Nut – Lock	2

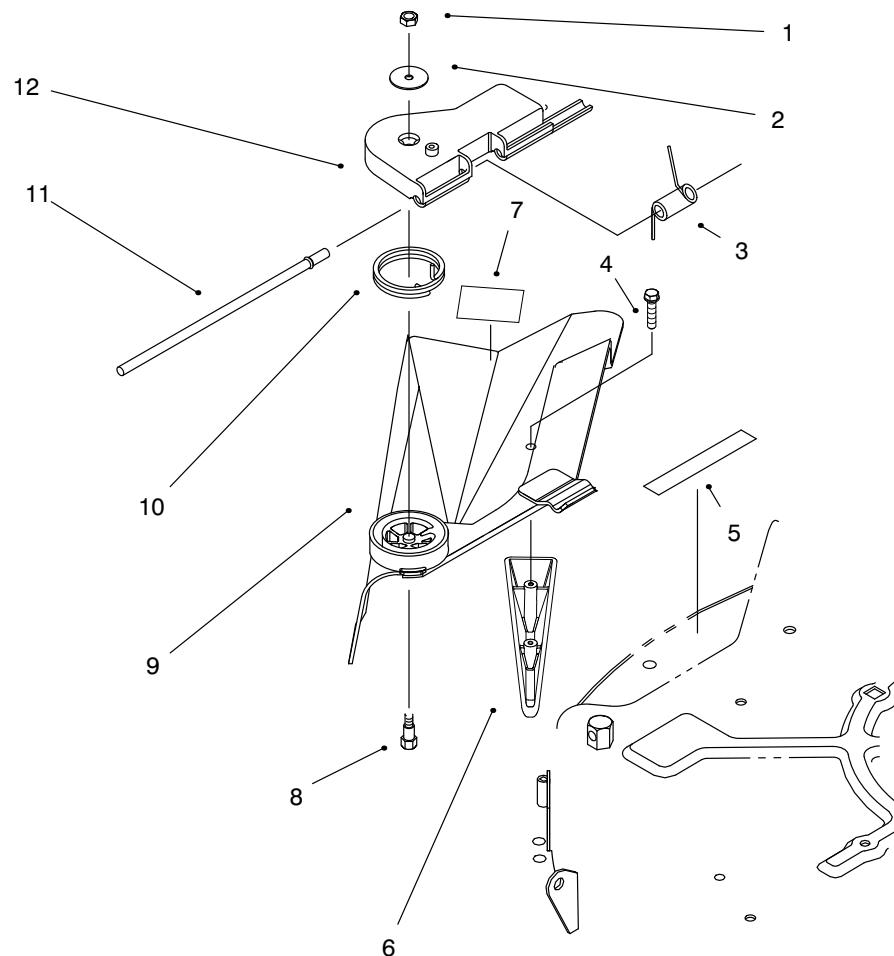


C-2426

DEFLECTOR ASSEMBLY – RECYCLER


Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut – Lock	1
2	3256-58	Washer – Fender	1
3	92-2493	Spring – Torsion	1
4	93-0231	Screw – Pan Hd.	4
5	93-7009	Decal – Deflector Danger	1
6	93-7696	Kicker – CE	2
7	93-7010	Decal – Danger	1

Ref. No.	Part No.	Description	No. Used
8	92-8916	Bolt – Shoulder	1
9	93-7694	Deflector Ass'y (Incl. Ref. #7)	1
10	88-6160	Spring – Torsion	1
11	88-6150	Rod – Deflector Hinge	1
12	88-4540	Hinge – Deflector Danger	1

ELECTRICAL SCHEMATIC

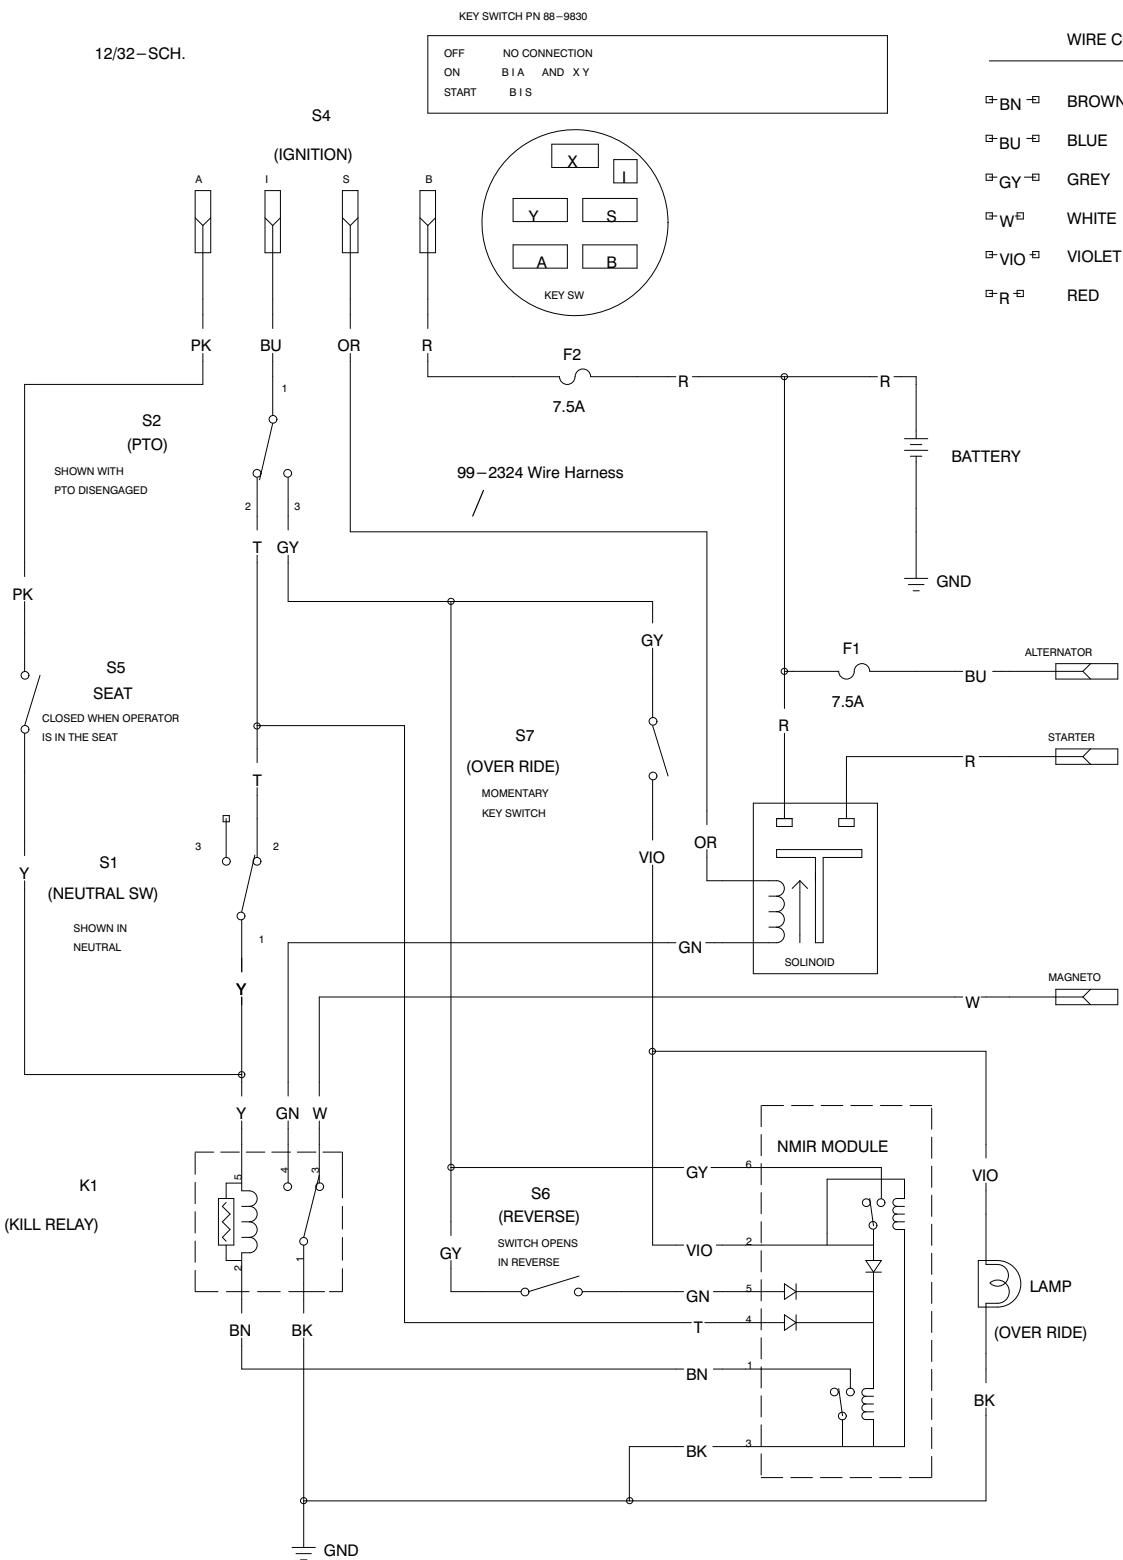


PEERLESS TRANAXLE MODEL NO. 915-019

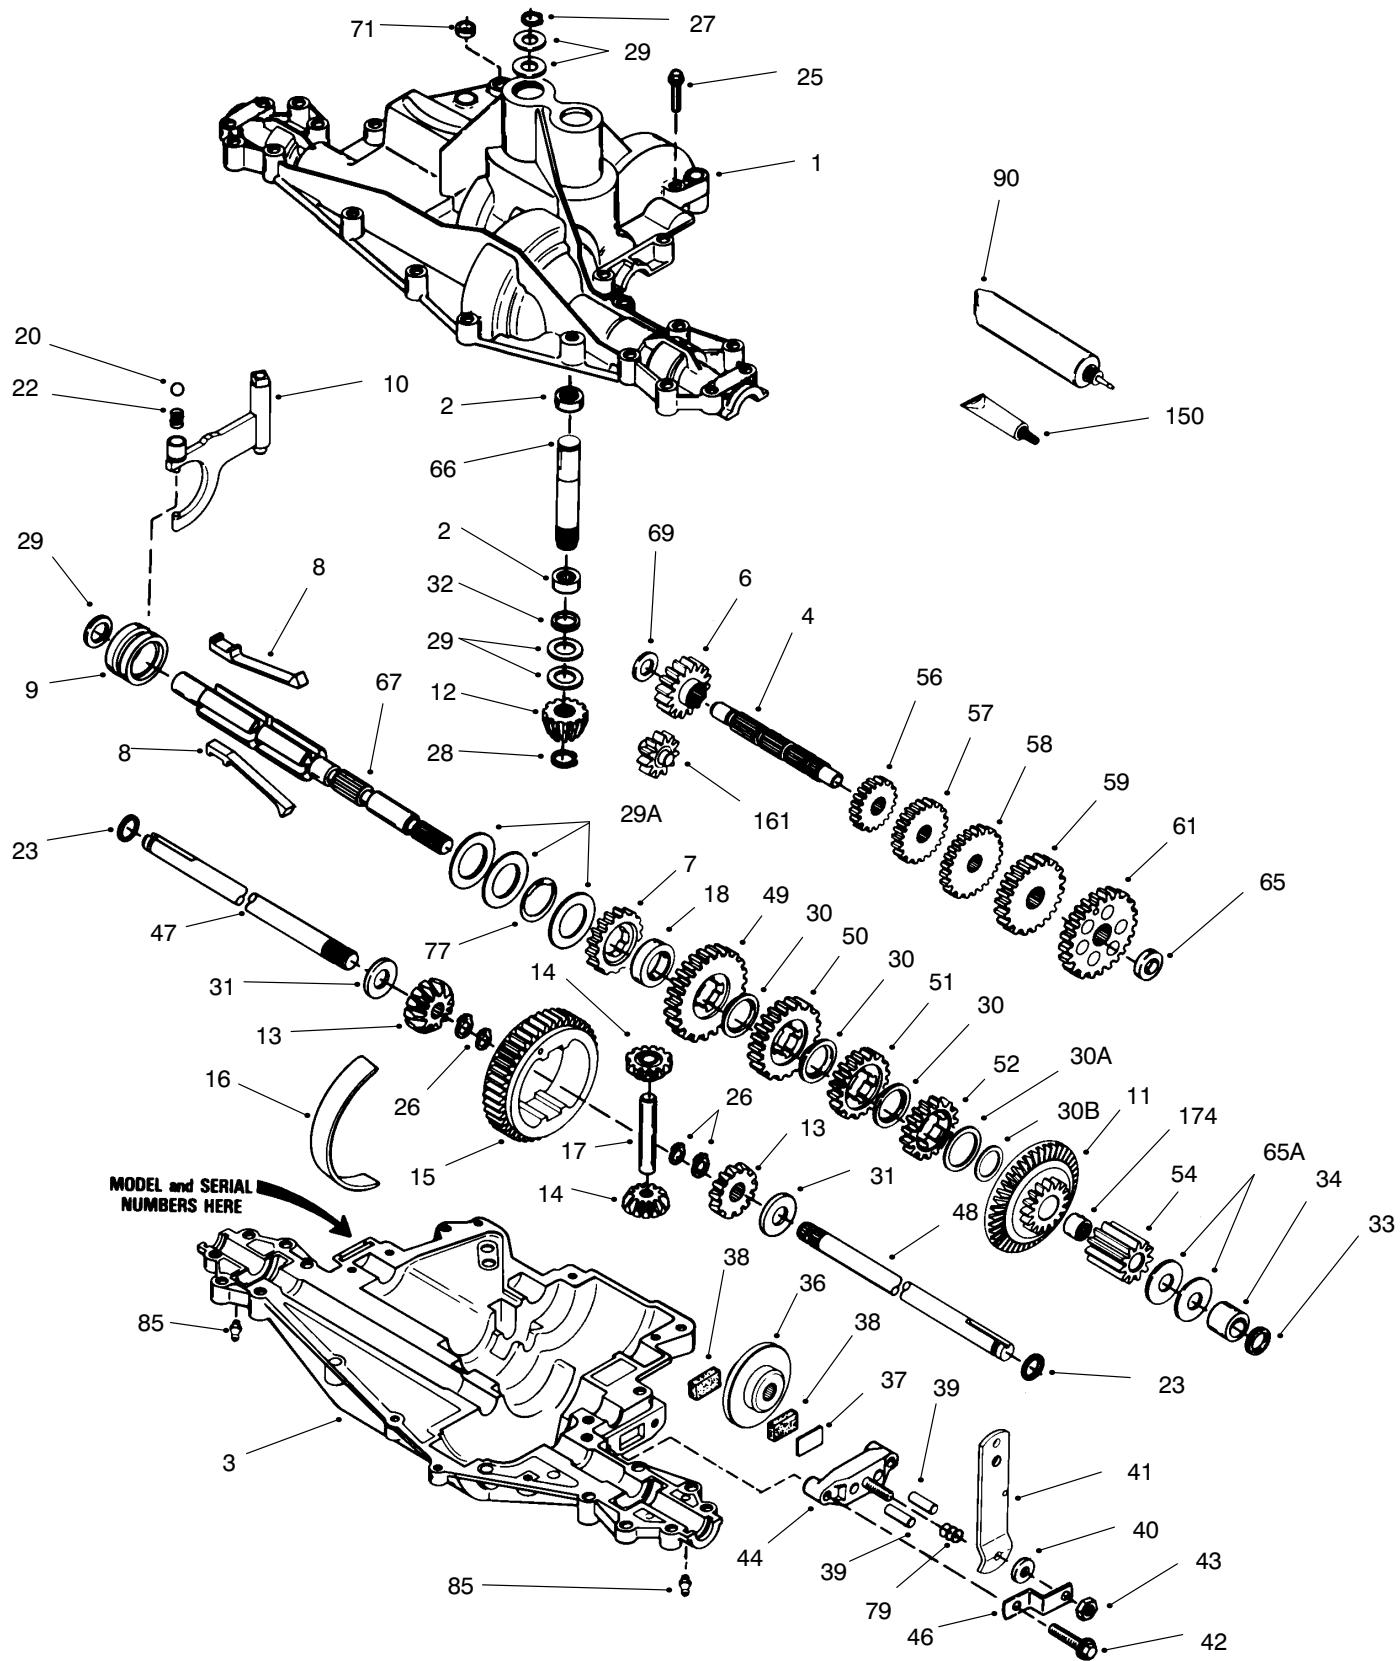

PEERLESS TRANSAXLE MODEL NO. 915-019

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	772117	Transaxle Cover	1	38	790006	Brake Pad	2
2	780086	Needle Bearing	2	39	786026	Dowel Pin	2
3	770114	Transaxle Case	1	40	792076	Washer	1
4	776300	Countershaft	1	41	790045	Brake Lever	1
6	778281	Spur Gear (16 Teeth)	1	42	792073	Screw	2
7	778122A	Spur Gear (22 Teeth)	1	43	792075	Locknut	1
8	792133	Shift Key	4	44	790025	Brake Pad Holder	1
9	784352	Shift Collar	1	46	786086	Brake Lever Bracket	1
10	784365	Shift Rod & Fork	1	47	774930	Axle (16-3/4" lg.)	1
11	778290	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1	48	774931	Axle (11-9/16" lg.) (Incl. Ref. #26)	1
12	778262	Bevel Pinion (14 Teeth)	1	49	778124A	Spur Gear (30 Teeth)	1
13	778221	Bevel Gear (16 Teeth)	2	50	778123A	Spur Gear (25 Teeth)	1
14	778068	Differential Pinion	2	51	778122A	Spur Gear (22 Teeth)	1
15	778260	Ring Gear	1	52	778273	Spur Gear (19 Teeth)	1
16	786150	Bearing Strip	1	54	778263	Spur Gear (11 Teeth)	1
17	78139	Drive Pin	1	56	778126A	Spur Gear (20 Teeth)	1
18	786147	Neutral Spacer	1	57	778127A	Spur Gear (25 Teeth)	1
20	792139	Ball (3/8" dia.)	1	58	778128A	Spur Gear (28 Teeth)	1
22	792142	Spring	1	59	778129A	Spur Gear (30 Teeth)	1
23	788061	Seal Ring	2	61	778265	Spur Gear (34 Teeth)	1
25	792073	Screw	17	65A	780162	Washer	1
26	792125	Retaining Ring (pkg. of 2)	4	65A	780160	Washer	2
27	792035	Retaining Ring	1	66	776299	Input Shaft (3.522" lg.)	1
28	788040	Retaining Ring	1	67	776352	Shifter & Brake Shaft	1
29	780072	Washer	5	69	780161	Thrust Washer	1
29A	780090	Thrust Washer	3	71	788069	Square Cut Ring	1
30	780108	Washer	3	77	788078A	Inverted Retaining Ring (pkg. of 2)	1
30A	789145	Washer	1	79	792144	Spring	1
30B	780178	Washer	1	90	788067B	Grease	
31	780001	Washer	2			(32 oz. btl. Bentonite grease)	1
32	792001	O-Ring	1	150	510334	Gasket Eliminator	
33	788076	O-Ring	1			(Loctite #515)	1
34	780159	Bushing	1	161	776302	Reverse Idler Assembly	1
36	790071	Brake Disk	1	174	780085	Needle Bearing	1
37	790007	Brake Pad Plate	1				

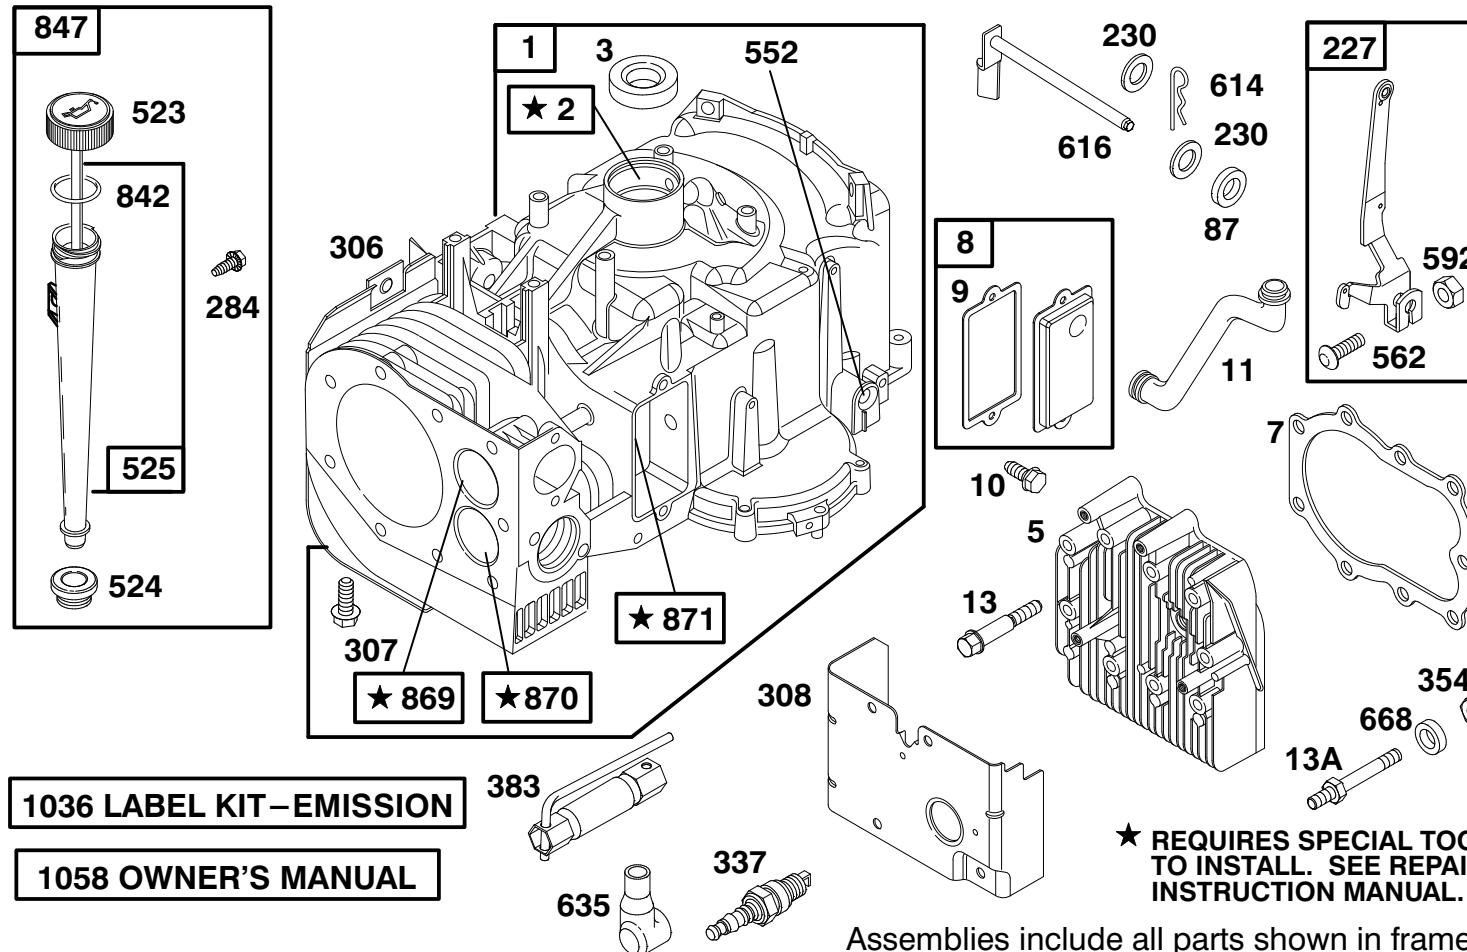


ENGINE BRIGGS & STRATTON MODEL 28M707-1182-E1

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bushing	1
★3	391086	Seal - Oil	1
5	494240	Head - Cylinder	1
△7	271866	Gasket - Cylinder Head	1
8	495735	Breather Assembly	1
△9	27803	Gasket - Valve Cover	1
10	94621	Screw - Hex.	1
11	280100	Tube - Breather	1
13	94622	Screw - Cylinder Head	1
13A	94776	Stud - Hex. Drive	1
★87	491323	Seal - Governor Shaft	1
227	493935	Lever - Governor	1
230	94927	Washer - Flat	1
284	94903	Screw - Shoulder	1
306	224545	Shield - Cylinder	1
307	94930	Screw - Hex.	1
308	491490	Cover - Cylinder Head	1
337	802592	Plug - Spark	1
354	94726	Nut - Hex.	1
383	89838	Wrench - Spark Plug	1
523	495230	Dipstick	1

★ Included in Gasket Set - Part No. 494241.
◆ Included in Carburetor Gasket Set - Part No. 494385.

Ref. No.	Part No.	Description	No. Used
★524	281370	Seal - Fill Tube	1
525	496113	Tube - Oil Fill	1
552	491986	Bushing - Gov. Crank	
		Note: Includes Seal, Ref. No. 87	1
	562	94907	1
	592	231978	1
	614	93306	1
	616	495157	1
	635	66538	1
	668	231109	1
	★842	270920	1
	847	496415	1
	869	261463	1
	870	262924	1
	871	261961	1
1036	499362	Bushing - Valve Guide (Exhaust)	1
1058	273681	Note: 231218 Bushing - Valve Guide (Intake)	1
		Label Kit - Emission	1
		Owner's Manual	1

● Included in Carburetor Kit - Part No. 499220.
△ Included in Valve Overhaul Gasket Set - Part No. 498539.

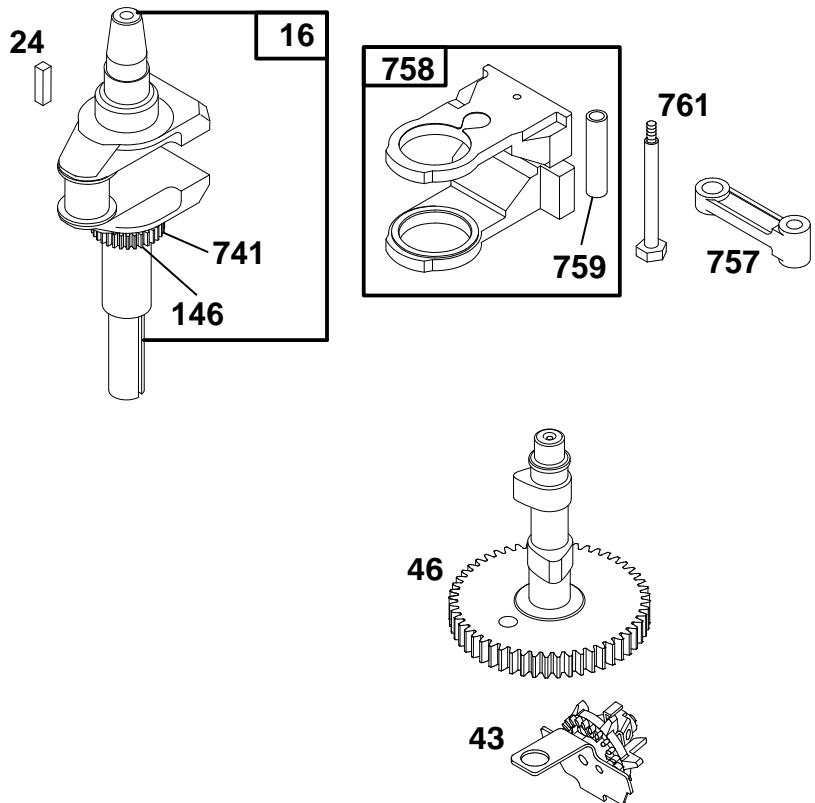


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1182-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
16	498971	Crankshaft	1	757	213998	Link - Counterweight	1
24	222698	Key - Flywheel	1	758	399891	Counterweight	1
43	490815	Governor/Oil Slinger	1	759	230787	Pin - Counterweight	1
46	212897	Gear - Cam	1	761	94593	Screw - Counterweight	1
146	94196	Key - Timing	1				
741	262932	Gear - Timing	1				

* Included in Gasket Set - Part No. 494241.
◆ Included in Carburetor Gasket Set - Part No. 494385.

● Included in Carburetor Kit - Part No. 499220.
△ Included in Valve Overhaul Gasket Set - Part No. 498539.

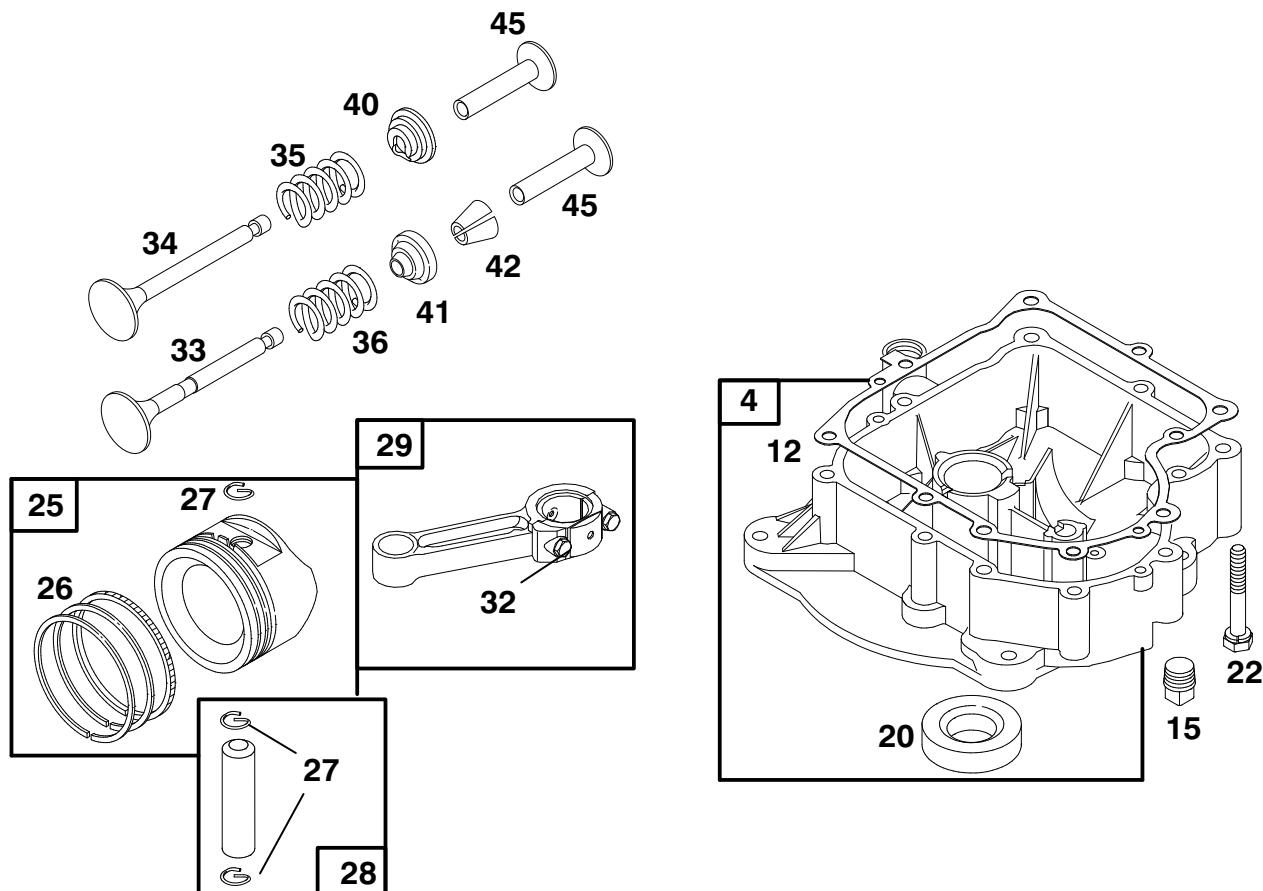

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707-1182-E1

Ref. No.	Part No.	Description	No. Used
4	494238	Sump - Engine	1
★12	271916	Gasket - Crankcase (.015" Thick)	1
★	271997	Gasket - Crankcase (.005" Thick)	1
★	271996	Gasket - Crankcase (.009" Thick)	1
15	94239	Plug - Oil Drain	1
★20	291675	Seal - Oil	1
22	95187	Screw - Hex.	1
25	499282	Piston Assy. (Std.)	1
	499286	Piston Assy. (.010" O.S.)	1
	499290	Piston Assy. (.020" O.S.)	1
	499294	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set (Std.)	1
	391781	Ring Set (.010" O.S.)	1
	391782	Ring Set (.020" O.S.)	1
	391783	Ring Set (.030" O.S.)	1

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

Ref. No.	Part No.	Description	No. Used
27	263129	Lock - Piston Pin	1
28	498319	Pin - Piston (Standard)	1
	498320	Pin - Piston (.005" O.S.)	1
29	490348	Rod - Connecting	1
	490469	Rod - Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw - Connecting Rod	1
33	262246	Valve - Exhaust	1
34	262247	Valve - Intake	1
35	65906	Spring - Intake Valve	1
36	26828	Spring - Exhaust Valve	1
40	221596	Retainer - Intake Valve	1
41	292260	Retainer - Exhaust Valve	1
42	494553	Keeper - Valve	1
45	262248	Tappet - Valve	1

● Included in Carburetor Kit—Part No. 499220.
△ Included in Valve Overhaul Gasket Set—Part No. 498539.

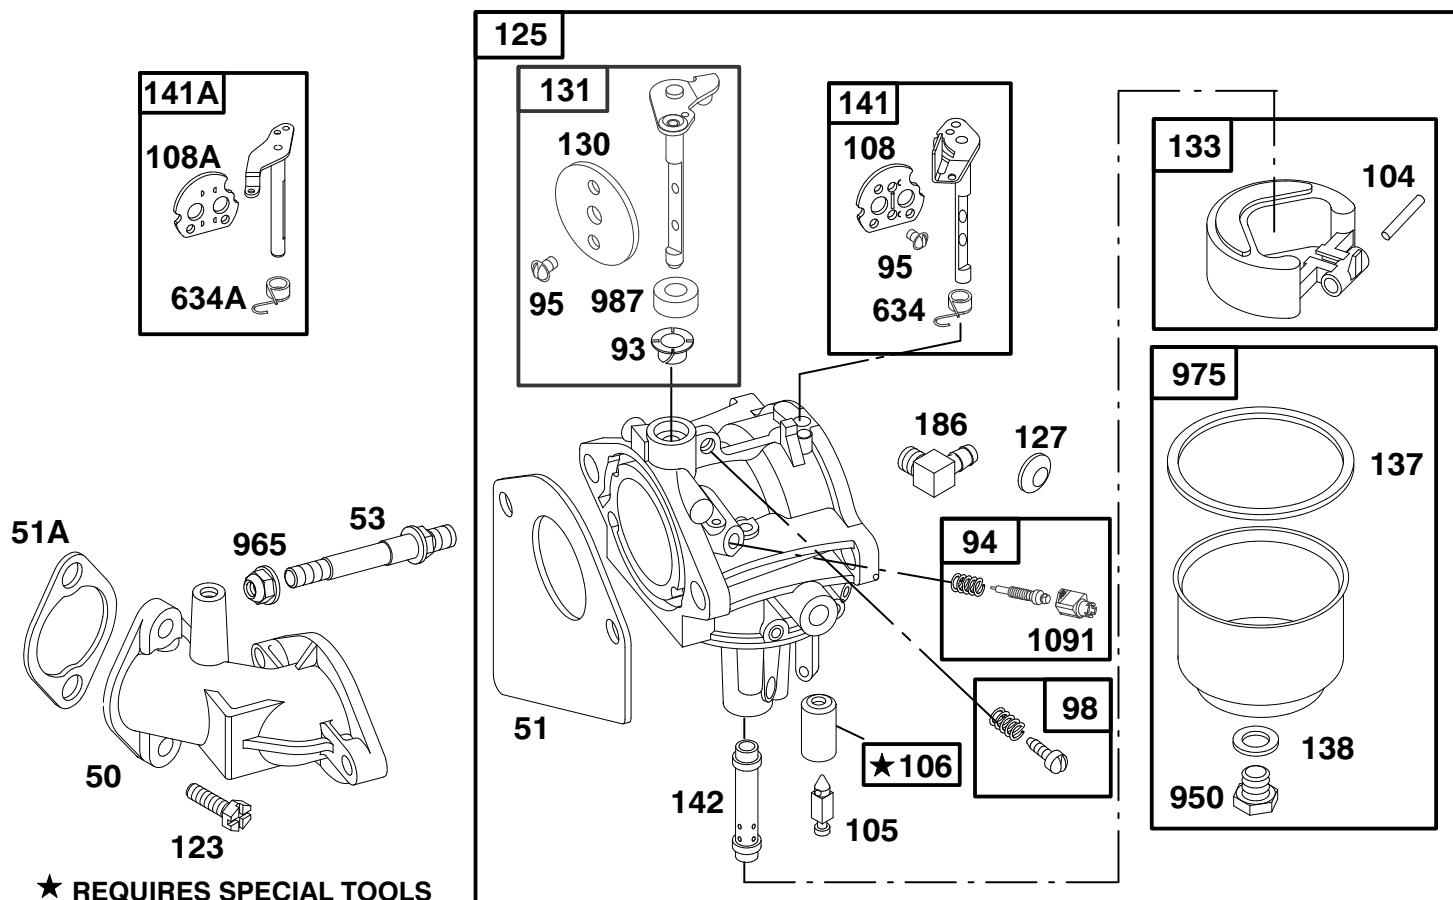

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1182-E1

Ref. No.	Part No.	Description	No. Used
50	213819	Manifold – Intake	1
●♦51	272465	Gasket – Carburetor (Carb. to Manifold)	1
△★51A	272554	Gasket – Carburetor (Manifold to Cylinder)	1
53	94637	Stud – Carb. Mtg.	1
●93	281346	Bushing – Throttle Shaft	1
94	498030	Valve – Needle	1
●95	94098	Screw – Throttle	1
98	495800	Screw – Idle Speed	1
●104	231789	Pin – Float Hinge	1
●105	231855	Valve – Float Needle	1
●106	231854	Seat – Inlet	1
108	224667	Valve – Choke	1
108A	224540	Valve – Choke	1
123	94913	Screw – Torx® Hex.	1
125	498027	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1
130	224539	Valve – Throttle	1
131	494379	Shaft – Throttle	1


Ref. No.	Part No.	Description	No. Used
133	494381	Float – Carburetor	1
●♦137	281165	Gasket – Float Bowl	1
●♦138	281164	Washer – Float	1
141	495097	Bowl Screw	1
141A	495931	Shaft – Choke (Manual Choke)	1
●142	497566	Shaft – Choke (Choke-A-Matic)	1
	497567	Nozzle – Carburetor (Standard)	1
	497567	Nozzle – Carburetor (High Alt.)	1
186	493496	Connector – Fuel	1
●634	494453	Seal – Spring Assembly	1
●634A	494455	Seal – Spring Assembly	1
950	94642	Screw – Fuel Bowl	1
965	94010	Nut – Hex.	1
975	494378	Bowl – Float	1
●987	281166	Seal – Throttle Shaft	1
1091	281364	Cap – Limiter	1

* Included in Gasket Set – Part No. 494241.

◆ Included in Carburetor Gasket Set – Part No. 494385.

● Included in Carburetor Kit – Part No. 499220.

△ Included in Valve Overhaul Gasket Set – Part No. 498539.

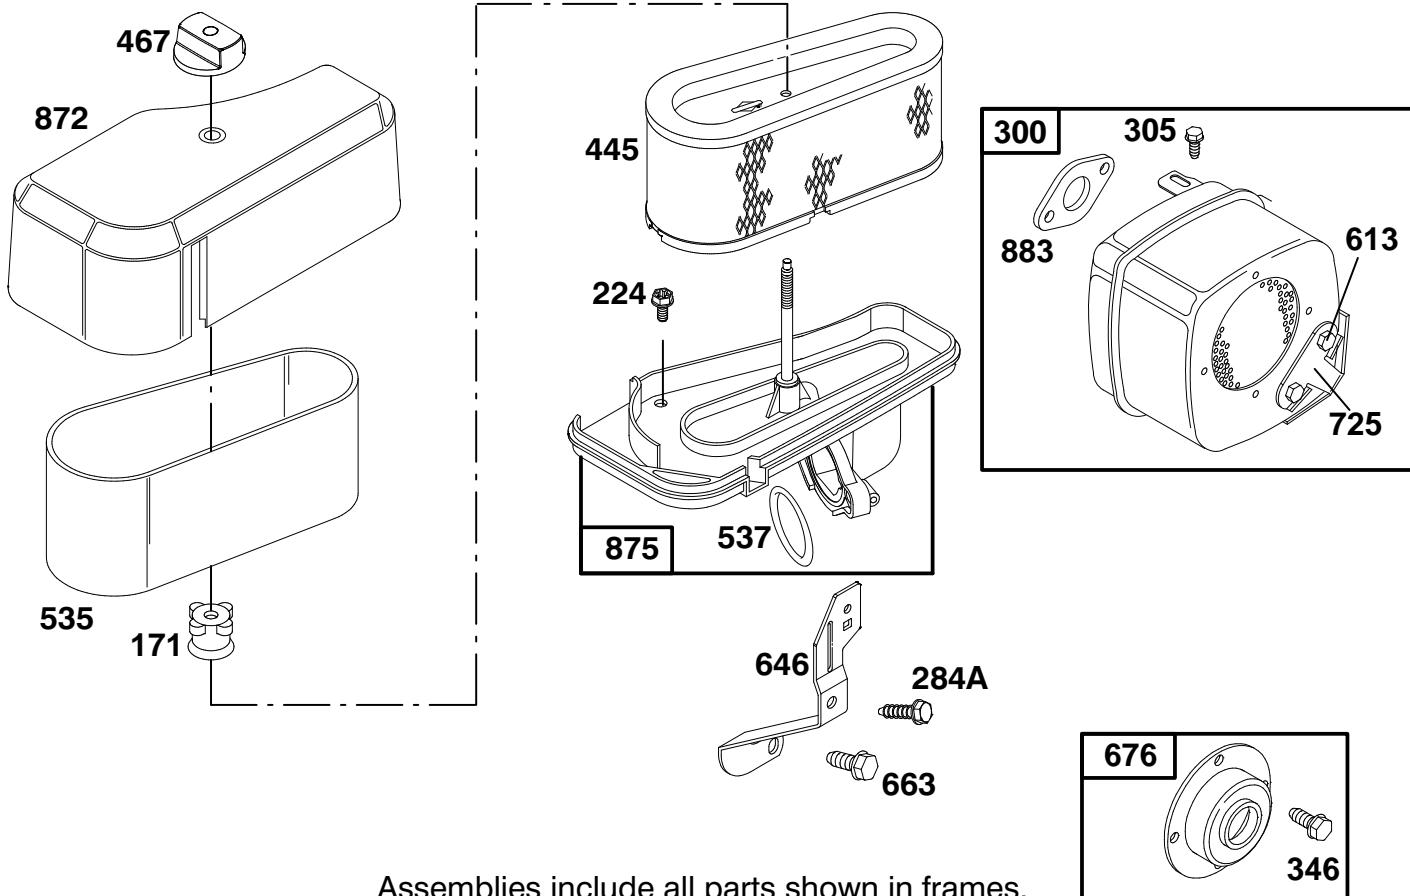


ENGINE BRIGGS & STRATTON MODEL 28M707-1182-E1

Ref. No.	Part No.	Description	No. Used
171	281051	Nut - Air Cleaner	1
224	94905	Screw - Torx® Hex.	1
284A	94704	Screw - Hex.	1
300	491413	Muffler - Exhaust	1
305	94786	Screw - Hex.	1
346	94896	Screw - Hex.	1
445	496894	Filter - Air	1
467	493903	Nut - Air Cleaner	1
535	272403	Filter - Precleaner	1

★ Included in Gasket Set - Part No. 494241.
◆ Included in Carburetor Gasket Set - Part No. 494385.

Ref. No.	Part No.	Description	No. Used
△★537	281106	Gasket - Air Cleaner	1
	613	Screw - Shoulder	1
	646	Brace - Air Cleaner	1
	676	Deflector - Muffler	1
	663	Screw - Hex.	1
	725	Shield - Heat	1
	872	Cover - Air Cleaner	1
	875	Base - Air Cleaner	1
△★883	272293	Gasket - Exhaust	1

● Included in Carburetor Kit - Part No. 499220.
△ Included in Valve Overhaul Gasket Set - Part No. 498539.

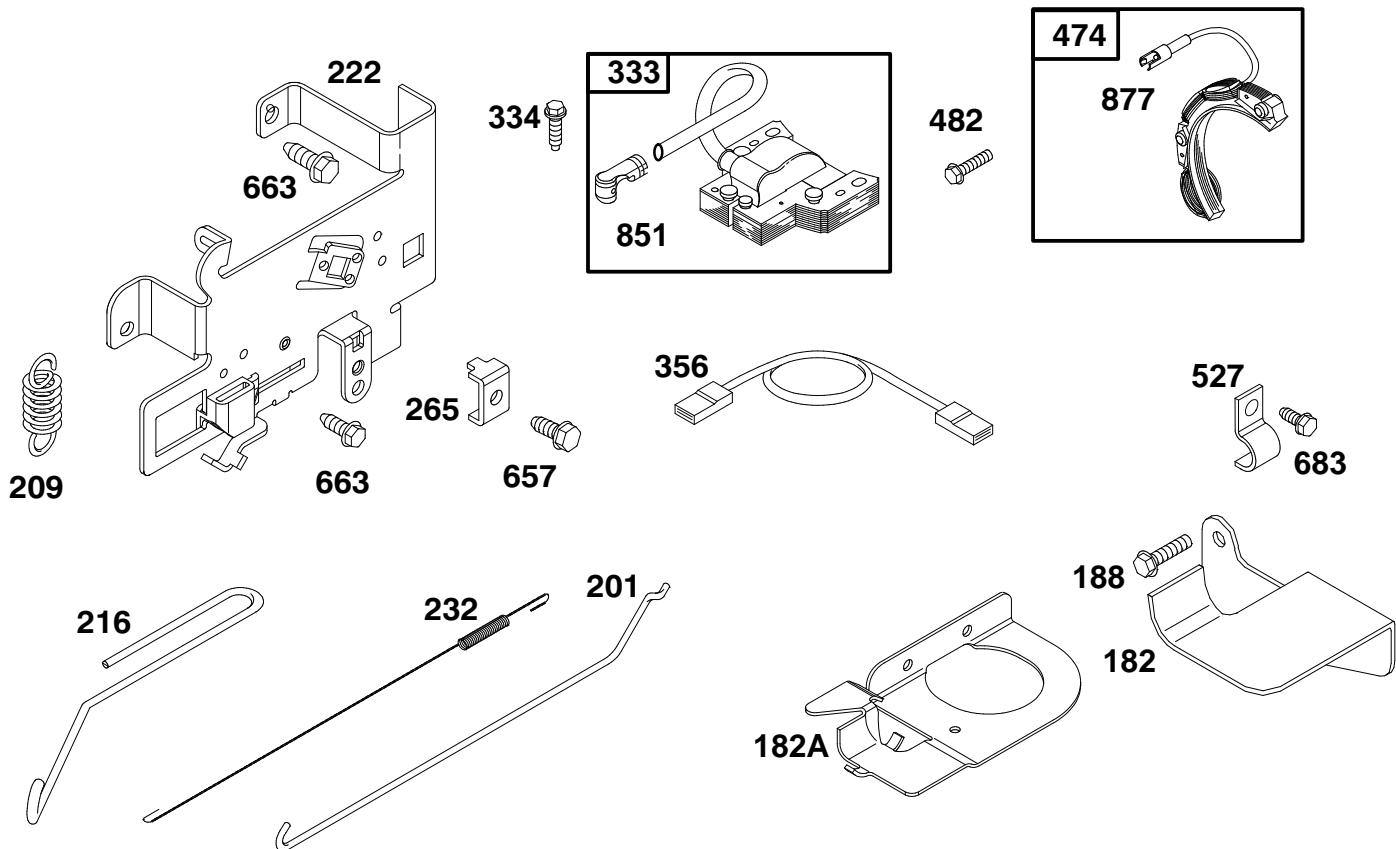

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1182-E1

Ref. No.	Part No.	Description	No. Used
182	223925	Bracket - Tank Mounting (R.H.)	1
182A	498194	Bracket - Tank Mounting (L.H.)	1
188	94480	Screw - Hex.	1
201	262767	Link - Governor	1
209	260871	Spring - Governor	1
216	262766	Link - Choke	1
222	495611	Bracket - Control	1
232	262785	Spring - Link	1
265	221535	Clamp - Casing	1


Ref. No.	Part No.	Description	No. Used
333	492341	Armature - Magneto	1
334	94731	Screw - Hex.	1
356	494328	Wire - Stop	1
474	391529	Alternator	1
482	93621	Screw - Hex.	1
527	221428	Clamp - Tube	1
657	94906	Screw - Hex.	1
663	94929	Screw - Hex.	1
683	94602	Screw - Hex.	1
851	493880	Terminal - Ignition Cable	1
877	393814	Wire - Alternator	1

★ Included in Gasket Set - Part No. 494241.

◆ Included in Carburetor Gasket Set - Part No. 494385.

● Included in Carburetor Kit - Part No. 499220.

△ Included in Valve Overhaul Gasket Set - Part No. 498539.

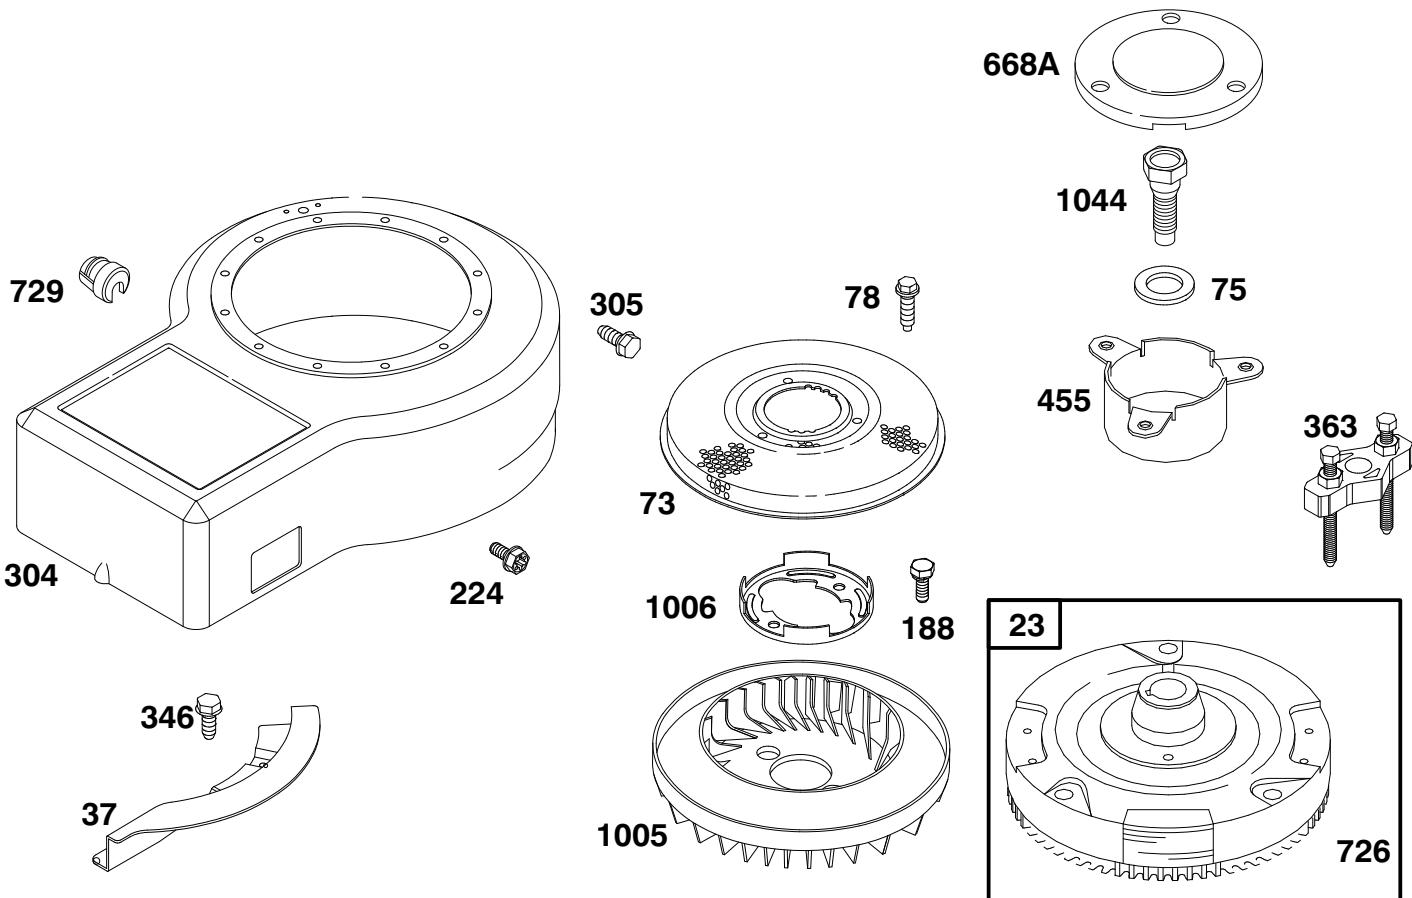

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707-1182-E1

Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	1
37	224502	Guard - Flywheel	1
73	224948	Screen - Rotating	1
75	225136	Washer - Flywheel	1
78	94626	Screw - Phillips	1
188	94627	Screw - Hex.	1
224	94905	Screw - Torx® Hex.	1
304	496431	Housing - Blower	1
305	94786	Screw - Hex.	1
346	94896	Screw - Hex.	1

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

Ref. No.	Part No.	Description	No. Used
363	19203	Puller - Flywheel	1
455	222561	Cup - Flywheel	1
668A	280848	Spacer	1
726	392134	Gear - Ring (Includes Mtg Hardware)	1
729	281159	Clip - Wire	1
1005	281400	Fan - Flywheel	1
1006	224413	Retainer - Fan	1
1044	94673	Screw - Shoulder	1

● Included in Carburetor Kit—Part No. 499220.
△ Included in Valve Overhaul Gasket Set—Part No. 498539.

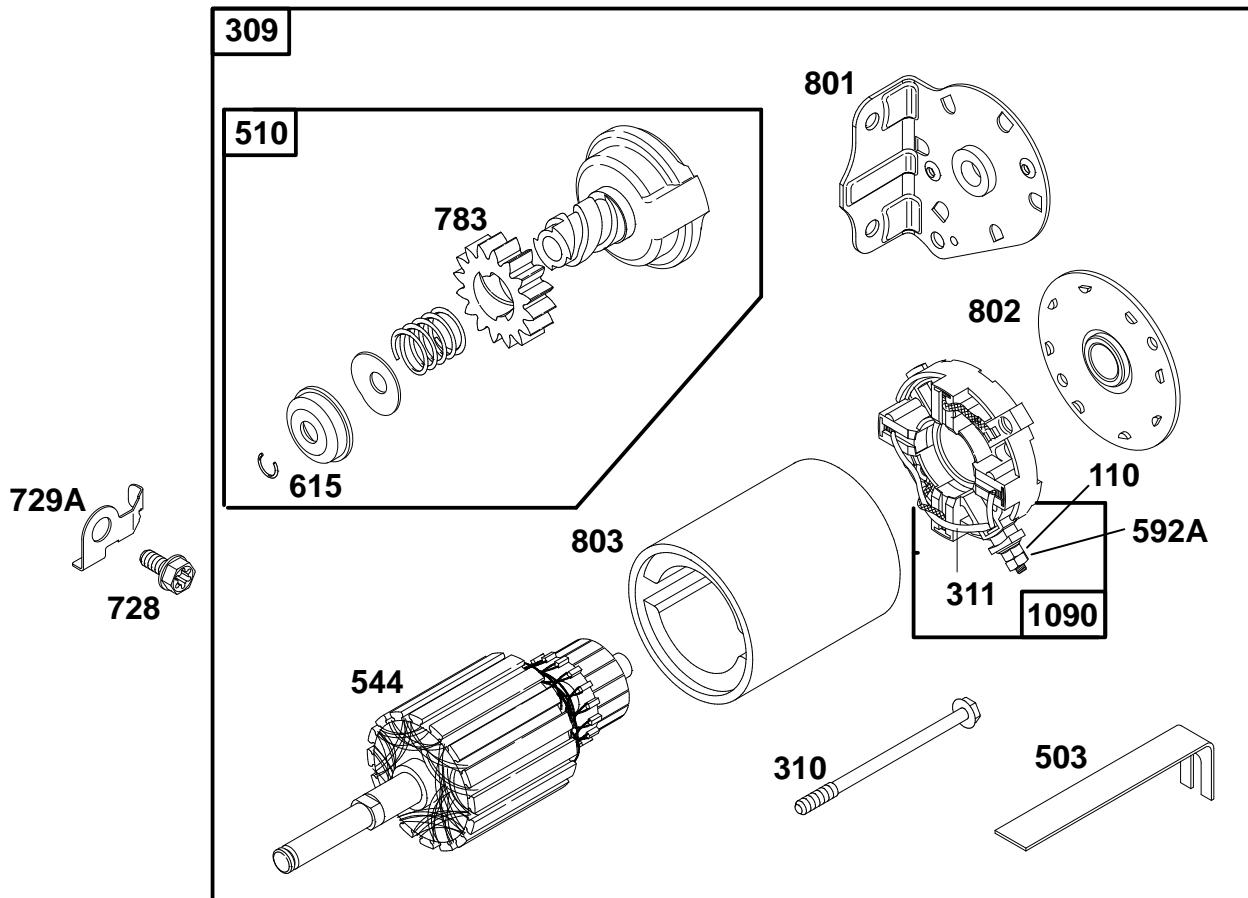

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1182-E1

Ref. No.	Part No.	Description	No. Used
110	225137	Washer - Flat	1
309	497595	Motor - Starter	1
310	94003	Bolt - Thru	1
311	497608	Brush Set	1
503	806000	Strap - Starter	1
510	497606	Drive - Starter	1
544	497603	Armature - Starter	1
592A	92278	Nut - Hex.	1


Ref. No.	Part No.	Description	No. Used
615	263080	Ring - Retaining	1
728	94951	Screw - Torx®	1
729A	225170	Clip - Wire	1
783	280104	Gear - Starter	1
801	394856	Cap - Drive	1
802	497607	Cap - End	1
803	497604	Housing - Starter	1
1090	497605	Retainer - Brush	1

* Included in Gasket Set - Part No. 494241.


◆ Included in Carburetor Gasket Set - Part No. 494385.

● Included in Carburetor Kit - Part No. 499220.

△ Included in Valve Overhaul Gasket Set - Part No. 498539.

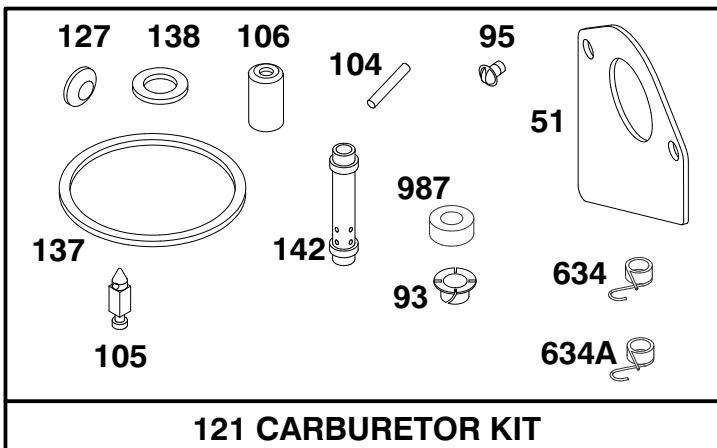

121 CARBURETOR KIT

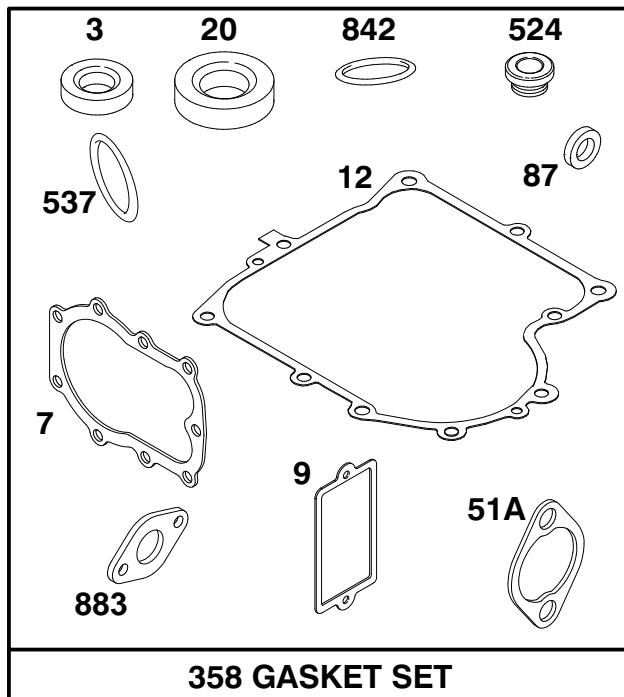

977 CARBURETOR GASKET SET

358 GASKET SET



Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-1182-E1

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal - Oil	1
★Δ7	271866	Gasket - Cylinder Head	1
★Δ9	27803	Gasket - Valve Cover	1
★12	271916	Gasket - Crankcase (.015" Thick)	1
★	271997	Gasket - Crankcase (.005" Thick)	1
★	271996	Gasket - Crankcase (.009" Thick)	1
★20	291675	Seal - Oil	1
◆●51	272465	Gasket - Carburetor (Carb. to Manifold)	1
★Δ51A	272554	Gasket - Carburetor (Manifold to Cylinder)	1
★87	491323	Seal - Governor Shaft	1
●93	281346	Bushing - Throttle Shaft	1
●95	94098	Screw - Throttle	1
●104	231789	Pin - Float Hinge	1
●105	231855	Valve - Float Needle	1

★ Included in Gasket Set - Part No. 494241.
◆ Included in Carburetor Gasket Set - Part No. 494385.

Ref. No.	Part No.	Description	No. Used
●106	231854	Seat - Inlet	1
121	499220	Carburetor Kit	1
●127		Plug - Welch (Sold in Kit Only)	1
◆●137	281165	Gasket - Float Bowl	1
◆●138	281164	Washer - Float	1
●142	494566	Bowl Screw	1
358	494241	Nozzle - Carburetor	1
★524	281370	Gasket Set	1
★Δ537	281106	Seal - Fill Tube	1
●634	494453	Gasket - Air Cleaner	1
●634A	494455	Seal - Spring Assembly	1
★842	270920	Seal - Spring Assembly	1
△★883	272293	Seal - O-Ring	1
977	494385	Gasket - Exhaust	1
●987	281166	Carburetor Gasket Set	1
1095	498539	Seal - Throttle Shaft	1
		Gasket Set - Valve Overhaul	1

● Included in Carburetor Kit - Part No. 499220.
△ Included in Valve Overhaul Gasket Set - Part No. 498539.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date							

MAINTENANCE RECORD

Date									