



Wheel Horse®

270-H Yard & Garden Tractor

270-HE Yard & Garden Tractor

Model No. 72108-210000001 and Up
Model No. 72116-210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part. This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page
Hood & Grill Assembly	4
Hydro Drive Assembly	5
Front Axle Assembly	6
Twin Cylinder Engine, Muffler & PTO Assembly	7
Battery Assembly	8
Fuel Tank Assembly	9
Lower Steering Assembly	10
Steering Wheel & Tilt Assembly	11
Hoodstand & Firewall Assembly	12
Lift Lever & HOC Assembly	13
Hydro Brake Assembly	14
Hydro Controls Assembly	15
Frame Assembly	16
Hydro Transaxle Assembly	17
Fender & Footrests Assembly	18
Seat Assembly	19
Rear Wheel Assembly	20
Cruise Control Assembly	21
Power Lift Assembly	22
Dash Assembly	23
Housing and Fan Assembly	24
Differential Gear Assembly	25
Brake Assembly	26
Cylinder Block Assembly	27
Crankshaft-Kohler CV20S-PS65531 and PS65532	28

Description	Page
Crankcase-Kohler CV20S-PS65531 and PS65532	29
Oil Pan / Lubrication-Kohler CV20S-PS65531 & PS65532	30
Head/Valve/Breather-Kohler CV20S-PS65531 & PS65532	31
Ignition / Electrical-Kohler CV20S-PS65531 and PS65532	32
Blower Housing & Baffles-Kohler CV20S-PS65531 and PS65532	33
Starting System-Kohler CV20S-PS65531 and PS65532	34
Fuel System-Kohler CV20S-PS65531 and PS65532	35
Fuel System-Kohler CV20S-PS65531 and PS65532	36
Engine Controls-Kohler CV20S-PS65531 and PS65532	37
Air Intake / Filtration-Kohler CV20S-PS65531 & PS65532	38
Exhaust-Kohler CV20S-PS65531 and PS65532	39
Engine Wire Harness Routing Assembly	40
Twin Cyl. Hydro w/Cruise & Power Lift Wire Routing	41
270-H Wiring Schematic	42

Accessories


Description	Model / Part No.
38" Side Discharge Mower (Model No. 72108 Only)	Model No. 78216
42" Side Discharge Mower (Model No. 72108 Only)	Model No. 78231
48" Side Discharge Mower (Model No. 72108 Only)	Model No. 78261
52" Side Discharge Mower (Model No. 72108 Only)	Model No. 78281
38" Side Discharge Mower (Model No. 72116 Only)	Model No. 78218
42" Side Discharge Mower (Model No. 72116 Only)	Model No. 78232
48" Side Discharge (Model No. 72116 Only)	Model No. 78268
52" Side Discharge Mower (Model No. 72116 Only)	Model No. 78253
11 Cubic Foot Twin Bagger (For 38" SD Mower)	Model No. 79202
11 Cubic Foot Twin Bagger (For 42" & 48" SD Mower)	Model No. 79203
36" Tiller	Model No. 79271
48" Dozer Blade	Model No. 79253

Description	Model / Part No.
42" Snowblower	Model No. 79263
38" Recycler Kit	Model No. 79170
Baffle Kit - 42" SD Mower	Model No. 85501
48" Blade Adapter	Part No. 92-6828
42" Snowblower Adapter	Part No. 93-7625
48" Recycler Kit	Model No. 79195
52" Recycler Kit	Model No. 79185
48" Blade Skid Shoe (Model No. 72116 Only)	Part No. 92-6840
Rear Wheel Weights	Part No. 81115
Front Wheel Weights	Part No. 81214
Tire Chains	Part No. 82531
Cab	Part No. 79911
R.H. Cleat Tire	Part No. 92-6789
L.H. Cleat Tire	Part No. 92-6790
Vinyl Cover	
(Model No. 72116 Only)	Part No. 110831
Non Metalic Hubcap - 8" (Model No. 72116 Only)	Part No. 94-3717
Non Metalic Hubcap - 12" (Model No. 72116 Only)	Part No. 94-3718

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

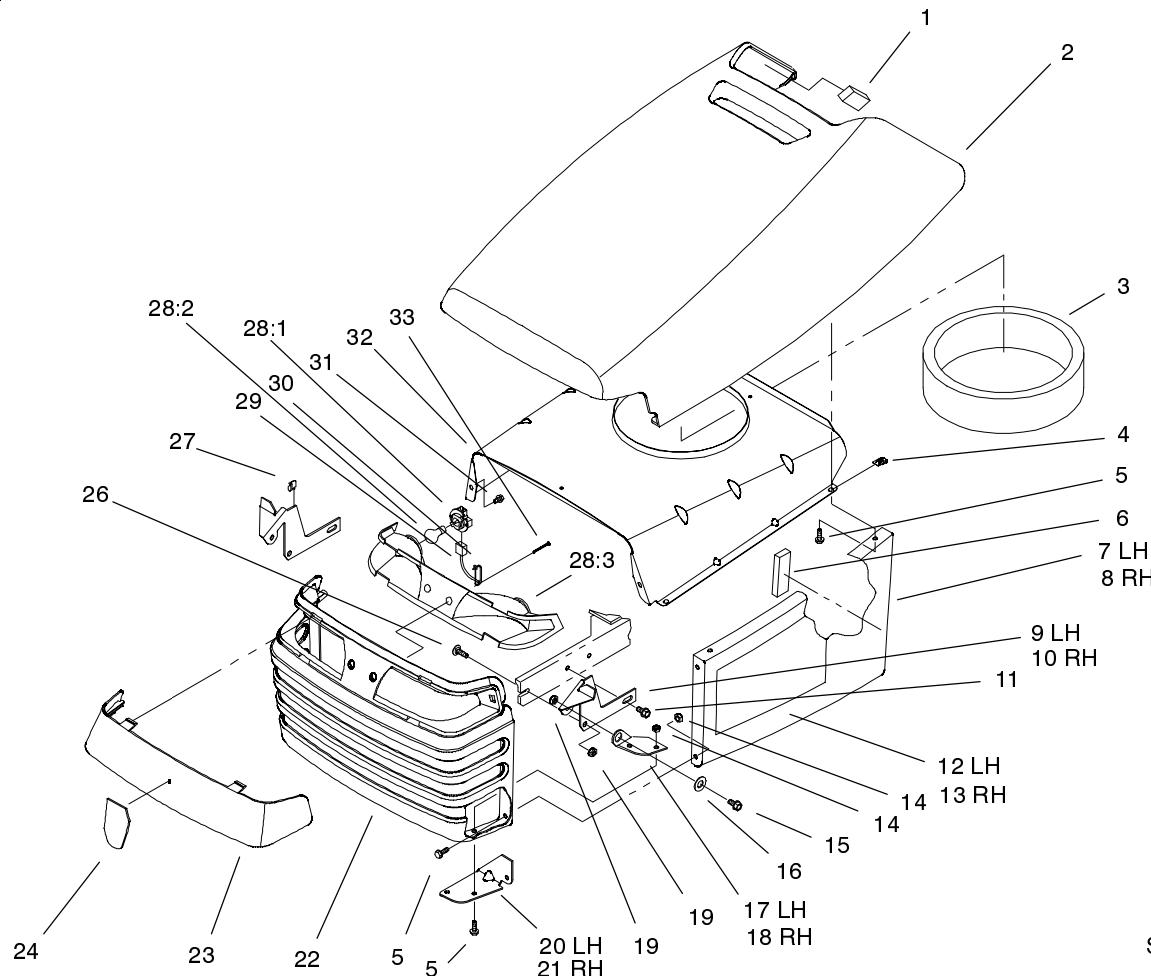


Sheet No.:2

Hood and Grill Assembly

Ref. No.	Part No.	Qty.	Description
1	94-1980	2	Foam - Hood
2	92-6658	1	Hood - Top
3	92-7076	1	Seal-Air Inlet Twin
4	92-7006	4	Nut
5	32105-15	12	Screw
6	92-7148	2	Foam - Sidepanel
7	92-6652	1	Side-LH Hood
8	92-6650	1	Side-RH Hood
9	92-6918-03	1	Bracket-Hinge, LH
10	92-6917-03	1	Bracket-Hinge, RH
11	32144-14	2	Screw-HWH
12	95-0801	1	Decal-Hood, LH
13	95-0800	1	Decal-Hood, RH
14	32128-10	8	Locknut-Flange
15	322-3	2	Screw-HH
16	105503	2	Bushing
17	92-6997-03	1	Hinge-Hood, LH
18	92-6996-03	1	Hinge-Hood, RH
19	3296-29	4	Nut-Lock
20	92-7049-03	1	Bracket-Hood Hinge, RH
21	92-7048-03	1	Bracket-Hood Hinge, LH
22	100-1344	1	Grill
23	92-6656	1	Lens - Headlight
24	92-6987	1	Emblem-Horsehead

Ref. No.	Part No.	Qty.	Description
26	3230-1	2	Screw-CARR
27	519337	1	Clip-Cable
*28	88-3970	1	Reflector & Lamp ASM
28:1	111686	2	Socket-Light
28:2	7228	2	Bulb -No. 1156
28:3	93-8741	1	Reflector
29	88-4320	1	Wire Harness-Lights
30	614249	1	Tie Strap
31	46-8093	2	Screw-Plastite
32	92-6914-03	1	Baffle-Hood, Upper
33	32144-32	2	Screw


* Not illustrated

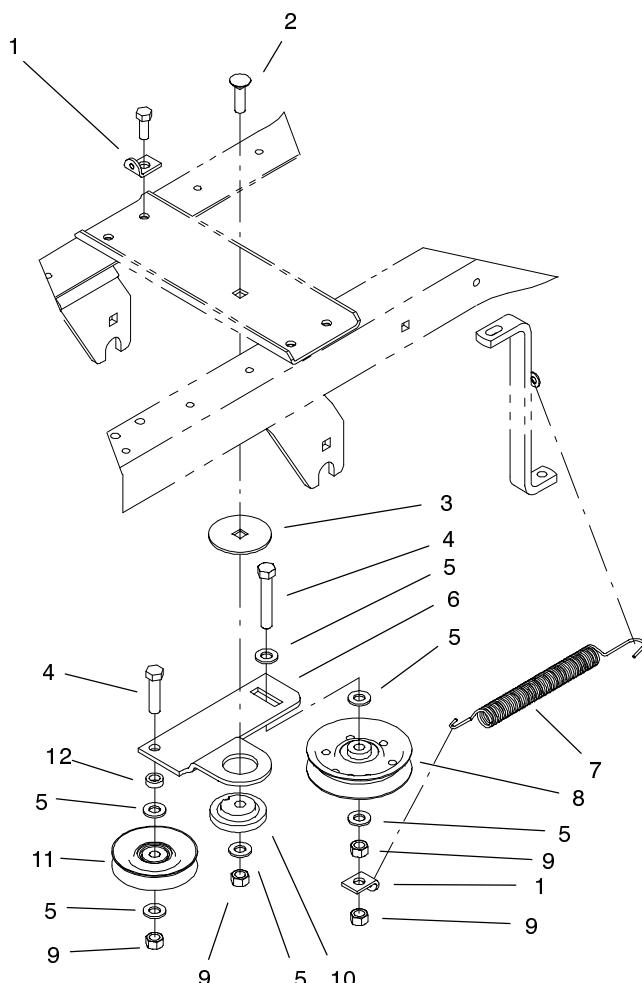

Sheet No.:3

Hydro Drive Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	2534	2	Clip - Spring				
2	3231-25	1	Screw-CARR				
3	111419	1	Bearing-Washer				
4	323-10	2	Screw-HH				
5	3256-24	6	Washer-Flat				
6	92-6900	1	Arm - Idler				
7	79-7530	1	Spring - Clutch				
8	92-7101	1	Pulley - Flat Idler				
9	3296-59	4	Nut-Lock, NI				
10	111418	1	Bushing				
11	93-3658	1	Spacer				
12	92-7102	1	Pulley - Idler				

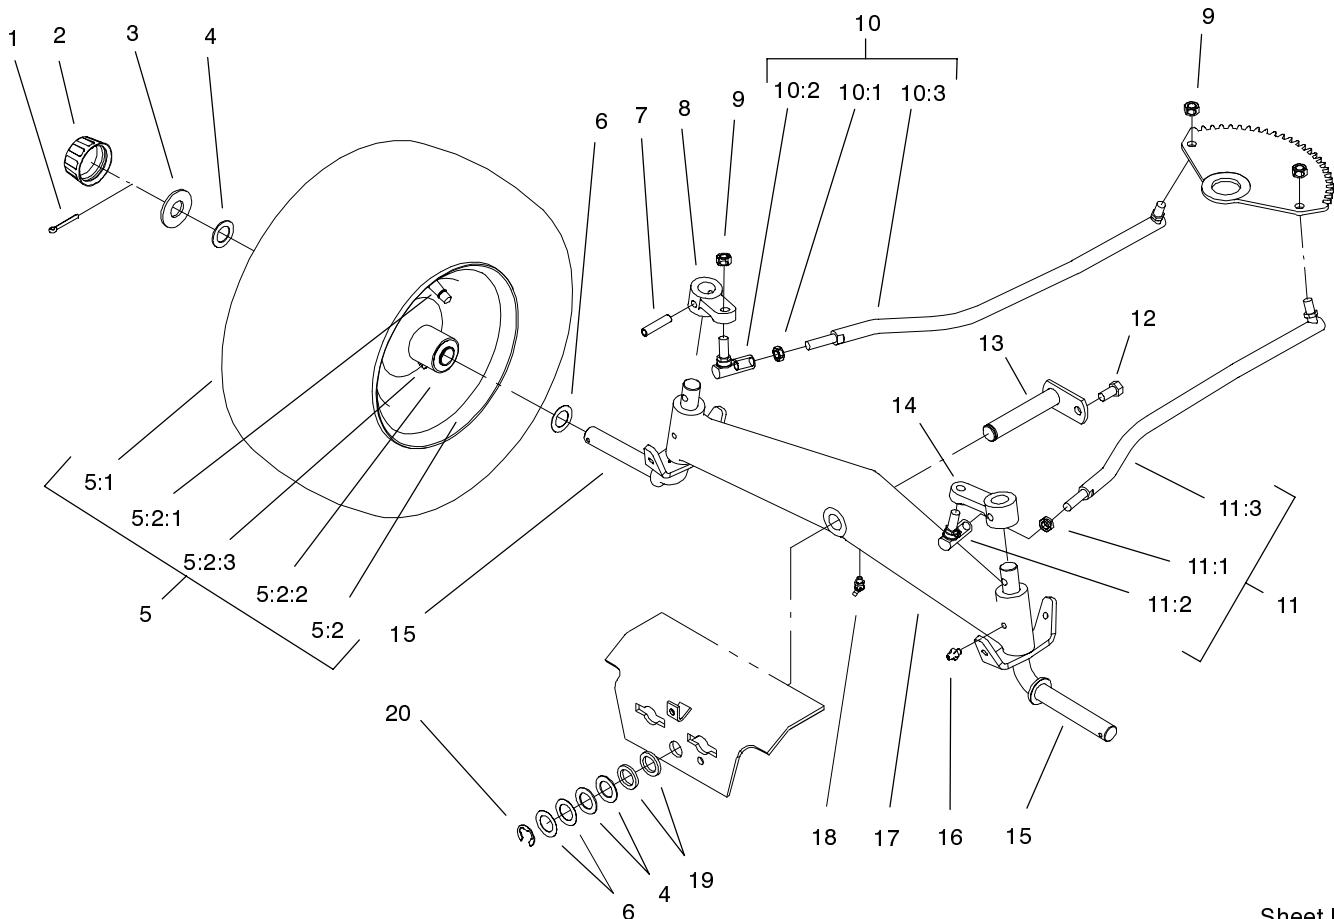


Sheet No.:4

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3272-17	2	Pin-Cotter
2	61-9780	2	Cap-Hub
3	28-2480	2	Washer
4	1278	4	Washer
5		2	Front Wheel & Tire ASM
5:1	99-2336	1	Tire
5:2	93-9801	1	Wheel ASM
5:2:1	5108	1	Valve
5:2:2	110513	2	Bearing-Wheel
5:2:3	109500	1	Zerk-Grease
*5:99	105293	1	Tube-Inner
6	5210	4	Washer-Shim
7	933270	2	Pin
8	78-1950-01	1	Arm-Front Spindle
9	9150026	4	Nut
10	92-6883	1	Linkage-Steering, RH
10:1	9150854	1	Nut-Jam
10:2	78-2920	1	Ball-Joint
10:3	78-5801	1	Ball Link ASM
11	92-6884	1	Linkage-Steering, LH
11:1	9150854	1	Nut-Jam
11:2	78-2920	1	Ball-Joint
11:3	78-5811	1	Ball Link ASM
12	9267154	1	Screw
13	92-7057-03	1	Pin-Axle

Ref. No.	Part No.	Qty.	Description
14	78-1940-01	1	Arm-Front Spindle
15	78-2601-01	2	Spindle
16	302-5	2	Fitting-Grease
17	78-7960-01	1	Axle-Front
18	302-11	1	Fitting-Lube, 45°
19	9202324	2	Washer
20	5618	1	E-Ring


* Not illustrated

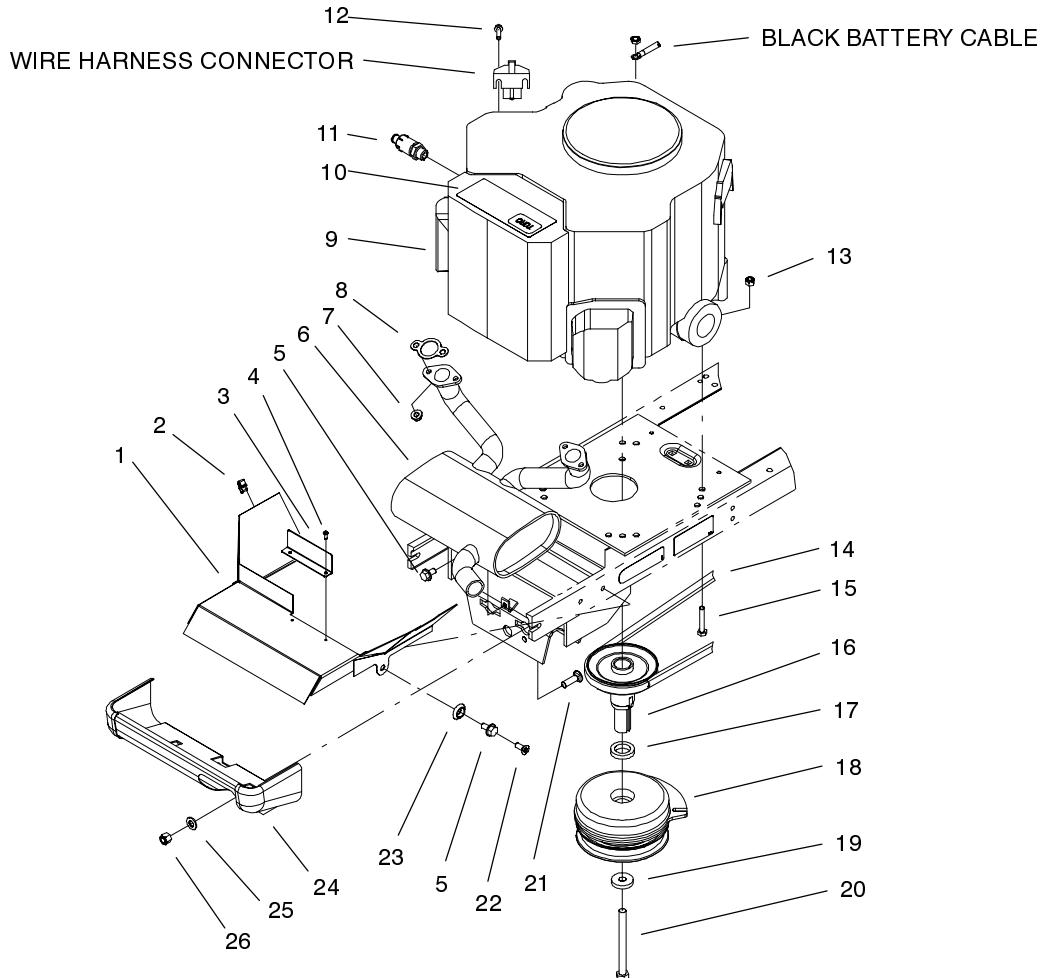

Sheet No.:5

Twin Cylinder Engine, Muffler and PTO Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-6950-03	1	Shield-Muffler, Twin	18	100-6059	1	Clutch-PTO (only on: 72108)
2	702366	1	Clip-Wire Retainer	18	100-6060	1	Clutch-Elec PTO (only on: 72116)
3	99-6764-03	1	Guard-Throttle (only on: 72116)	19	112843	1	Washer
4	100-1320	2	Screw-Panhead Torx (only on: 72116)	20	9114466	1	Screw-HH
5	32144-14	1	Screw-HWH (only on: 72116)	21	3231-25	2	Screw-CARR
5	32144-14	3	Screw-HWH (only on: 72108)	22	100-1325	2	Screw-Countersunk Torx (only on: 72116)
6	100-3543	1	Muffler-Twin	23	100-1326	2	Washer-Countersunk (only on: 72116)
7	92-6780	4	Nut-HF	24	100-3541-01	1	Muffler Shield ASM
8	93-0350	2	Gasket - Exhaust	25	3256-24	2	Washer-Flat
9	94-3515	1	Engine - Kohler 20 (only on: 72116)	26	3296-39	2	Nut-Lock, NI
9	94-3514	1	Engine - Kohler 20 (only on: 72108)				
10	94-2870	1	Decal - Toro Power + 20				
11	92-6877	1	Valve-Drain, Oil				
12	32144-118	2	Screw-PPH				
13	3296-29	4	Nut-Lock				
14	100-3469	1	V-Belt				
15	322-9	4	Screw-HH				
16	92-6888	1	Pulley-Engine (Hydro)				
17	100-1340	1	Spacer-Clutch				

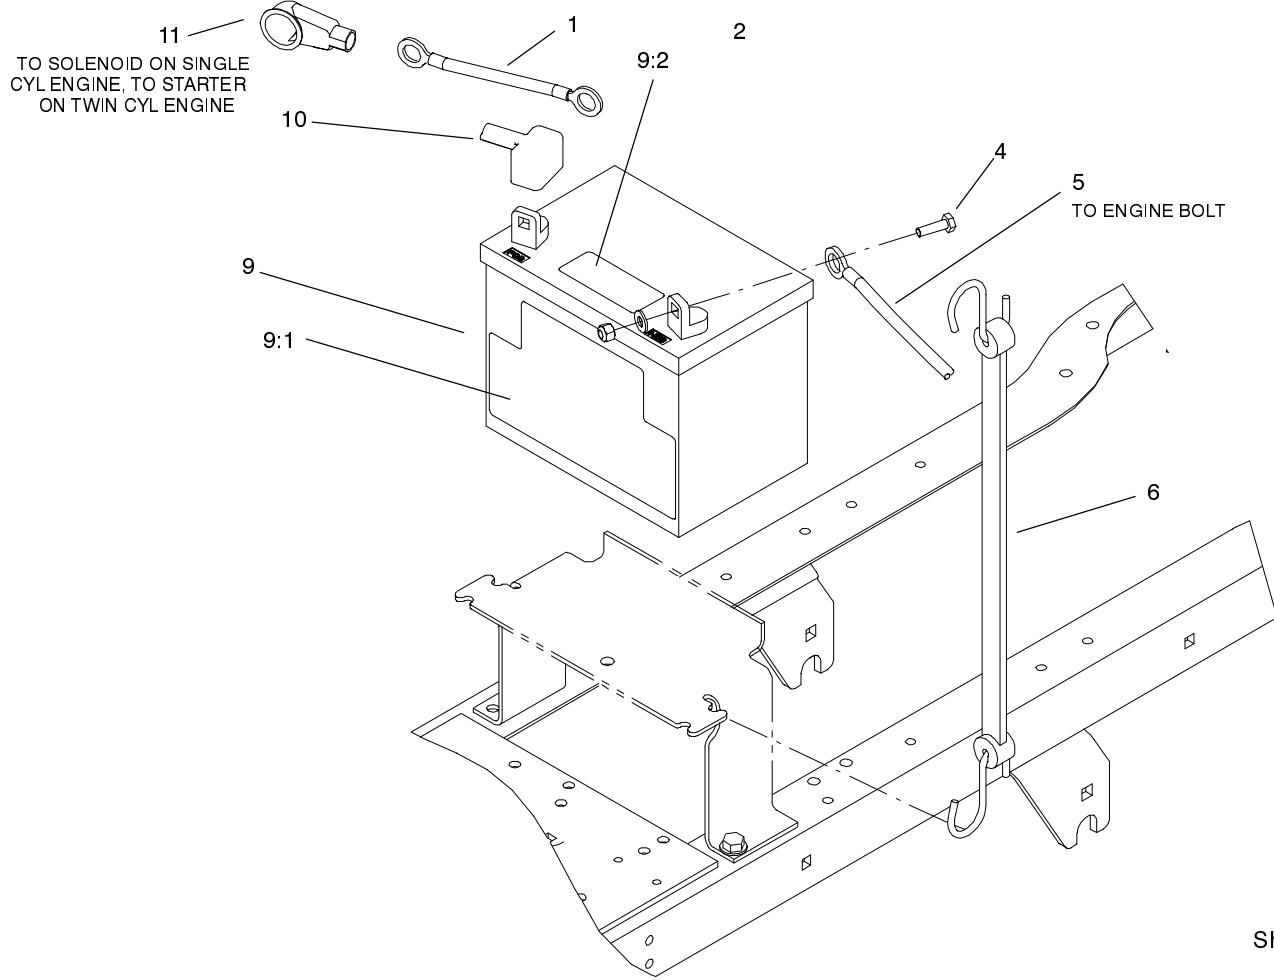


Sheet No.:6

Battery Assembly

Ref. No.	Part No.	Qty.	Description
1	92-6989	1	Wire
2	3296-42	2	Nut-Lock, NI
3	3256-22	2	Washer-Flat
4	321-5	2	Screw-HH
5	104-2460	1	Cable-Battery
6	104-2467	1	Strap-Battery
9	104-2492	1	Battery
9:1	104-4163	1	Decal-Battery
9:2	104-5091	1	Decal-Battery
10	28-8080	1	Boot-Terminal
11	93-3190	1	Boot-Terminal Insulator


Ref. No.	Part No.	Qty.	Description

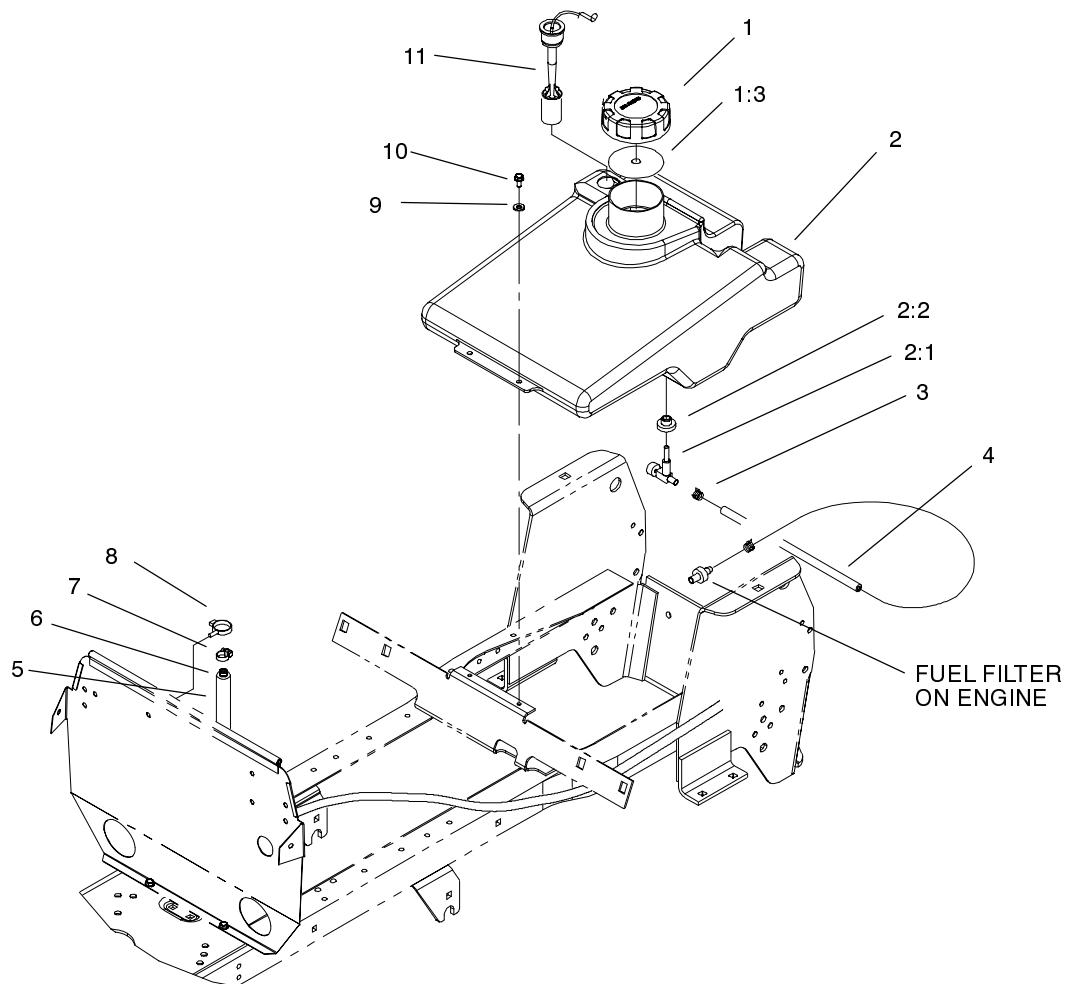

Sheet No.:7

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM				
1:3	88-4010	1	Gasket-Cap, Gas				
2	94-6927	1	Tank - Fuel				
2:1	104048	1	Valve-Fuel				
2:2	104047	1	Bushing				
3	2412-98	2	Clamp				
4	93-1627	1	Hose - Fuel Line Twin				
5	100-6072	1	Hose, Breather				
6	93-3817	1	Fitting, Vent				
7	2412-119	1	Clamp-Worm				
8	104-2490	1	Clamp-Hose				
9	3256-22	2	Washer-Flat				
10	32104-96	2	Screw-HH				
11	94-1716	1	Sensor - Low Fuel				

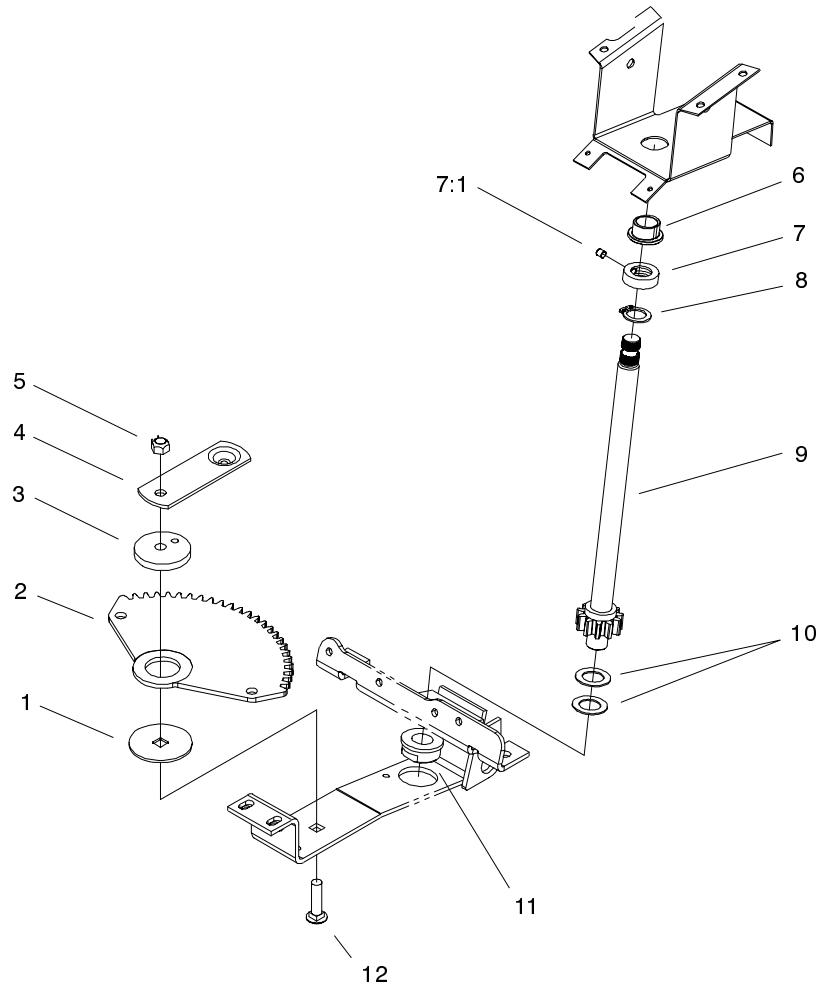


Sheet No.:8

Lower Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	111419	1	Bearing-Washer
2	78-2610	1	Gear-Sector
3	111418	1	Bushing
4	78-9150-03	1	Plate
5	108881	1	Nut
6	109189	1	Bearing-Flanged
7	111383	1	Collar
7:1	3245-32	1	Screw-HS
8	111646	1	Ring-Retaining
9	92-6702	1	Shaft-Lower Steering
10	1278	2	Washer
11	110391	1	Bearing Wheel
12	3231-4	1	Screw-CARR


Ref. No.	Part No.	Qty.	Description

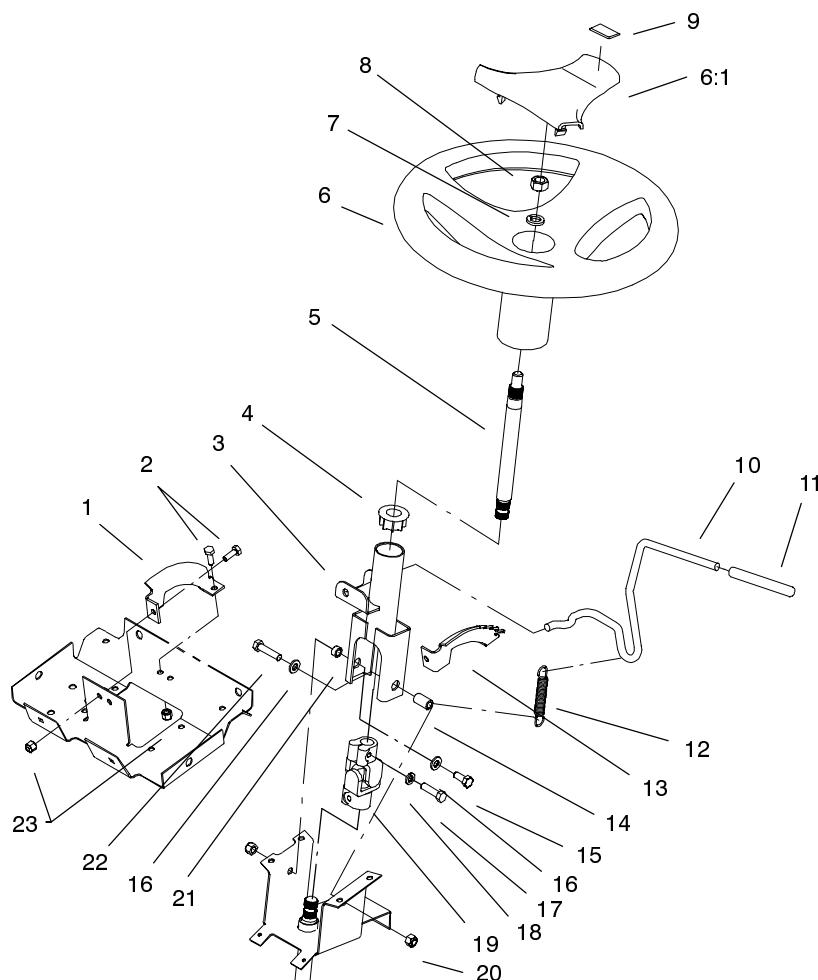

Sheet No.:9

Steering Wheel and Tilt Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-6777-03	1	Bracket - Support Column	22	322-17	1	Screw-HH
2	321-4	4	Screw-HH	23	3296-8	4	Nut-Lock NI
3	93-1148-03	1	Column				
4	93-1146	1	Bushing-Upper, Steering				
5	94-2874	1	Shaft-Short, Steering				
6	98-1472	1	Wheel - Steering, Toro				
6:1	98-1468	1	Cover - Wheel Steering				
7	3253-7	1	Washer-Lock				
8	3217-9	1	Nut-HH				
9	98-1459	1	Decal-Toro				
10	92-6971	1	Lever - Tilt				
11	92-6798	1	Cap - Rod Tilt				
12	93-1357	1	Spring - Extension, Steering				
13	92-6776	1	Bracket - Detent				
14	92-6999	1	Spacer - Yoke				
15	322-3	1	Screw-HH				
16	3256-23	2	Washer-Flat				
17	33114-030	2	Screw-HH				
18	3253-4	2	Washer-Lock				
19	92-6717	1	U Joint - Steering				
20	3296-29	2	Nut-Lock				
21	92-6998	1	Spacer - Yoke, Right				

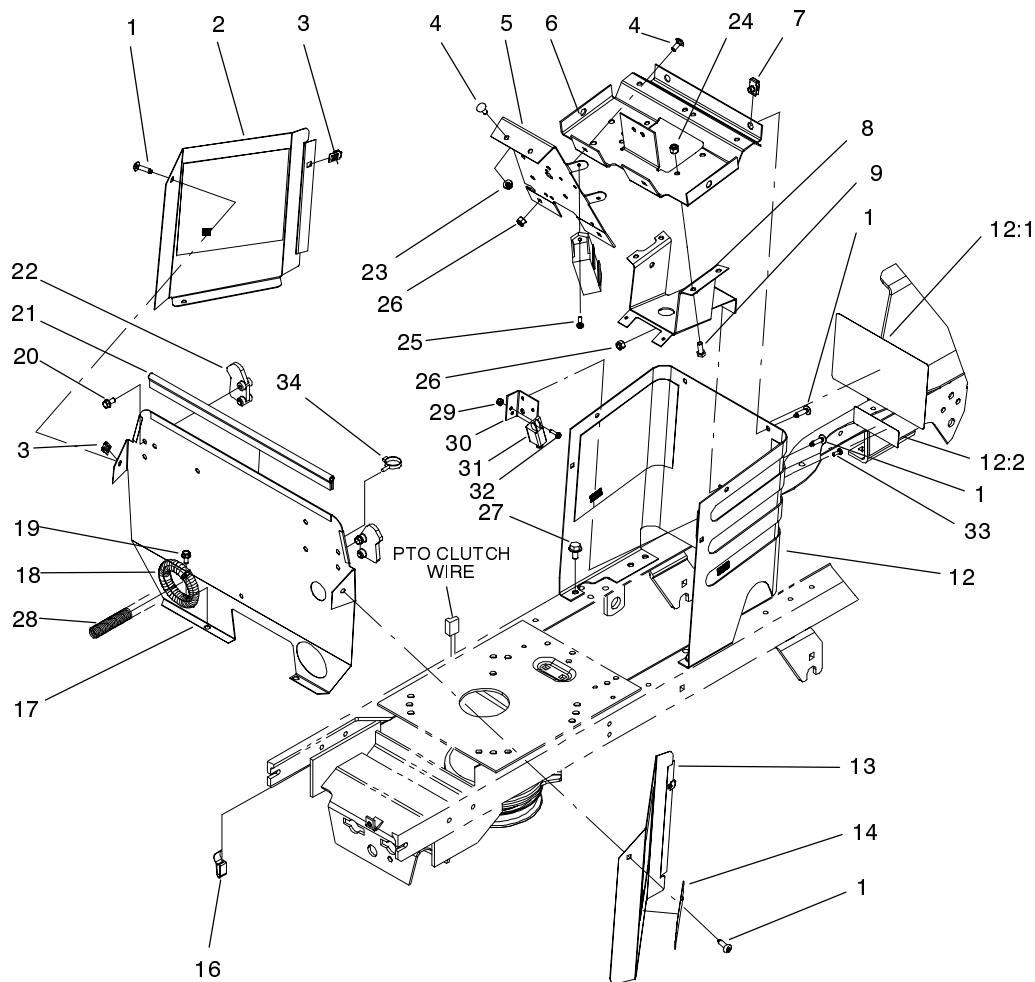


Sheet No.:10

Hoodstand and Firewall Assembly

Ref. No.	Part No.	Qty.	Description
1	92-7020	9	Screw-HH
2	92-6937-03	1	Cover-RH Side
3	92-7006	4	Nut
4	3229-11	4	Screw-CARR
5	104-5015-03	1	Panel-Support, Dash
6	92-6859-03	1	Support - Dash
7	107069	4	Clip
8	92-6778-03	1	Bracket-Lower Column
9	321-4	4	Screw-HH
10	104-5061	1	Hoodstand ASM (only on: 72108)
11	104-5062	1	Hoodstand ASM w/ Decals (He) (only on: 72116)
12:1	83-6620	1	Decal - Instruction
12:2	93-0302	1	Decal - Danger (only on: 72108)
12:2	93-7313	1	Decal-Slope/Hydro (only on: 72116)
13	92-6936-03	1	Cover-LH Side
14	95-0811	2	Decal - 270 Hydro
16	212-93	1	Clamp-Casing
17	104-0818-03	1	Firewall
18	24-7924	2	Cover-Drive Shaft
19	32144-4	2	Screw-HH


Ref. No.	Part No.	Qty.	Description
20	46-8093	2	Screw-Plastite
21	93-1131	1	Trim-Seal, Firewall
22	92-6960	2	Latch - Hood
23	32149-2	2	Nut
24	3296-8	4	Nut-Lock NI
25	32144-8	2	Screw-HH
26	3296-42	3	Nut-Lock, NI
27	32144-14	2	Screw-HWH
28	104-2455	1	Wireharness-270h
29	3296-1	2	Nut-Lock NI
30	104-0833-03	1	Bracket-Parking Brake
31	95-1653	1	Switch - Single Pole
32	3290-392	2	Screw - HHF
33	32104-118	2	Screw-PPH
34	104-5066	1	Clamp

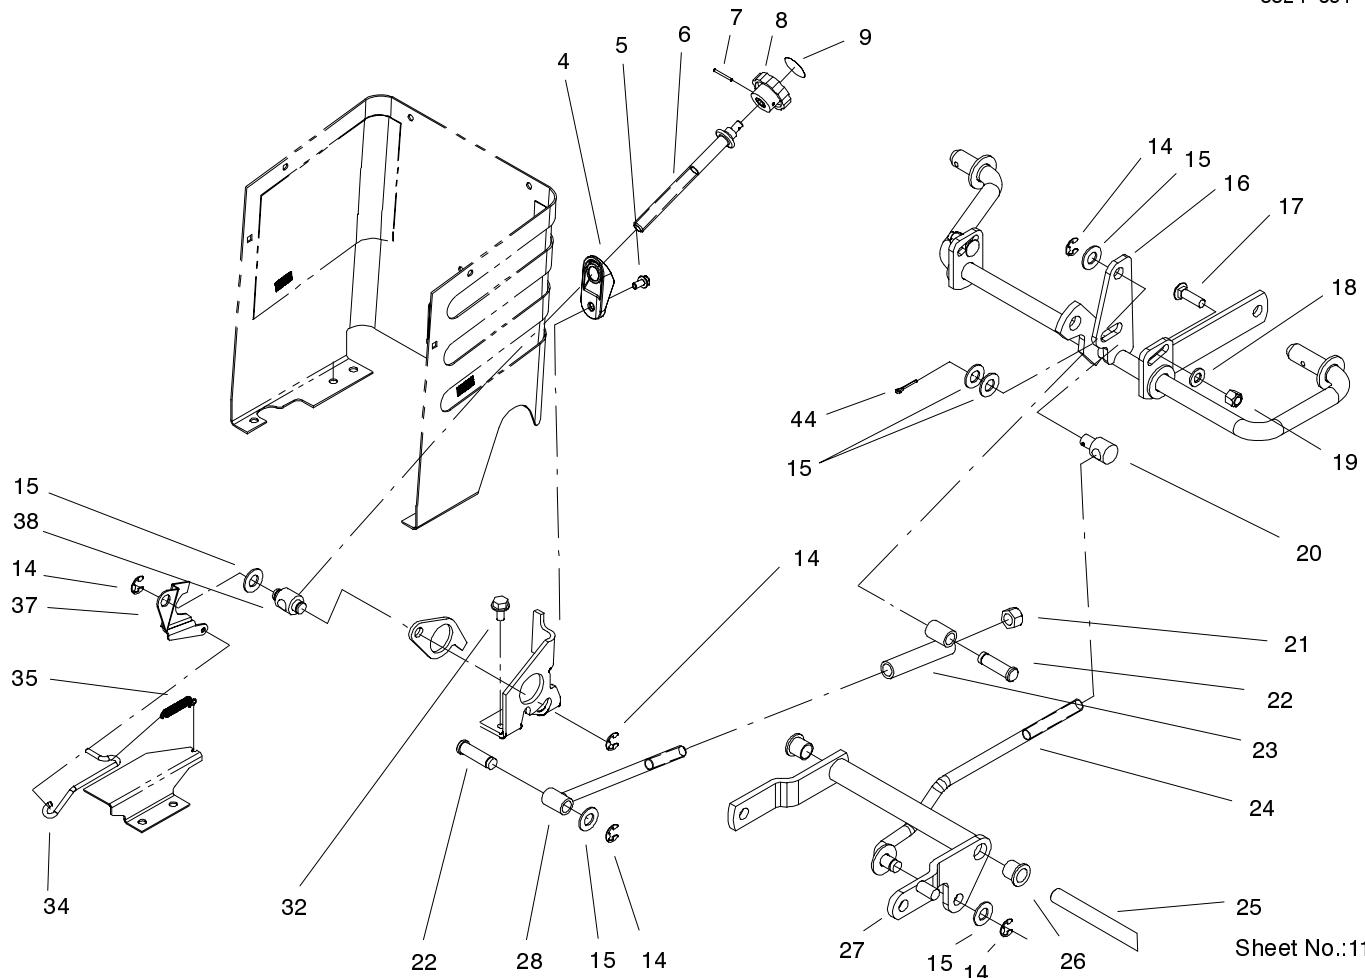

Sheet No.:11

Lift Lever and HOC Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
4	92-6794	1	Wedge - HOC	38	78-2140	1	Trunnion
5	32144-4	1	Screw-HH	44	3272-6	1	Pin-Cotter
6	92-6965	1	Rod - HOC				
7	933141	1	Pin-Spirol				
8	115593	1	Knob				
9	78-9740	1	Decal-Height Knob				
14	32120-47	5	Ring-Retaining				
15	3256-26	6	Washer-Flat				
16	79-3401-03	1	Shaft-Gage				
17	3231-25	2	Screw-CARR				
18	3256-24	2	Washer-Flat				
19	3296-39	2	Nut-Lock, NI				
20	8870	1	Rod-Trunnion Lift				
21	3296-23	1	Nut-Lock, NI				
22	79-1250	2	Pin				
23	78-7390	1	Tube				
24	78-2431	1	Rod				
25	94-4944	1	Shaft - Pedal Pivot				
26	256-90	2	Bushing-Flange				
27	92-6855-03	1	Arm-Pivot				
28	78-7360	1	Rod				
32	32144-14	2	Screw-HWH				
34	92-6978	1	Rod - HOC Indicator				
35	92-7007	1	Spring - Extension				
37	92-6979	1	Plate - HOC Gage				

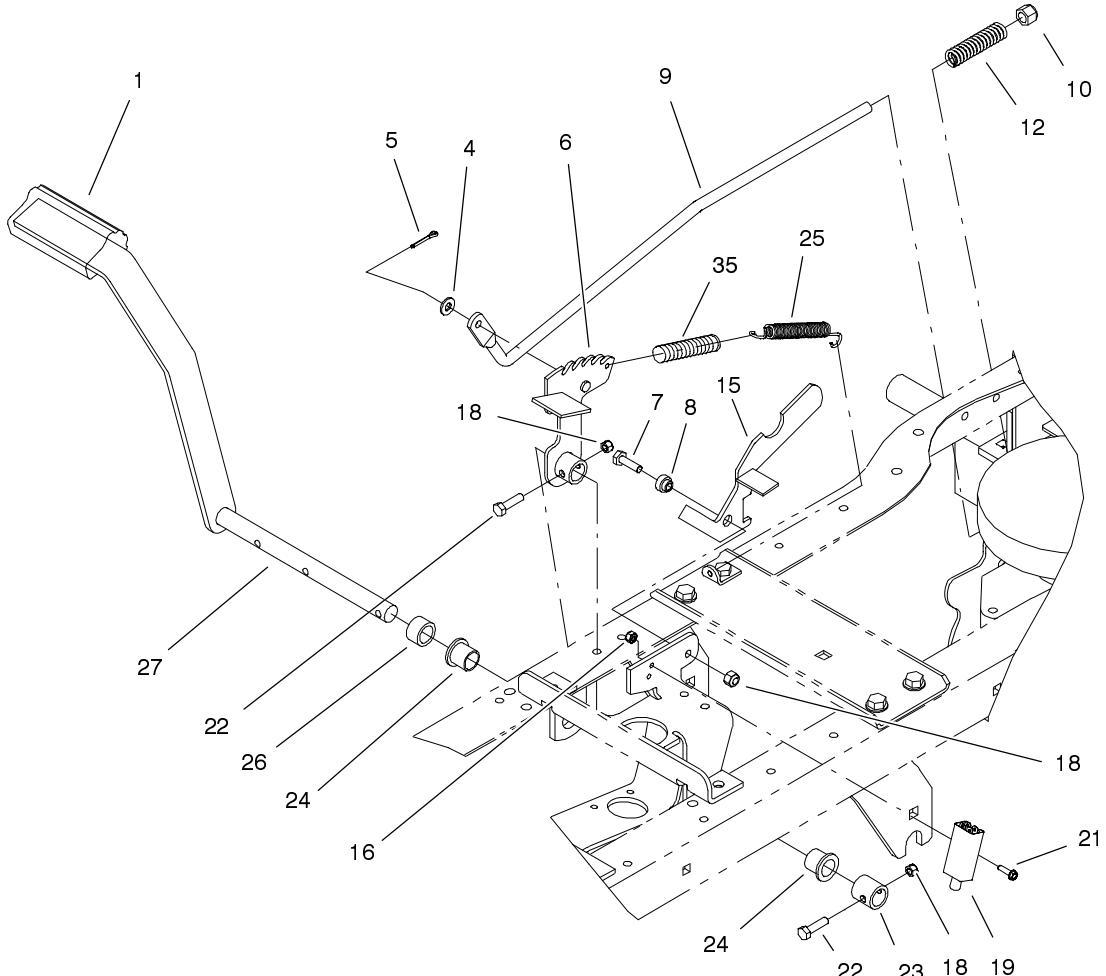


Sheet No.:12

Hydro Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	65-2920	1	Pad-Pedal
4	3256-22	1	Washer-Flat
5	3272-6	1	Pin-Cotter
6	104-0828	1	Brake ASM
7	321-5	1	Screw-HH
8	104-5036	1	Spacer-Shoulder
9	104-0836	1	Rod-Brake
10	3296-5	1	Nut-Lock, NI
12	104-0837	1	Spring-Compression
15	104-0834	1	Parking Brake ASM
16	3296-1	2	Nut-Lock NI
18	3296-42	3	Nut-Lock, NI
19	86-4690	1	Switch-Interlock
21	3290-392	2	Screw - HHF
22	321-13	2	Screw-HH
23	100-8733	1	Tube
24	256-90	2	Bushing-Flange
25	93-0540	1	Spring - Extension
26	92-6982	1	Spacer - Brake
27	100-3476-03	1	Pedal-Brake
35	94-1743	1	Tubing - Conduit


Ref. No.	Part No.	Qty.	Description

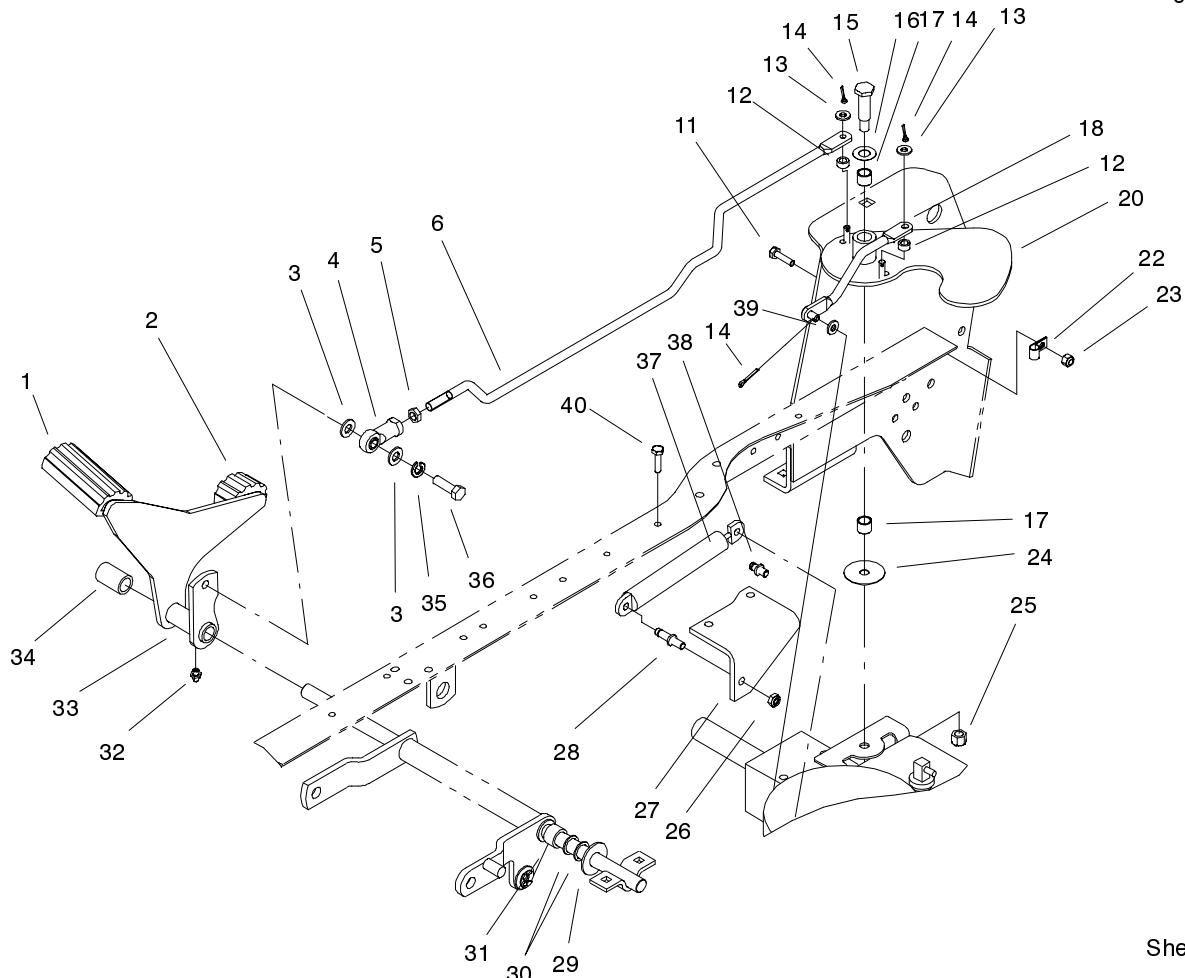

Sheet No.:13

Hydro Controls Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-6902	1	Pad-Pedal	34	92-6966	1	Spacer
2	92-6903	1	Pad-Pedal	35	3253-5	1	Washer-Lock
3	3256-24	2	Washer-Flat	36	323-7	1	Screw-HH
4	92-7008	1	Rod End - Female	37	100-8732	1	Damper-Gas
5	3220-3	1	Nut-Jam	38	100-6056	1	Control Arm-Pin
6	100-3450	1	Rod				Damper
11	321-4	1	Screw-HH	39	3256-23	1	Washer-Flat
12	92-6998	2	Spacer - Yoke, Right	40	32144-70	1	Screw-HH
13	3256-22	2	Washer-Flat				
14	3272-6	3	Pin-Cotter				
15	23-0310	1	Bolt-Shoulder				
16	98-3087	1	Washer				
17	256-1	2	Bushing				
18	100-3468	1	Rod-Bell Crank				
20	100-3451	1	Plate-Cruise				
22	2412-89	1	Clamp				
24	94-7575	1	Spacer - Cruise				
25	3296-59	1	Nut-Lock, NI				
26	3296-20	2	Nut-Lock NI				
27	100-3460-03	1	Bracket-Gas Damper				
28	100-6057	1	Pin-Damper Bracket				
29	94-6875	1	Washer				
30	9202154	2	Washer				
31	94-4945	1	Spacer				
32	302-26	1	Zerk				
33	100-6062-03	1	Pedal ASM				

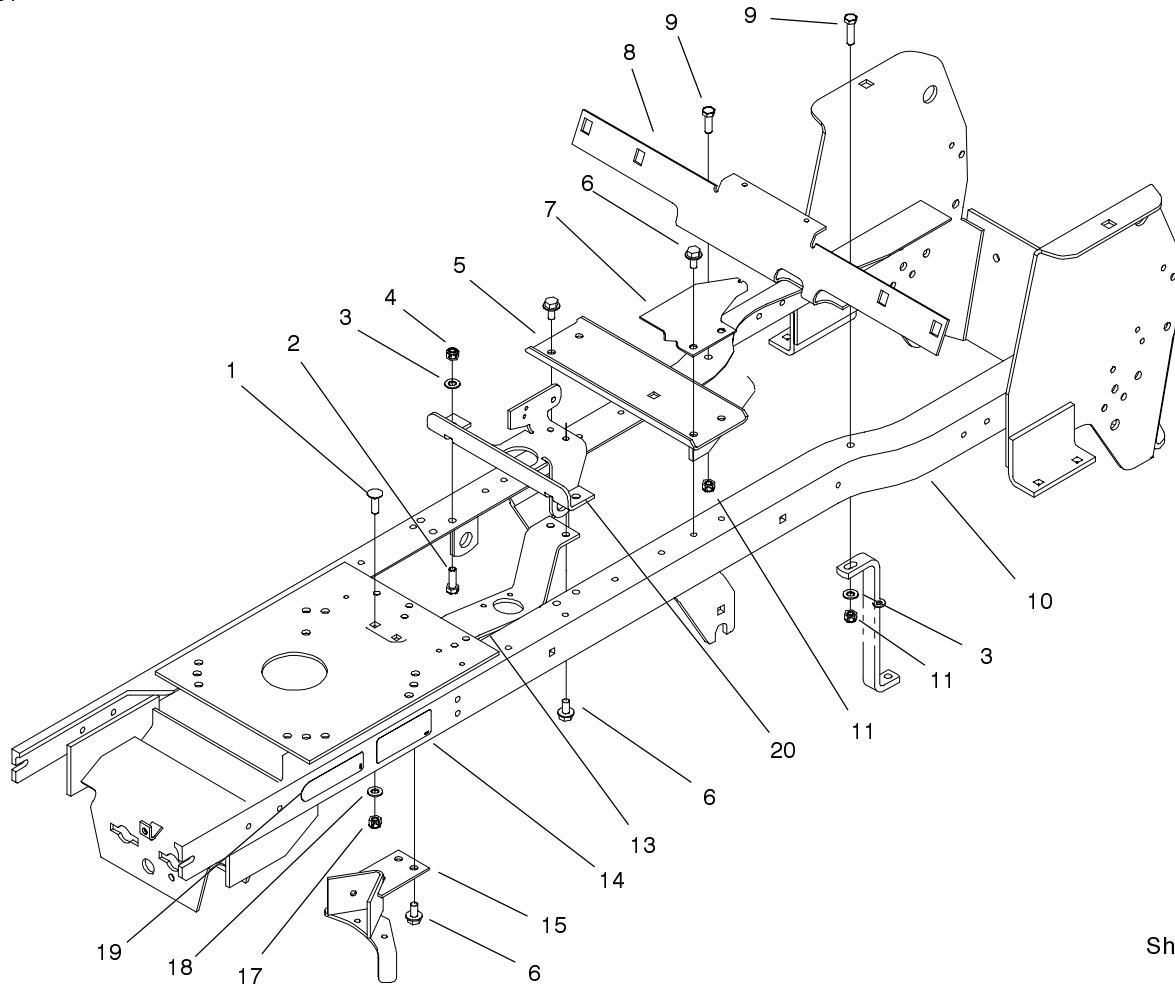


Sheet No.:14

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	3230-2	2	Screw-CARR
2	322-5	2	Screw-HH
3	3256-23	3	Washer-Flat
4	3296-29	2	Nut-Lock
5	92-6868-03	1	Bracket-Idler Plate
6	32144-14	8	Screw-HWH
7	92-6964-03	1	Bracket-HOC Gage
8	100-1341-03	1	Fender-Support
9	322-6	2	Screw-HH
10	104-5014-03	1	Frame ASM
11	3296-29	2	Nut-Lock
13	104-0825-03	1	Bracket-Steering
14	93-7324	2	Decal-Belt Instructions (only on: 72116)
15	100-3526-03	1	PTO Stop ASM
17	3296-29	2	Nut-Lock
18	3256-23	2	Washer-Flat
19	92-8747	2	Decal Attach-A-Matic
20	104-0826-03	1	Bracket-Brake


Ref. No.	Part No.	Qty.	Description

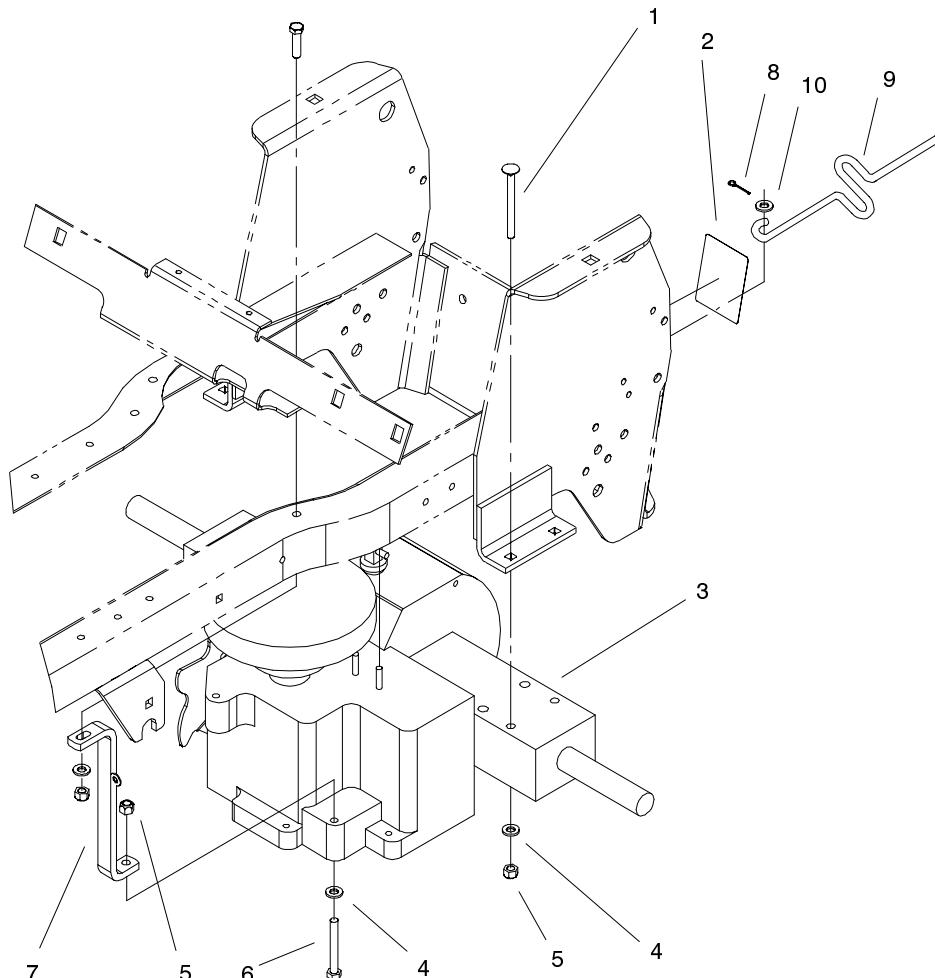

Sheet No.:15

Hydro Transaxle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3230-11	4	Screw-CARR				
2	92-6726	1	Decal - Hydro Valve (only on: 72108)				
2	92-7090	1	Decal - Bypass Valve (only on: 72116)				
3	104-4310	1	Transaxle-Hydrostatic				
4	3256-23	5	Washer-Flat				
5	3296-29	5	Nut-Lock				
6	322-11	1	Screw-HH				
7	100-7536-03	1	Torque Strap ASM				
8	3272-2	1	Pin-Cotter				
9	104-5037	1	Rod-Bypass				
10	3256-22	1	Washer-Flat				

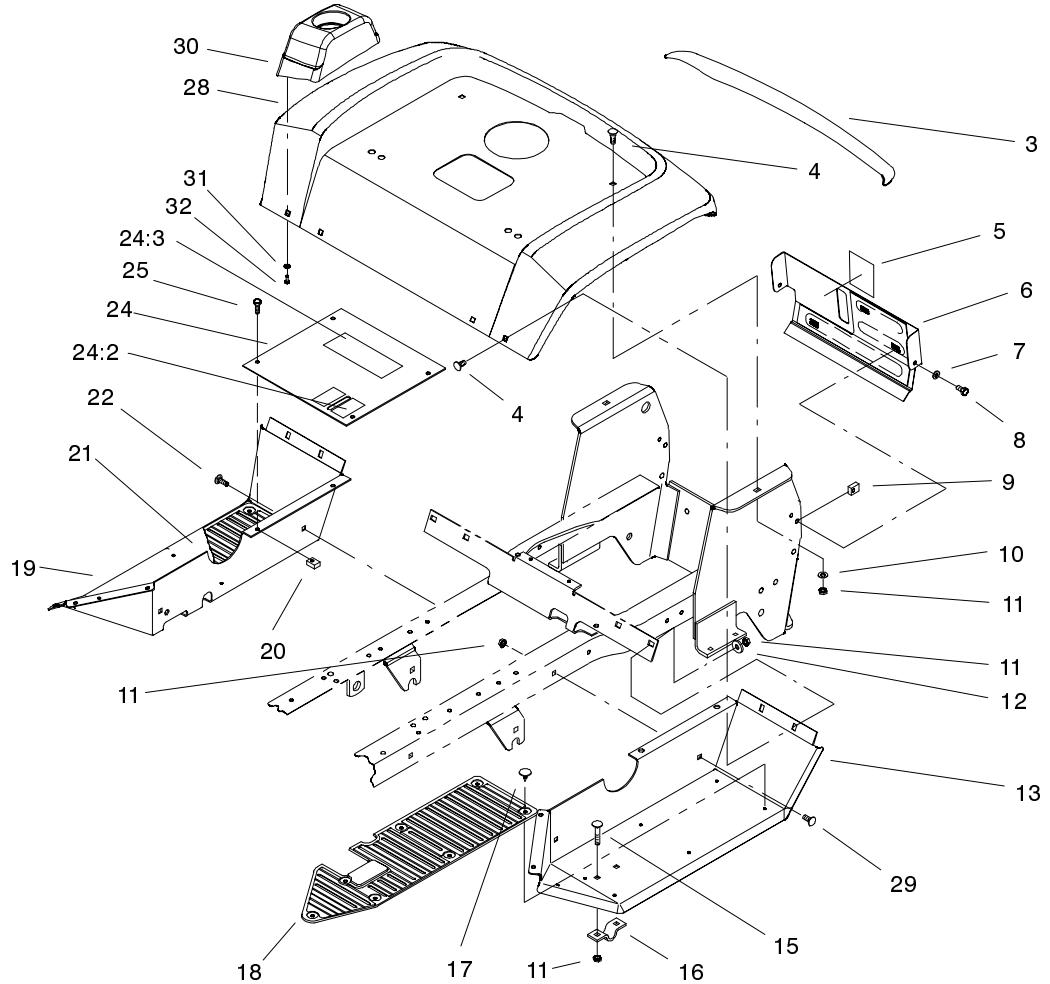


Sheet No.:17

Fender and Footrests Assembly

Ref. No.	Part No.	Qty.	Description
3	95-0802	1	Decal - Rear Fender
4	3230-31	6	Screw-CARR
5	92-6727	1	Decal - Fuel Level
6	99-6765-03	1	Panel ASM-Rear
7	3256-22	2	Washer-Flat
8	321-4	2	Screw-HH
9	609900	2	Nut-Speed
10	3256-23	2	Washer-Flat
11	3296-29	14	Nut-Lock
12	94-2869	4	Washer
13	94-1711-01	1	Footrest-LH Hydro
15	3230-1	4	Screw-CARR
16	106288	2	Clamp
17	3290-479	14	Fastener-Panel
18	92-6688	1	Foot Mat-LH
19	92-6747-01	1	Footrest-RH
20	107069	4	Clip
21	92-6687	1	Foot Mat-RH
22	3230-23	3	Screw-CARR
24	94-4243	1	Plate - Footrest w/Decals (only on: 72116)
24	93-0489	1	Plate - Footrest (only on: 72108)
24:2	92-6725	1	Decal - HOC (only on: 72108)


Ref. No.	Part No.	Qty.	Description
24:2	92-7092	1	Decal - HOC (only on: 72116)
24:3	93-7314	1	Decal - Danger (only on: 72116)
24:3	92-8946	1	Decal - Danger (only on: 72108)
25	92-7020	4	Screw-HH
28	104-5030-01	1	Fender ASM
29	3230-23	1	Screw-CARR
30	104-0838	1	Holder-Cup
31	3256-51	4	Washer-Flat
32	32144-20	4	Screw-Thread Forming

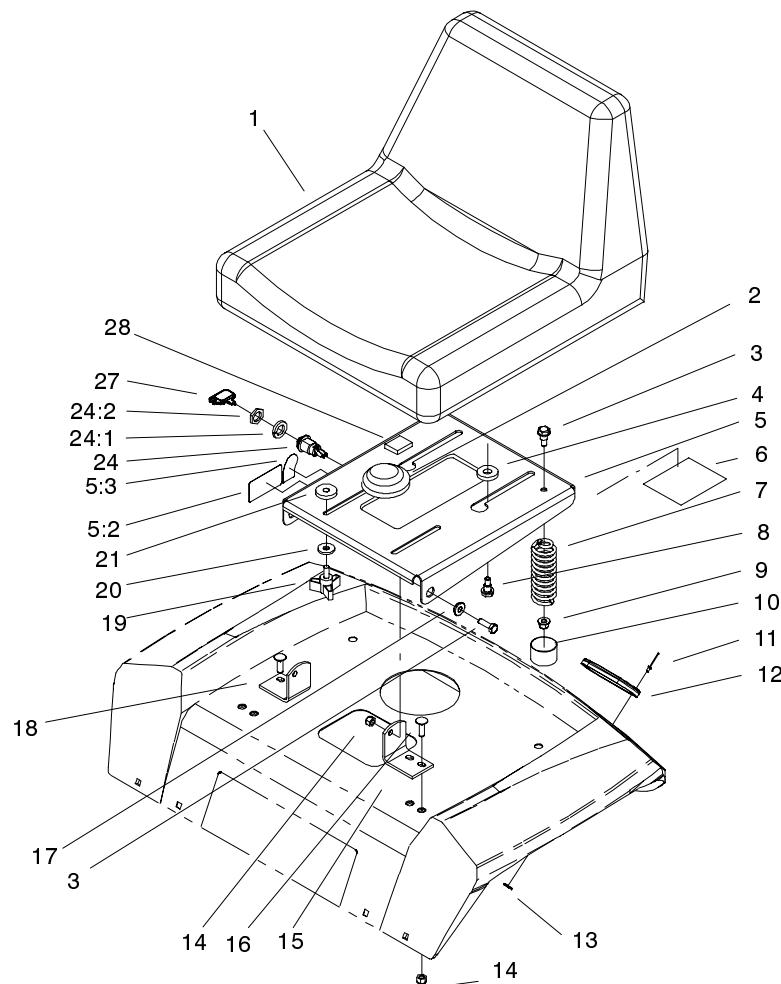

Sheet No.:18

Seat Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-2463	1	Seat-High Back	15	79-0950-03	1	Bracket-Pivot, RH
2	100-3524	1	Switch-Seat	16	3230-2	4	Screw-CARR
3	322-5	4	Screw-HH	17	105503	2	Bushing
4	92-6750	2	Spacer - Nylon	18	79-0970-03	1	Bracket-Pivot LH
5	104-5028	1	Support Seat ASM, He (only on: 72116)	19	700806	2	Knob
5	104-5027	1	Support Seat ASM (only on: 72108)	20	94-2869	2	Washer
5:2	99-2986	1	Decal-Danger (only on: 72116)	21	109989	2	Spacer - Nylon
5:2	99-2985	1	Decal-Danger (only on: 72108)	24	46-5780	1	Switch-Starter
5:3	99-5340	1	Decal-Switch (only on: 72116)	24:1	3254-5	1	Washer-Lock, Internal
5:3	99-5339	1	Decal (only on: 72108)	24:2	218-461	1	Nut-HH
6	114621	1	Decal-Europe, Noise (only on: 72116)	27	62-7770	1	Key-Ignition
7	92-7054	2	Spring - Compression	28	104-2488	1	Foam-Switch, Seat
8	92-6986	2	Bolt - Shoulder				
9	3296-58	2	Nut-Lock NI				
10	701178	2	Cap-Protector				
11	3290-282	4	Rivet-Pop, Steel				
12	106557	2	Reflector-Stick On				
13	3256-49	4	Washer-Flat				
14	3296-29	6	Nut-Lock				

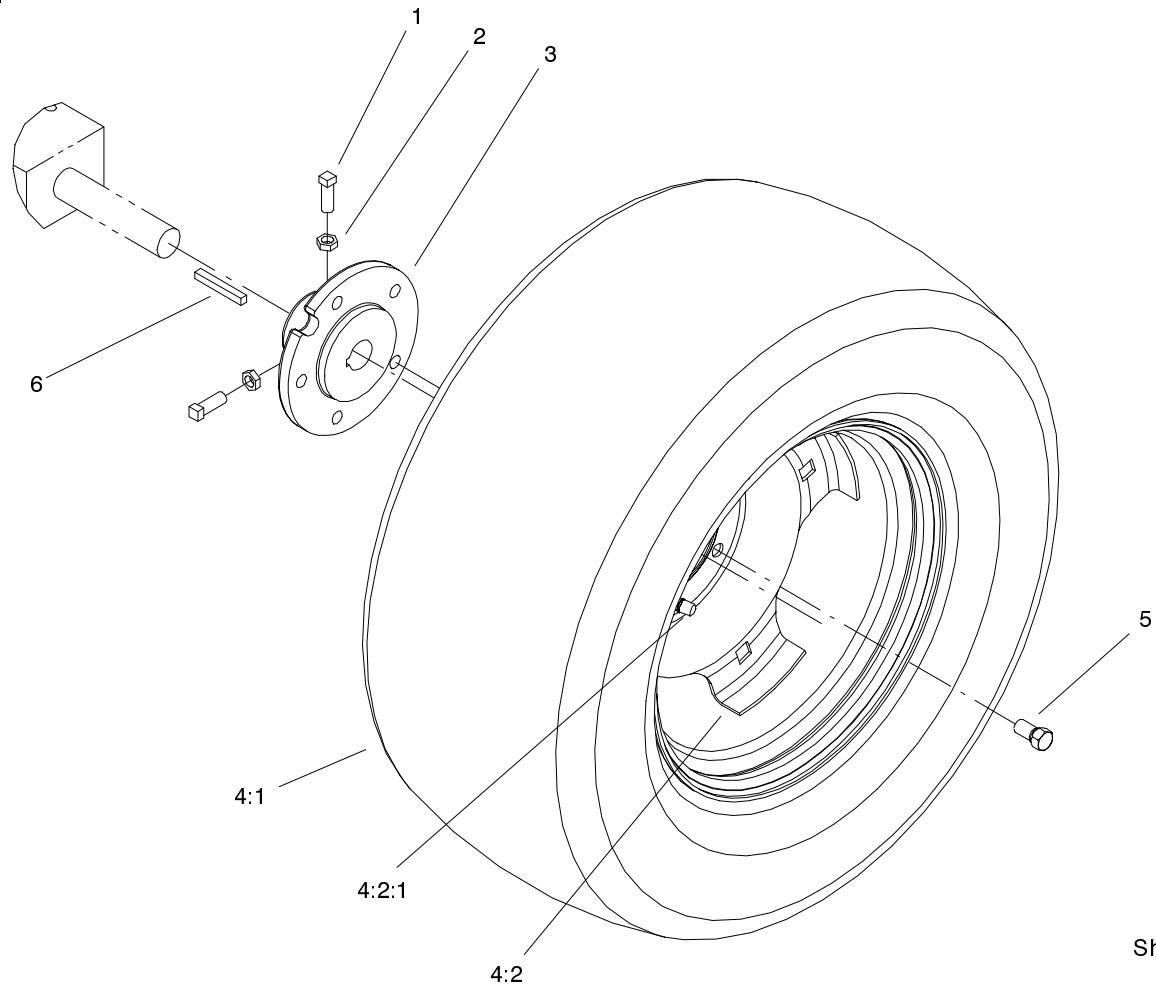


Sheet No.:20

Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	3243-5	4	Screw-Set
2	3218-3	4	Nut-Jam
3	93-3659-03	2	Hub-Wheel
4		2	Wheel & Tire ASM - Rear
4:1	99-2334	1	Tire
4:2	78-1221	1	Wheel
4:2:1	5108	1	Valve
*4:99	7007	1	Tube-Inner
5	83-2720	10	Lug-Bolt
6	5-1336	2	Key

Ref. No.	Part No.	Qty.	Description


* Not illustrated

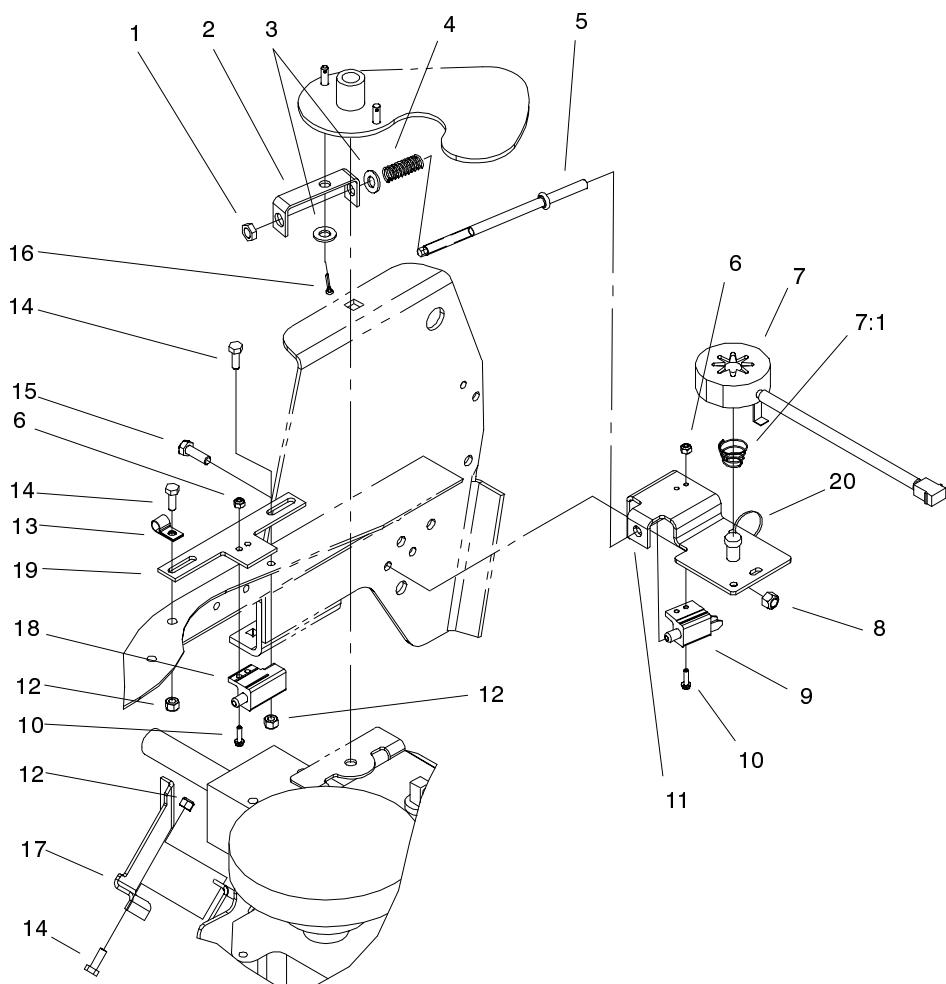

Sheet No.:21

Cruise Control Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3296-5	1	Nut-Lock, NI				
2	100-6055-03	1	Bracket				
3	3256-24	2	Washer-Flat				
4	38-2340	1	Spring-Compression				
5	100-1348	1	Rod				
6	3296-1	4	Nut-Lock NI				
7	99-8090	1	Magnet ASM				
7:1	93-6601	1	Spring - Compression				
8	3296-29	2	Nut-Lock				
9	95-1653	1	Switch - Single Pole				
10	3290-392	4	Screw - HHF				
11	100-3452-03	1	Bracket-Cruise				
12	3296-42	3	Nut-Lock, NI				
13	2412-89	1	Clamp				
14	321-4	3	Screw-HH				
15	322-5	2	Screw-HH				
16	3272-6	1	Pin-Cotter				
17	100-8722-03	1	Arm				
18	100-8725	1	Switch - Double Pole				
19	100-8723-03	1	Plate-Switch				
20	614249	1	Tie Strap				

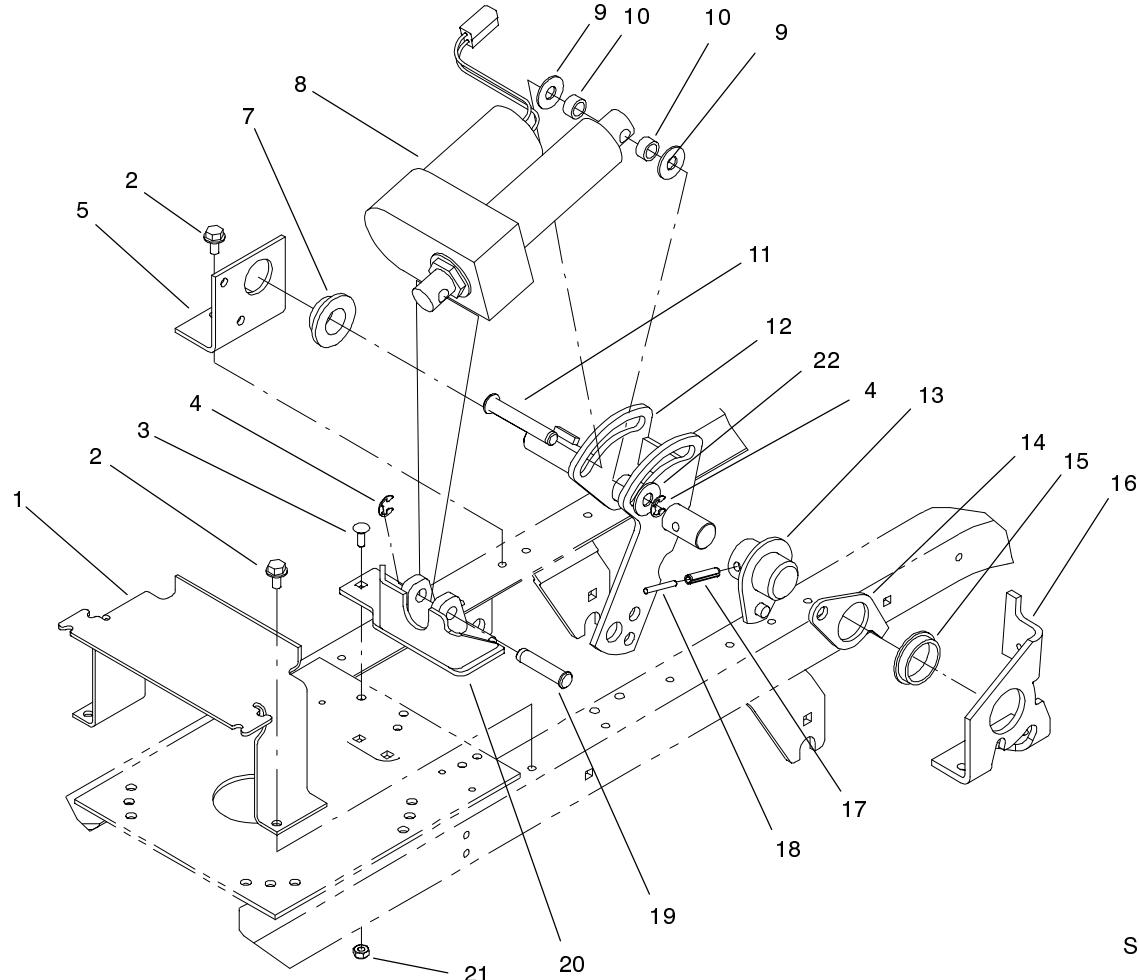


Sheet No.:22

Power Lift Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0812-03	1	Bracket-Battery
2	32144-14	4	Screw-HWH
3	3230-2	5	Screw-CARR
4	5618	2	E-Ring
5	93-0523-03	1	Bracket-Pivot, Linkage
7	106269	1	Bearing-Flange
8	104-0811	1	Actuator
9	3256-5	2	Washer-Flat
10	104-0843	2	Spacer
11	104-0842	1	Pin-Clevis
12	104-0817-03	1	Lift Arm ASM
13	94-3553	1	End Cap
14	94-4927	1	Arm - HOC
15	92-6869	1	Bushing
16	94-4928	1	Bracket - Lift Arm
17	32121-25	1	Pin-Roll
18	32121-103	1	Pin-Spring
19	104-0823	1	Pin-Clevis
20	104-0815-03	1	Actuator Bracket ASM
21	3296-29	5	Nut-Lock
22	104-5064	1	Washer-Flat


Ref. No.	Part No.	Qty.	Description

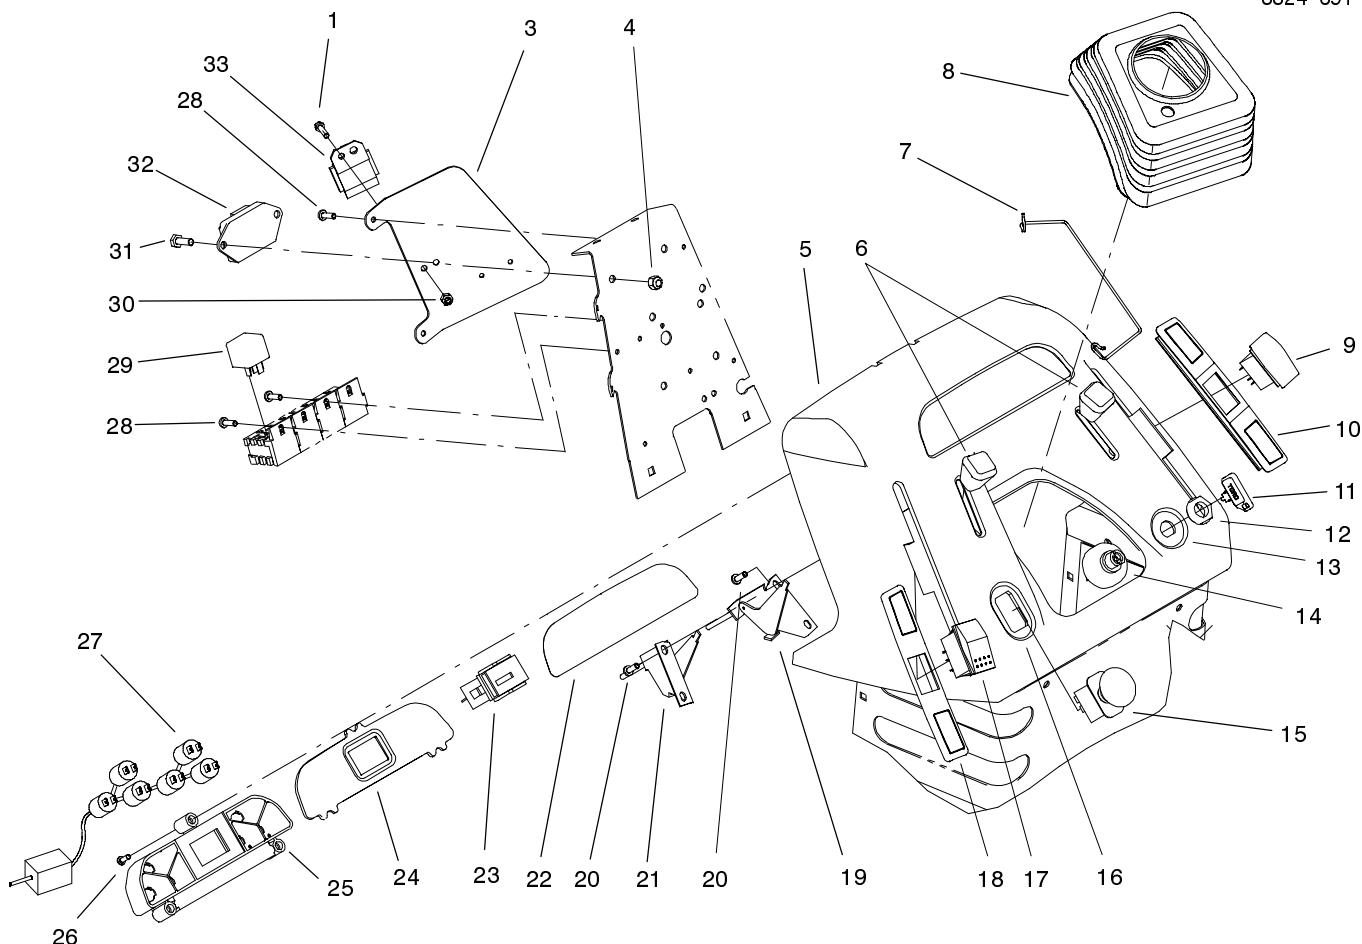

Sheet No.:23

Dash Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32105-12	2	Screw	17	94-1742	1	Switch
3	104-0848-03	1	Panel-Support, Aux	18	94-3513	1	Cover - Lift (only on: 72116)
4	3296-42	2	Nut-Lock, NI	18	94-1710	1	Cover-Lift (only on: 72108)
5	94-1894	1	Dash	19	92-6784	1	Control-Throttle Twin
6	66-0120	2	Knob	20	32144-32	4	Screw
7	94-2966	1	Clip - Boot	21	92-6783	1	Control - Choke Twin
8	92-6680	1	Boot-Steering	22	99-8035	1	Decal - Dash Lens
9	93-0527	1	Switch - Cruise	23	94-4208	1	Hourmeter
10	93-0533	1	Cover - RH Slot (only on: 72116)	24	92-6705	1	Lens - Dash
10	93-0516	1	Cover - RH Slot (only on: 72108)	25	94-1714	1	Housing - Light
11	62-7770	1	Key-Ignition	26	94-6961	3	Screw
12	700919	1	Nut	27	99-8072	1	Harness-6 Lamp
13	93-7255	1	Decal - Dash (only on: 72116)	28	32144-8	4	Screw-HH
13	92-6721	1	Decal - Throttle, Ignition (only on: 72108)	29	98-7249	4	Relay-Speedometer
14	92-6785	1	Switch - Ignition	30	3296-2	2	Nut-Lock
15	93-9998	1	Switch - PTO	31	321-4	2	Screw-HH
16	93-7256	1	Decal - Dash PTO/Choke (only on: 72116)	32	99-3701	1	Module-Clutch
16	92-6720	1	Decal - PTO/Choke (only on: 72108)	33	99-1933	1	Module-low Voltage

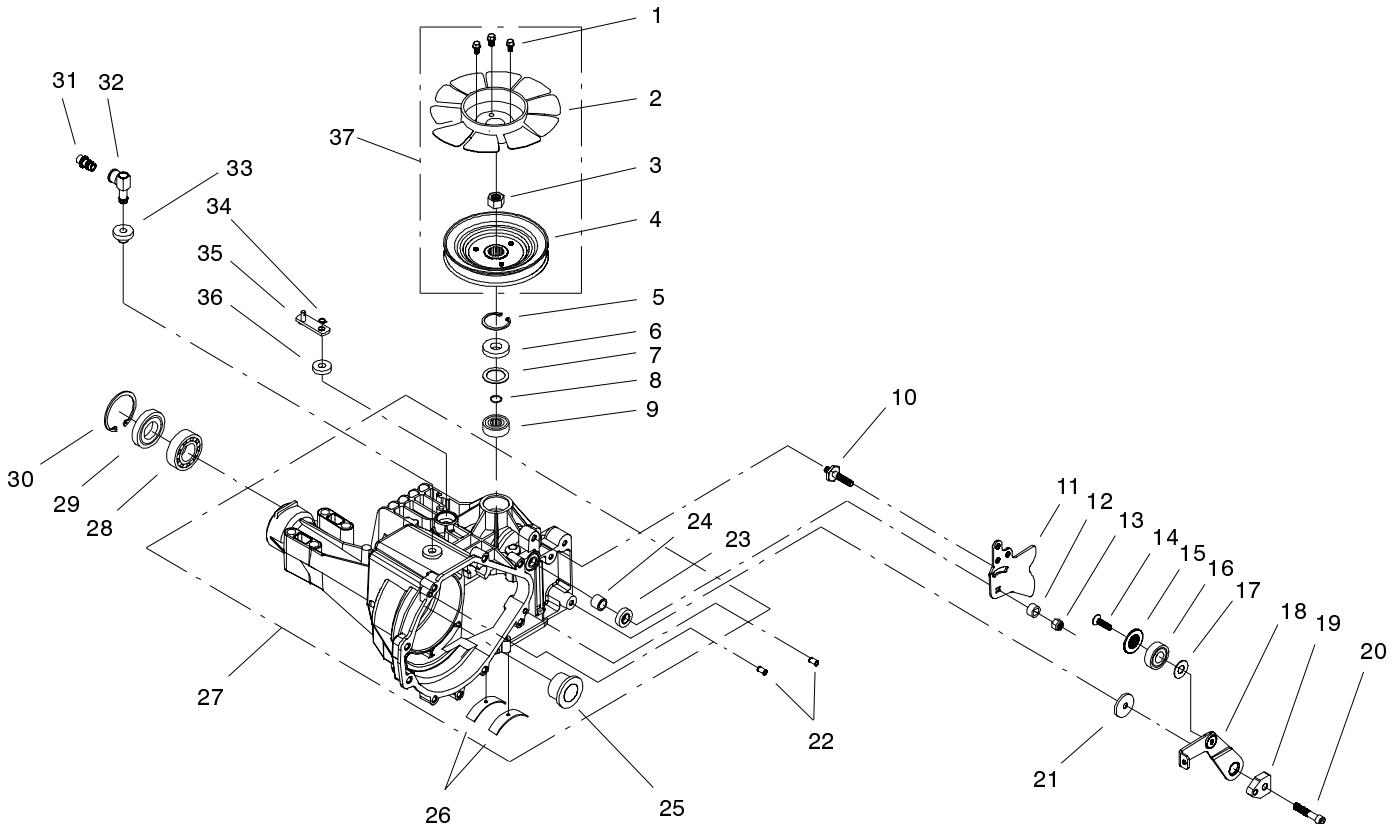


Sheet No.:3

Housing and Fan Assembly

Ref. No.	Part No.	Qty.	Description
1	104-2164	3	Screw
2	104-2162	1	Fan
3	104-2168	1	Nut-Hex
4	104-2161	1	Pulley
5	94-1903	1	Ring - Retaining
6	92-6543	1	Seal - Lip
7	104-2104	1	Spacer
8	94-1902	1	Ring - Wire Retaining
9	94-1904	1	Bearing - Shaft Ball
10	104-2116	1	Stud
11	100-6093	1	Arm-Control
12	104-2163	1	Spacer, Trunnion
13	104-2159	1	Nut-Hex Lock
14	104-2158	1	Screw-Countersunk
15	104-2157	1	Spacer-Locating
16	104-2156	1	Bearing
17	94-1933	1	Washer
18	104-2114	1	Arm-Return
19	104-2119	1	Puck-Adjusting
20	104-2155	1	Screw
21	104-2154	1	Washer
22	104-2170	2	Pin
23	92-6544	1	Seal - Lip
24	104-2113	1	Trunnion Bushing
25	104-2139	2	Bearing-Flange
26	94-1905	2	Bearing - Cradle


Ref. No.	Part No.	Qty.	Description
27	104-2101	1	Main Housing ASM
28	104-2143	2	Bearing-Ball
29	104-2144	2	Seal
30	104-2169	2	Ring-Retaining
31	104-2167	1	Cap ASM-Vent
32	104-2166	1	Fitting
33	104-2165	1	Bushing, Rubber
34	936109	1	Ring - Retaining
35	104-2117	1	Arm-Bypass
36	92-6545	1	Seal - Lip
37	104-2190	1	Kit-Fan/Pulley

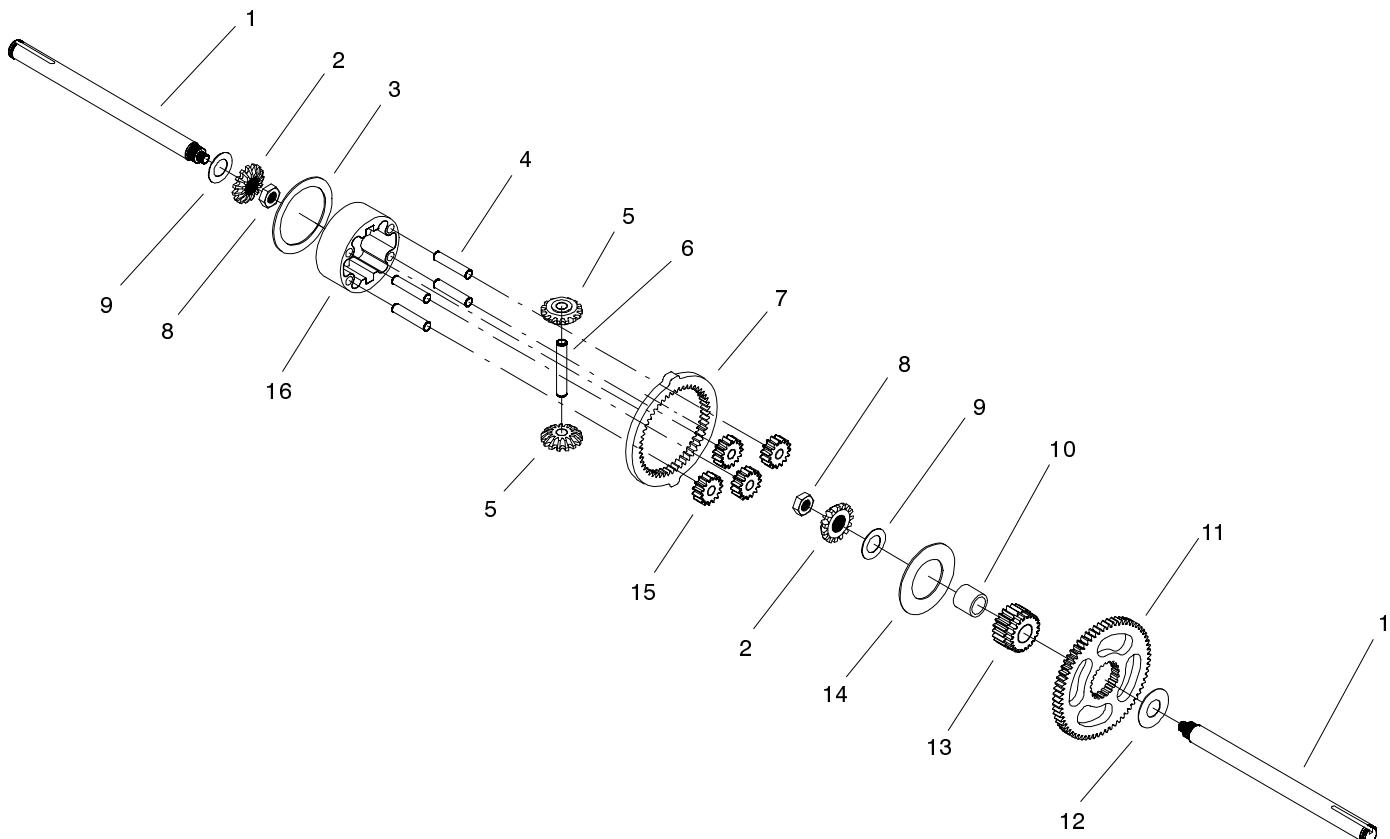

Sheet No.:4

Differential Gear Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-2145	2	Shaft, Axle				
2	104-2135	2	Gear-Miter				
3	104-2138	1	Plate-Thrust				
4	104-2128	4	Pin, Carrier				
5	104-2136	2	Gear-Miter				
6	104-2137	1	Shaft				
7	104-2133	1	Gear-Ring, 51t				
8	104-2142	2	Nut-HJ				
9	104-2140	2	Washer				
10	104-2160	1	Bearing-Sleeve				
11	104-2130	1	Gear-Spur, 67t				
12	104-2141	1	Washer				
13	104-2131	1	Gear-Sun, 21t				
14	104-2132	1	Plate-Thrust, Planet				
15	104-2129	4	Gear-Planet, 15t				
16	104-2134	1	Carrier-Planetary				

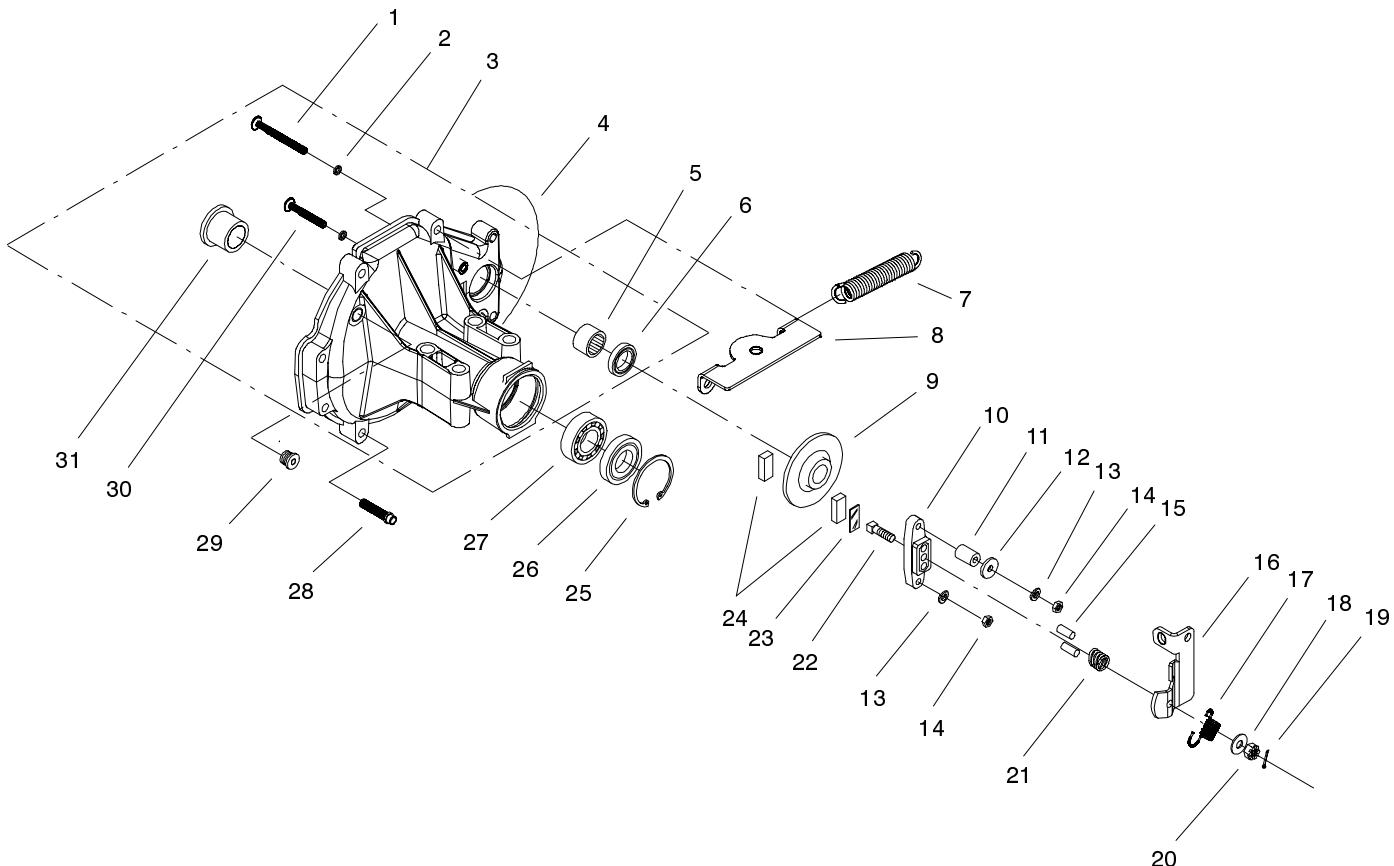


Sheet No.:5

Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	104-2182	1	Bolt
2	104-2191	4	O-Ring
3	104-2102	1	RH Housing ASM
4	104-2147	1	Sealant
5	104-2149	1	Bearing-Needle
6	104-2152	1	Seal-Lip
7	104-2118	1	Spring-Return
8	100-1349	1	Bracket-Bell Crank
9	104-2153	1	Disk-Brake
10	104-2173	1	Yoke-Brake
11	104-2180	1	Spacer
12	104-2183	1	Washer
13	104-2177	2	Washer-Lock
14	104-2178	2	Nut
15	104-2176	2	Pin-Brake
16	104-0841	1	Arm-Brake
17	104-2184	1	Spring-Brake Arm
18	104-2146	1	Washer
19	104-2179	1	Pin-Cotter
20	93-3807	1	Nut - Castle
21	104-2188	1	Spring-Brake, Anti-Drag
22	104-2174	1	Bolt-SQH
23	104-2181	1	Puck-Plate
24	104-2171	2	Puck-Brake
25	104-2169	2	Ring-Retaining


Ref. No.	Part No.	Qty.	Description
26	104-2144	2	Seal
27	104-2143	2	Bearing-Ball
28	104-2148	9	Screw-TTH
29	104-2189	1	Plug, Straight Thread
30	104-2172	1	Bolt
31	104-2139	2	Bearing-Flange

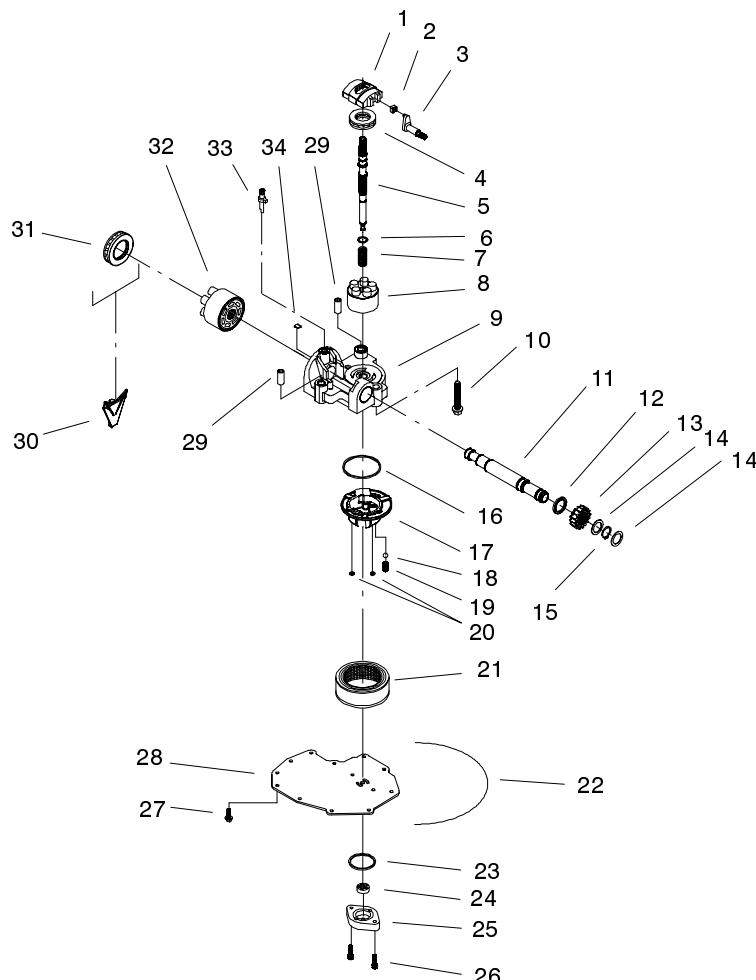

Sheet No.:6

Cylinder Block Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-1907	1	Swashplate - Variable	27	104-2120	11	Screw
2	94-1910	1	Guide - Slot	28	104-2121	1	Cover-Lower
3	104-2112	1	Trunnion ASM	29	94-1927	2	Pin
4	94-6922	1	Bearing - Thrust	30	104-2127	1	Retainer-Motor Bearing
5	104-2105	1	Shaft-Input	31	94-6923	1	Bearing - Thrust
6	94-1937	1	Washer - Block Thrust	32	94-1913	1	Cylinder Block ASM
7	94-1936	1	Spring - Block	33	94-1914	1	Actuator - Bypass
8	104-2106	1	Cylinder Block ASM	34	94-6925	1	Plate - Bypass
9	104-2103	1	Kit, Center Section				
10	94-6926	3	Bolt				
11	104-2107	1	Shaft-Output				
12	104-2109	1	Spacer				
13	104-2110	1	Gear-Pinion, 16t				
14	104-2150	2	Washer				
15	104-2151	1	Ring-Retaining				
16	104-2185	1	O-Ring				
17	104-2156	1	Bearing				
18	104-2187	1	Ball, 7/16				
19	104-2186	1	Spring, Relief				
20	104-2191	4	O-Ring				
21	104-2125	1	Filter				
22	104-2147	1	Sealant				
23	104-2123	1	O-Ring				
24	104-2122	1	Gerotor ASM				
25	104-2124	1	Gerotor Cover				
26	104-2111	2	Capscrew				

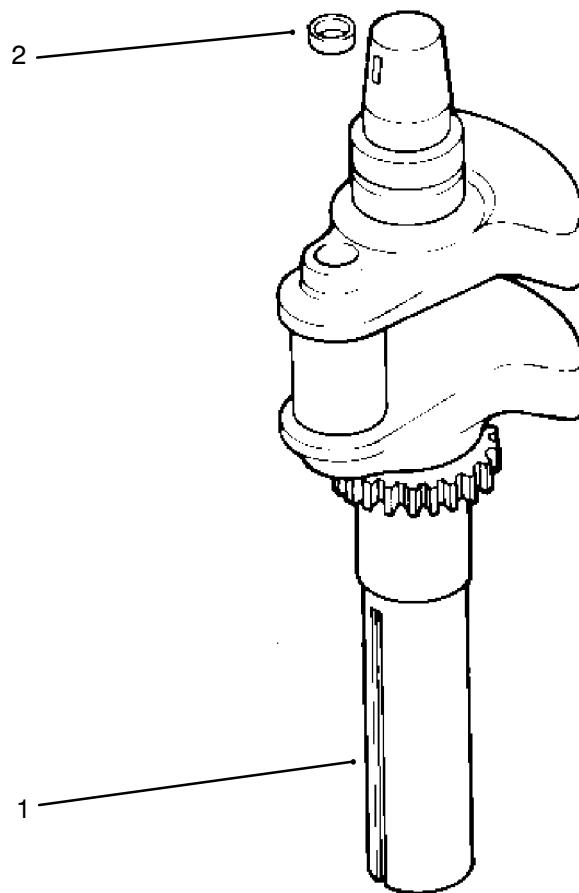


Crankshaft – Kohler CV20S – PS65531 and PS65532

Ref. No.	Part No.	Qty.	Description
1	24 014 42	1	Crankshaft
2	52 139 09	1	Plug-Cup

Ref. No.	Part No.	Qty.	Description

Obtain parts from Kohler

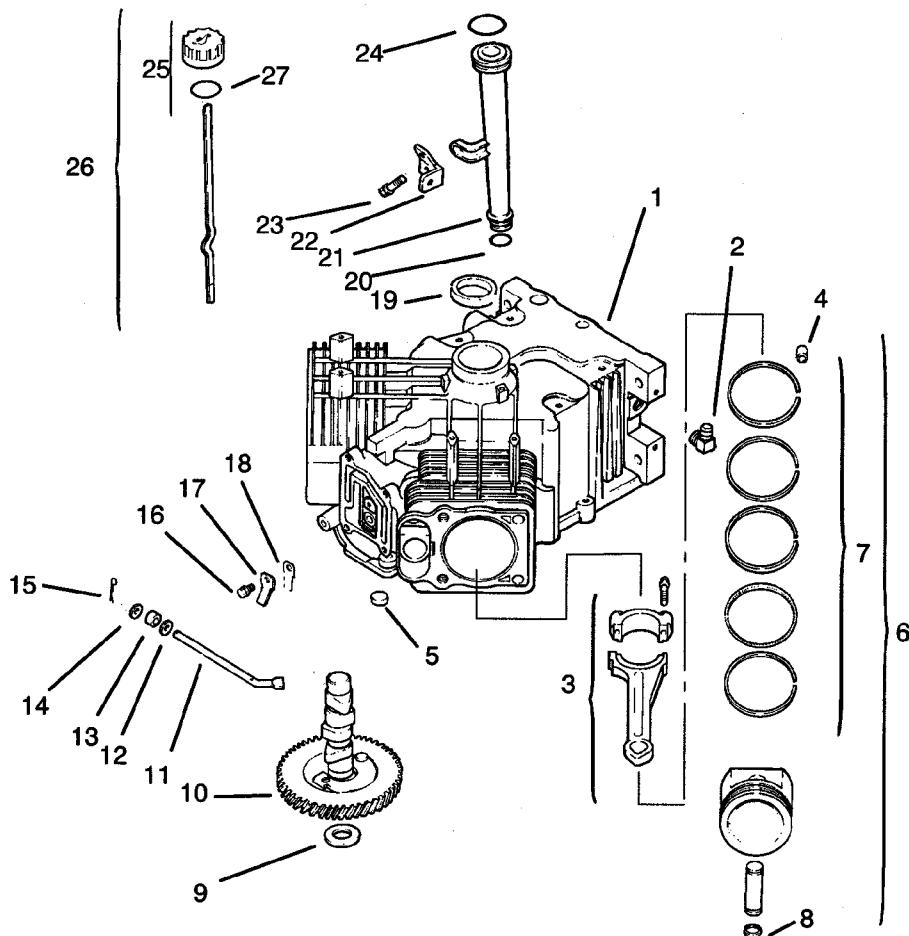

Sheet No.: 202
C-1960



Crankcase – Kohler CV20S – PS65531 and PS65532

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	24 522 09	1	Short Block	13	12 032 01	1	Seal-Governor Shaft
2	25 155 02	1	Connector-90 DEG	14	X-25-102	1	Washer-Flat
3	24 067 01	2	Connecting Rod STD	15	12 380 04	1	Pin-Governor Hitch
3	24 067 02	2	Connecting Rod .25	16	M-0545010	2	Screw M5x0.8x10
†4	12 380 03	6	Dowel-Locating	17	24 018 04	2	Retainer-Reed
5	52 139 09	1	Plug-Cup	18	24 402 01	2	Beed-Breather
6	24 874 01	2	Piston ASM STD INC	19	24 032 01	1	Seal-Oil
			4/7/8	20	12 153 01	1	O Ring-Lower Fill
6	24 874 02	2	Piston ASM .25 INC	21	12 123 04	1	Tube
			4/7/8	22	24 126 19	1	Tube-Oil Fill
6	24 874 03	2	Piston ASM .50 INC	23	M-0549016	1	Bracket-Oil Fill Tube
			4/7/8	24	12 153 02	1	Screw M5x0.8x16
†7	24 108 01	2	Ring Set STD INC 4/8	25	24 038 04	1	O Ring-Upper Fill
7	24 108 02	2	Ring Set .25 INC 4/8	†26	25 755 13	1	Tube
7	24 108 03	2	Ring Set .50 INC 4/8	†27	12 153 03	1	Dipstick INC 26-27
†8	24 018 01	4	Retainer-Piston Pin	*	24 755 03	1	Kit-Oil Cap INC 3
9	12 422 07	1	Shim-Camshaft A/R				O Ring-Fill Cap
9	12 422 08	1	Shim-Camshaft A/R				Gasket Set
9	12 422 09	1	Shim-Camshaft A/R				
9	12 422 10	1	Shim-Camshaft A/R				
9	12 422 11	1	Shim-Camshaft A/R				
9	12 422 12	1	Shim-Camshaft A/R				
9	12 422 13	1	Shim-Camshaft A/R				
10	24 012 05	1	Camshaft				
11	24 144 01	1	Shaft-Governor Cross				
12	X-25-63	1	Washer-Flat				

† Included in a service kit or in an assembly

* Not illustrated

Obtain parts from Kohler

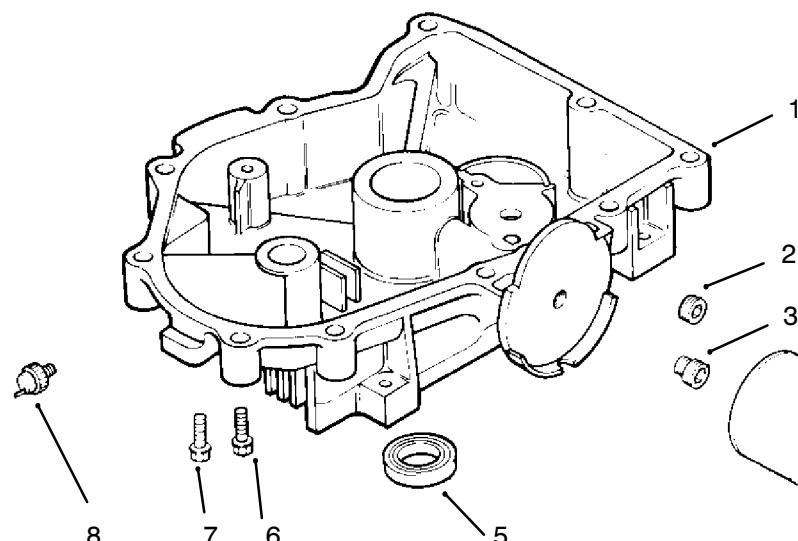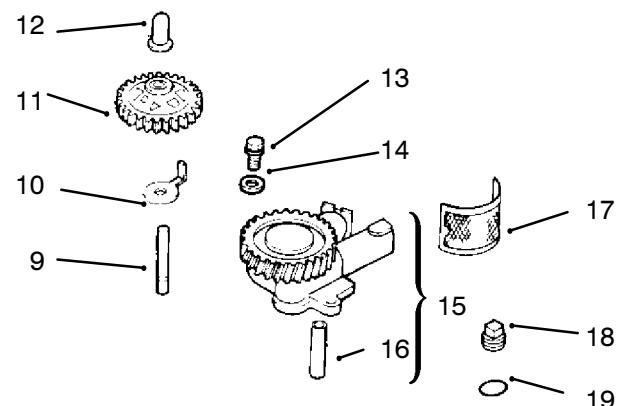

4 Sheet No.: 203
C-1961

Oil Pan / Lubrication – Kohler CV20S – PS65531 & PS65532


Ref. No.	Part No.	Qty.	Description
1	24 199 01	1	Oil Pan
2	X-75-32	1	Plug-HS 3/8 NPTF
3	24 136 01	1	Nipple-Oil Filter
4	12 050 01	1	Filter-Oil
5	52 032 08	1	Seal-Oil
6	24 086 17	1	Screw M8x1.25x45
7	24 086 16	9	Screw M8x1.25x45
8	52 099 06	1	Switch-Oil Pressure
9	12 144 02	1	Shaft-Governor Gear
10	52 448 02	1	Tab-Locking
11	24 043 11	1	Governor Gear ASM
12	12 380 01	1	Pin-Governor
13	M-0645025	2	Regulating
14	Sm-0631005	2	Screw-Valve Cover
15	24 393 05	1	Washer-Governor
+16	24 123 05	1	Oil Pump ASM INC 16
17	12 162 02	1	Tube-Oil Pickup
18	X-75-10	1	Screen-Oil Pickup
19	24 153 08	1	Plug-SH 3/8 NPTF
*	25 113 05	1	O Ring
			Decal-Oil Sentry

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

* Not illustrated

Obtain parts from Kohler

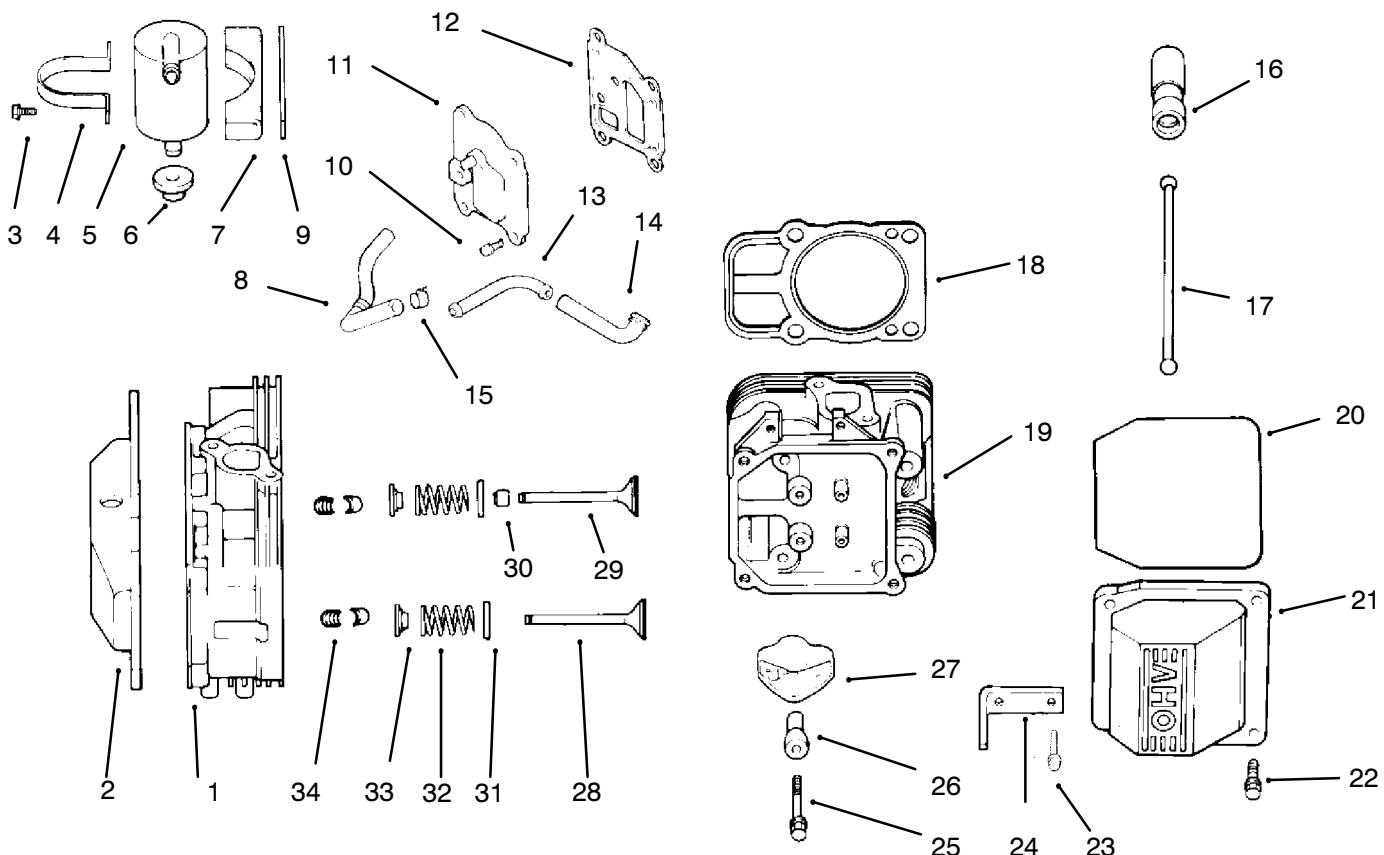


Sheet No.: 204

Head/Valve/Breather – Kohler CV20S – PS65531 & PS65532

Ref. No.	Part No.	Qty.	Description
1	24 318 11	1	Head ASM-#1 Cylinder
2	24 755 76	1	Kit-Valve Incl 6 20-22
3	M-0545016	2	Screw M5x0.8x16
4	24 445 02	1	Strap-Breather
5	24 755 57	1	Kit-Breather Incl 3-9
6	25 313 02	1	Grommet-Rubber
7	24 126 44	1	Bracket-Breather Sep
8	24 326 13	1	Hose-Breather
9	24 112 12	1	Spacer
10	M-0645020	4	Screw-HH M6x1.0x20
11	24 096 15	1	Cover-Breather
12	24 041 23	1	Gasket-Breather
13	24 294 06	1	Fitting
14	24 326 14	1	Hose-Breather
15	X-426-9	2	Clamp-Hose
16	12 351 01	4	Lifter-Valve
17	24 411 05	4	Rod-Push
18	24 041 08	2	Gasket-Cylinder Head
19	24 318 12	1	Head ASM-#2 Cylinder
20	24 153 12	1	O-Ring
21	24 755 74	1	Kit Valve Incl 20-22
22	24 086 32	4	Screw-Shoulder
23	12 086 16	8	Screw M10x1.5x91
24	24 445 01	1	Strap-Lifting

Ref. No.	Part No.	Qty.	Description
25	M-0640034	4	Screw M6x1.0x34
26	24 599 01	4	Pivot-Rocker Arm
27	25 186 01	4	Arm-Rocker
28	24 016 01	2	Valve-Exhaust
28	24 016 02	2	Valve-Exhaust (.25)
29	24 017 01	2	Valve-Intake
29	24 017 02	2	Valve-Intake (.25)
30	24 032 05	2	Seal-Valve Stem
31	235011	4	Retainer-Spring
32	24 089 02	4	Spring-Valve
33	12 173 01	4	Cap-Valve Spring
34	12 755 03	4	Kit-Retainer
	24 033 03	1	Kit-Breather Incl 11-12
	24 755 66	1	Kit-Valve Incl 17 26-27

Obtain parts from Kohler

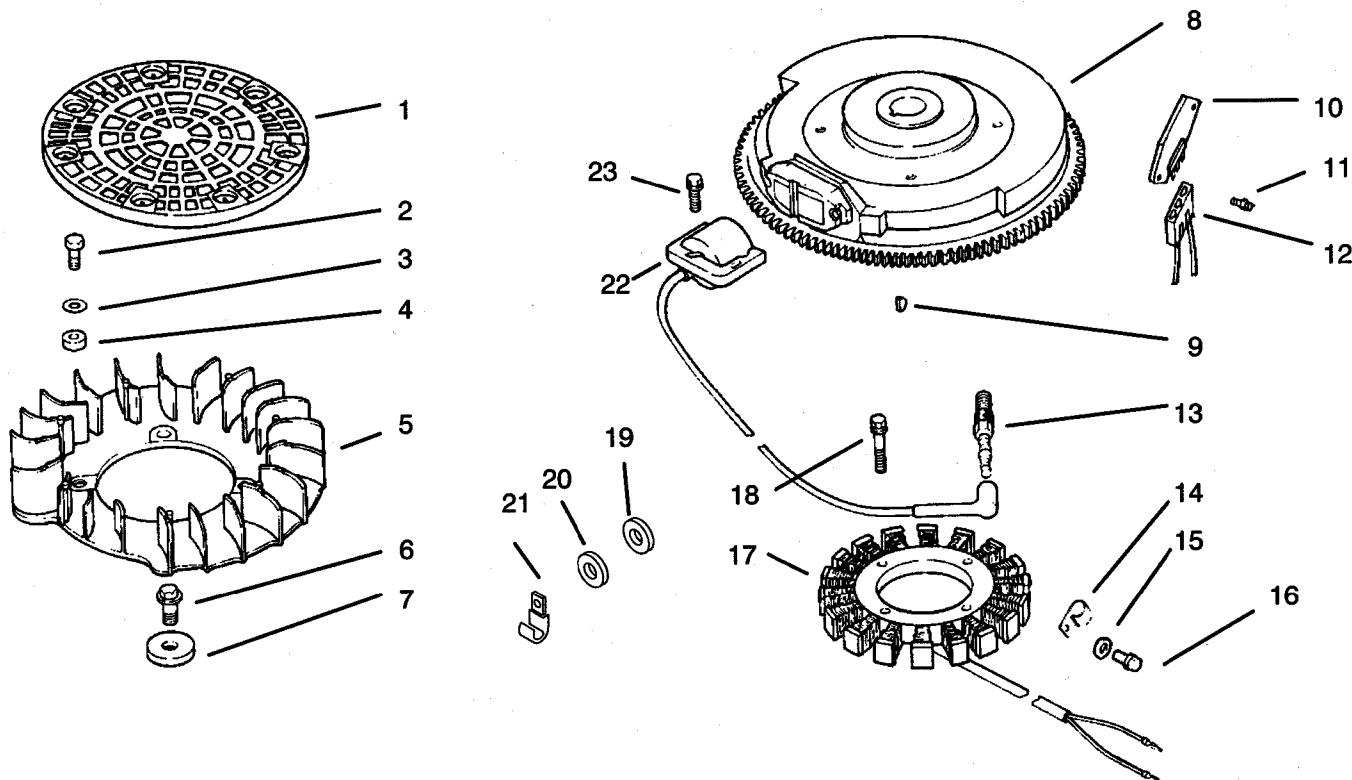


Sheet No.: 205
C-1963

Ignition / Electrical – Kohler CV20S – PS65531 and PS65532

Ref. No.	Part No.	Qty.	Description
1	24 162 17	1	Screen-Grass
2	M-0401025	4	Screw M4x0.7x24
3	X-25-92	4	Washer-Flat
4	24 112 04	1	Spacer-Fan
5	24 157 03	1	Fan
6	M-0639016	4	Screw M6x1.0x16
7	12 112 01	4	Spacer-Fan
8	24 025 04	1	Flywheel ASM
9	X-42-15	1	Key
10	25 403 03	1	Rectifier-Regulator
11	24 086 06	2	Screw-Phillips
12	236602	1	Connector-Regulator
13	12 132 02	2	Spark Plug
14	48 154 02	1	Clip-Stator Harness
15	12 468 03	1	Washer-Flywheel
16	12 086 14	1	Screw-Flywheel
17	24 085 01	1	Mounting
18	M-0548025	2	Stator-15 Amp
19	X-25-63	2	Screw M5x0.8x25
20	X-25-92	2	Washer-Flat
21	235173	1	Washer-Flat
22	24 584 01	1	Clip-Cable
23	M-0545020	4	Module-Ignition
*	24 113 18	1	Screw M5x0.8x20
*		1	Decal-Grass Screen

* Not illustrated
Obtain parts from Kohler

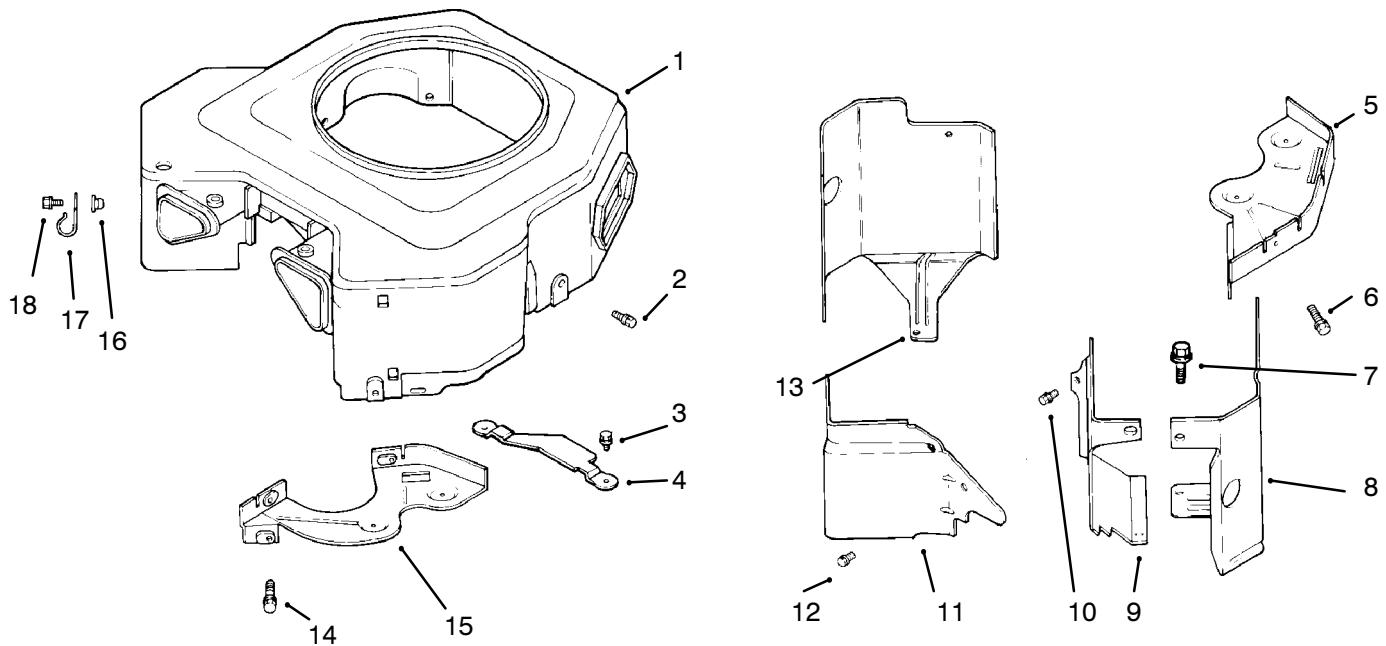


Sheet No.: 206
C-1964

Blower Housing & Baffles – Kohler CV20S – PS65531 & PS65532

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	24 027 20	1	Housing-Blower ASM	*	24 113 10	1	Hsng
2	M-0549016	3	Screw M5x0.8x16	*	244 113 01	1	Decal-Horsepower
3	Sm-0645016	4	Screw M6x1.0x16	*	25 139 16	1	Decal-Horsepower
4	24 314 05	1	Guard-Flywheel				Plug INC W/Blower
5	24 146 02	1	Plate-Backing #2 Side				Hsng
6	M-0545020	2	Screw M5x0.8x20				
7	M-0551016	1	Screw M5x0.8x14				
8	24 063 20	1	Baffle-Cylinder #2 Side				
9	24 063 15	1	Baffle-Valley #1 Side				
10	M-0549010	2	Screw M5x0.8x10				
11	24 063 14	1	Baffle-Valley #2 Side				
12	M-0549016	2	Screw M5x0.8x16				
13	24 063 06	1	Baffle-Cylinder #1 Side				
14	M-0649016	2	Screw M6x1.0x16				
15	24 146 14	1	Plate-Backing #1 Side				
16	24 100 01	4	Nut-Plastic				
17	47 154 01	1	Clip-Cable				
18	24 086 12	1	Screw-Cable Clip				
*	24 100 02	2	Nut INC W/Blower				

* Not illustrated
Obtain parts from kohler

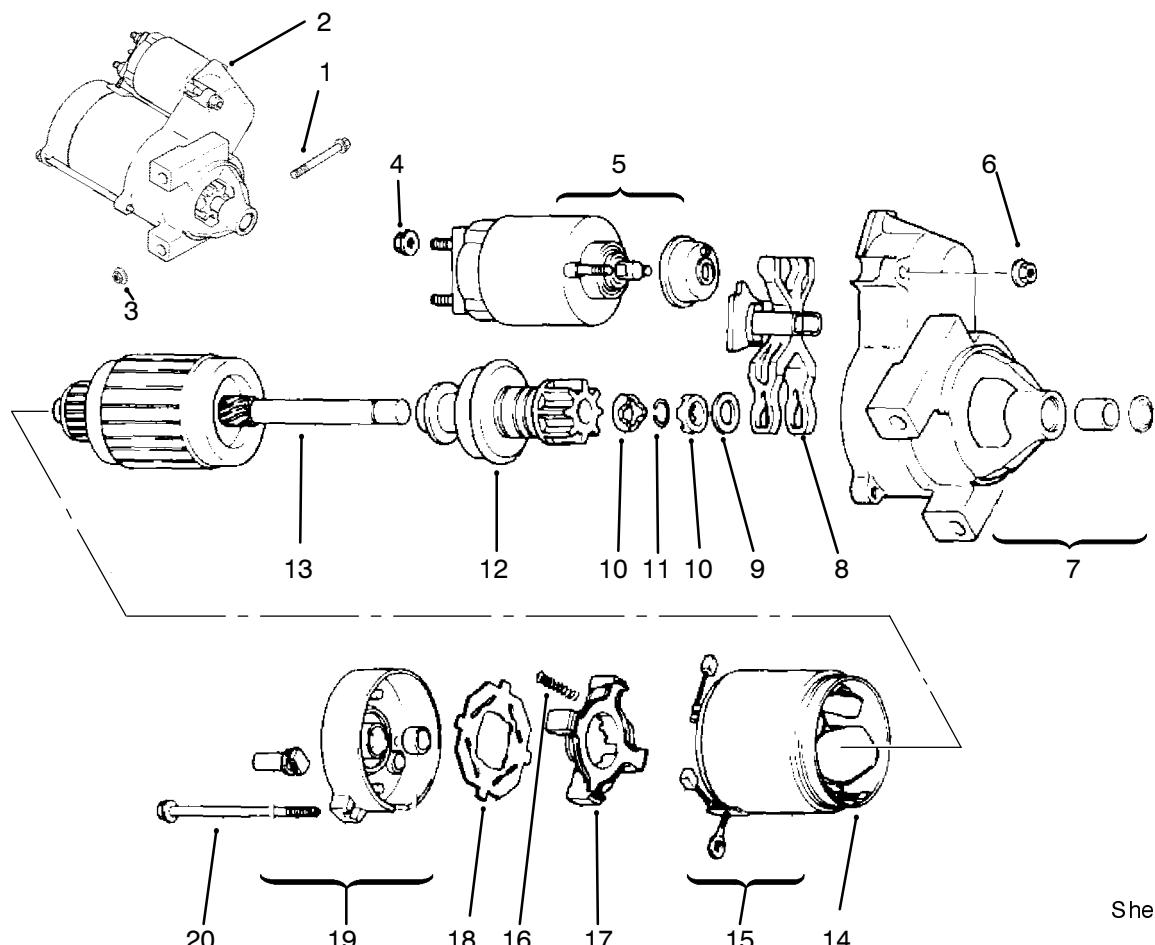


Sheet No.: 207
C-1965

Starting System – Kohler CV20S – PS65531 and PS65532

Ref. No.	Part No.	Qty.	Description
1	M-0839080	2	Screw M8x1.25x80
2	12 098 03	1	Starter INC 4-20
3	M-0841080	1	Nut M8x1.25
†4	52 100 09	1	Nut-Starter
†5	52 435 02	1	Solenoid
†6	52 100 10	2	Nut Starter
†7	12 081 02	1	Cap-Drive End
†8	12 090 10	1	Lever Starter Drive
†9	42 468 14	1	Washer-Thrust
†10	52 100 08	2	Nut-Stop Collar
†11	52 141 03	1	Ring-Retainer
†12	12 239 01	1	Drive-Pinion
†13	12 170 03	1	Armature-Starter
†14	12 471 01	1	Frame
†15	52 221 01	1	Kit-Brush INC 16
†16	52 089 09	4	Spring-Brush
†17	52 323 03	1	Holder-Brush
†18	52 168 01	1	Insulator
†19	12 301 01	1	Cap-Commutator End
†20	52 211 05	2	Bolt

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly
Obtain parts from Kohler

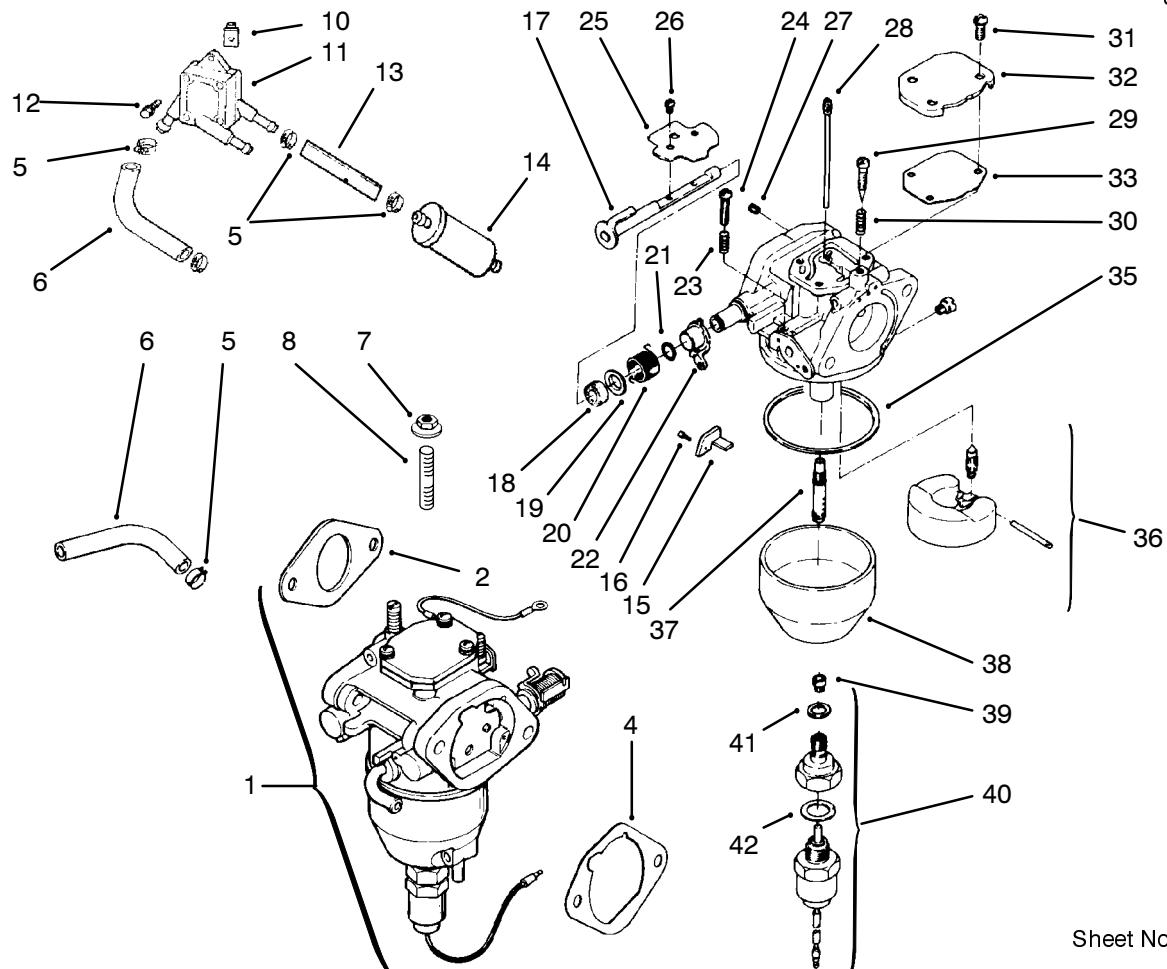

Sheet No.: 208


Fuel System – Kohler CV20S – PS65531 and PS65532

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	24 853 19	1	Kit-Carb INC 2/4/15-42	†28	24 337 11	1	Jet-Slow
†2	24 041 15	1	Gasket-Carburetor	†29	24 086 22	1	Screw-Idle Adjust
†4	24 041 14	1	Gasket-A/C Base	†30	24 089 23	1	Spring-Idle Adjust Screw
5	X-426-9	6	Clamp-Hose	†31	24 086 21	3	Screw
6	24 353 03	2	Line-Fuel 10 1/2"	†32	24 096 13	1	Cover-Passage
7	Sm-0641060	2	Nut M6x1.0	†33	24 041 18	1	Gasket-Passage Cover
8	M-0629095	2	Stud M6x1.0x95	†35	24 041 19	1	Gasket-Float Chamber
10	24 100 01	2	Nut-Plastic	†36	24 757 05	1	Kit-Float Repair
11	24 393 04	1	Pump-Fuel	†37	24 369 01	1	Nozzle-Main
12	24 086 12	2	Screw-Cable Clip	†38	24 234 01	1	Chamber-Float
13	25 353 15	1	Line-Fuel 3 1/2"	†39	24 337 20	1	Jet-Main
14	25 050 02	1	Filter-Fuel	†40	24 755 15	1	Kit-Solenoid INC 41-42
†15	24 126 29	1	Bracket-Throttle Stop	†41	24 041 21	1	Gasket-Chamber Screw
†16	M-0259006	1	Screw M2.5x45x5.5	†42	24 041 20	1	Gasket-Solenoid
†17	24 144 15	1	Shaft-Choke	* 24 041 15	1	Gasket-Carburetor	
†18	24 468 05	1	Washer	* 24 063 22	1	Baffle-Carburetor	
†19	24 241 01	1	Collar-Choke	* 24 755 25	1	Kit-Hi Alt 1500-3000 M	
†20	24 089 22	1	Spring-Choke Return	* 24 755 26	1	Kit-Hi Alt Over 3000 M	
†21	24 141 04	1	Ring-Choke Lever				
†22	24 090 10	1	Lever-Choke				
†23	24 089 24	1	Spring-Throttle Screw				
†24	24 086 19	1	Screw-Throttle Adjust				
†25	24 462 02	1	Valve-Choke				
†26	24 086 20	4	Screw-Throttle Shaft				
†27	24 337 27	1	Jet-Air Bleed				

† Included in a service kit or in an assembly

* Not illustrated

Obtain parts from Kohler

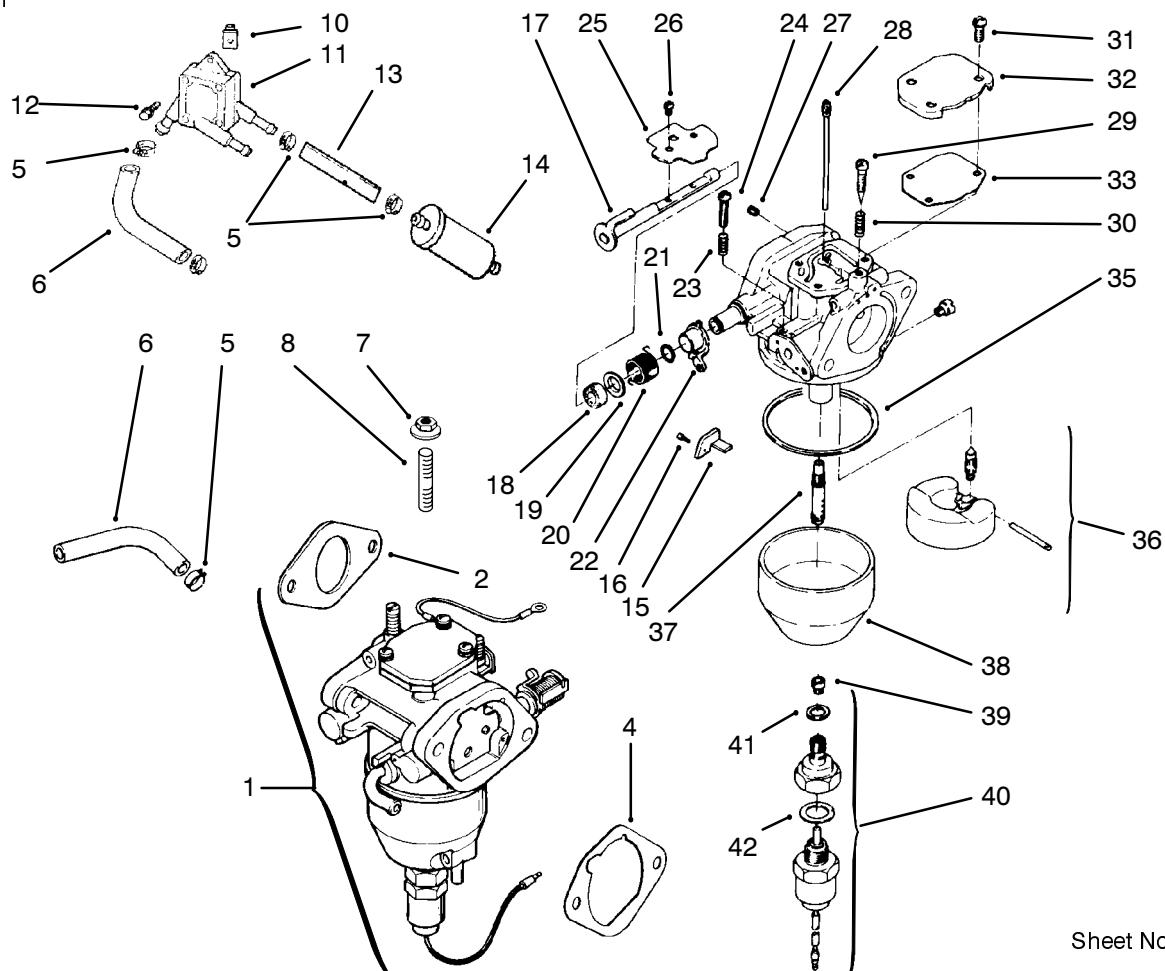

Sheet No.: 208

Fuel System – Kohler CV20S – PS65531 and PS65532


Ref. No.	Part No.	Qty.	Description
*	24 757 06	1	Kit-Carburetor Repair

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

* Not illustrated

Obtain parts from Kohler

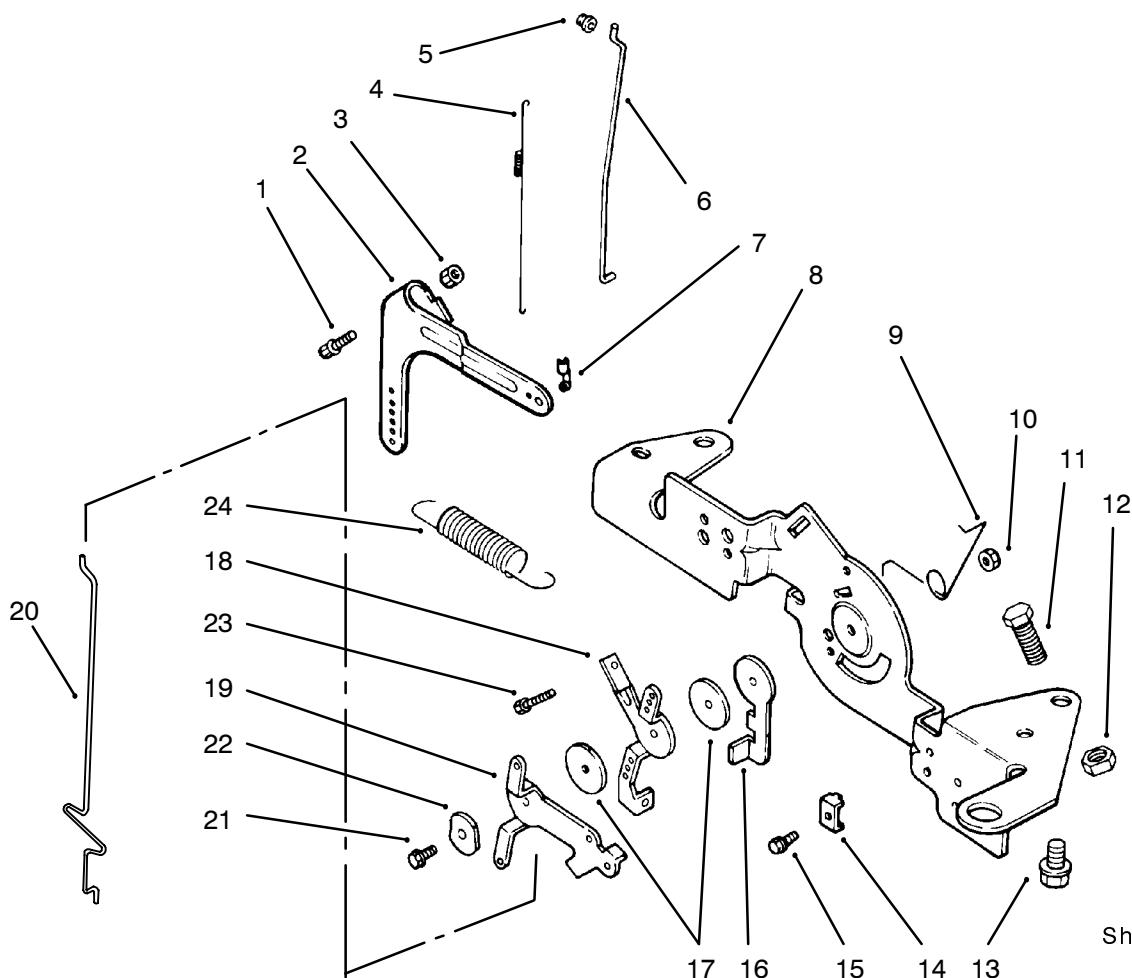


Sheet No.: 209

C-1967

Engine Controls—Kohler CV20S—PS65531 and PS65532

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	Sm-0642025	1	Screw M6x1.0x25				
2	24 090 11	1	Lever-Governor				
3	Sm-0641060	1	Nut M6x1.0				
4	24 089 01	1	Spring-Linkage				
5	25 158 08	1	Bushing-Linkage				
6	24 079 04	1	Linkage-Throttle				
7	25 158 11	1	Bushing-Linkage				
8	24 126 13	1	Bracket-Control				
9	24 089 03	1	Spring-Choke Return				
10	M-0547050	1	Nut M5x0.8				
11	Sm-0545016	1	Screw M5x0.8x16				
12	M-0446030	1	Nut-Hex M4x0.7				
13	Sm-0645016	4	Screw M6x1.0x16				
14	12 237 01	2	Clamp-Cable				
15	Sm-0545016	2	Screw M5x0.8x16				
16	24 090 07	1	Lever-Throttle Actuator				
17	24 468 01	3	Washer				
18	24 090 03	1	Lever-Throttle Control				
19	24 090 05	1	Lever-Choke				
20	24 079 05	1	Linkage-Choke				
21	M-0545020	1	Screw M5x0.8x20				
22	41 468 03	1	Washer-Wave				
23	M-0401025	1	Screw M4x0.7x24				
24	24 089 18	1	Spring-Governor				

Obtain parts from Kohler

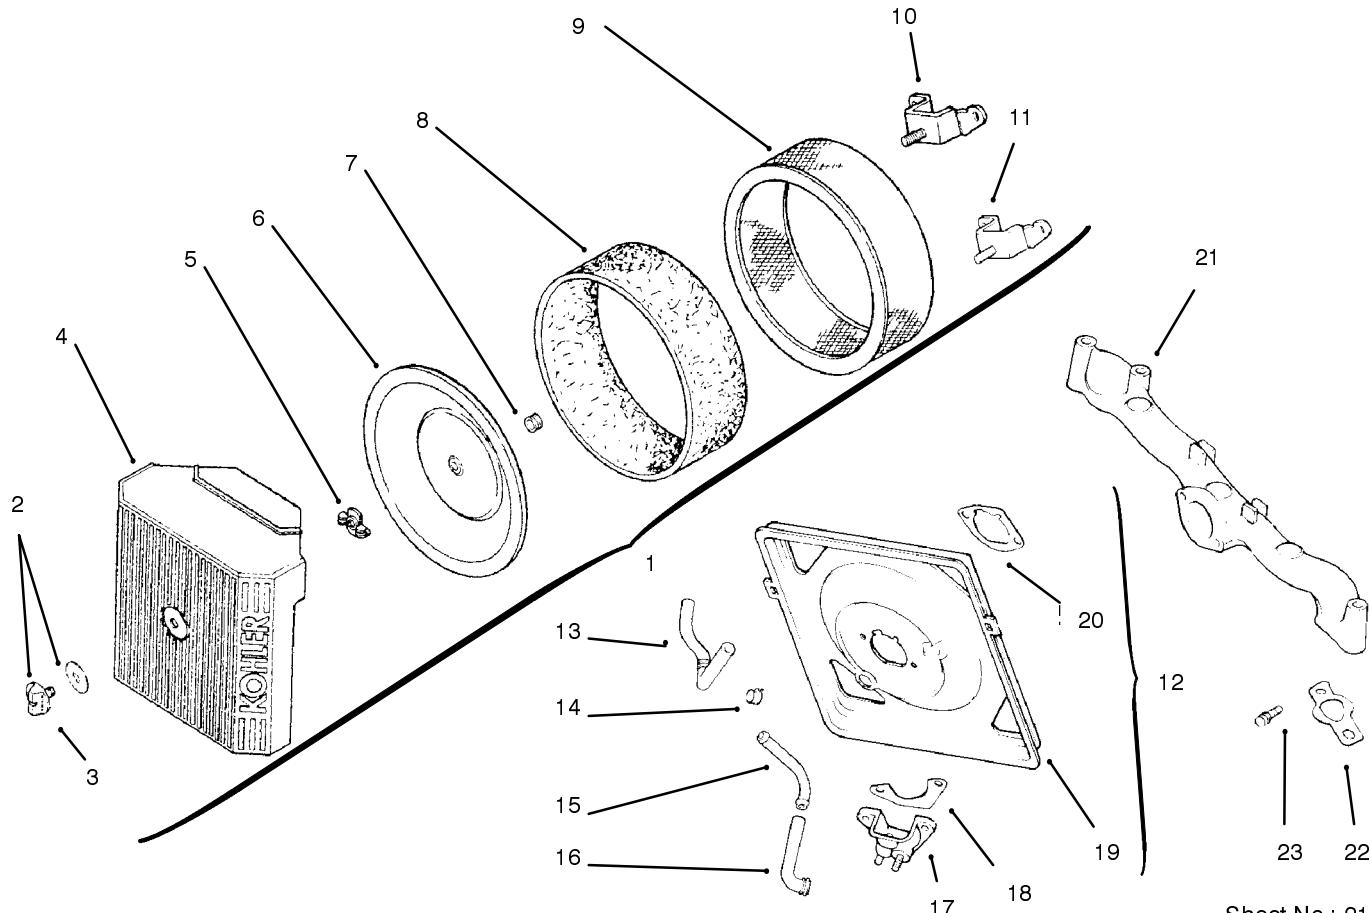


Sheet No.: 210

Air Intake / Filtration – Kohler CV20S – PS65531 & PS65532

Ref. No.	Part No.	Qty.	Description
1	24 743 05	1	Kit-Air Cleaner Cover
2	24 755 91	1	Kit-Knob W/Gasket
3	25 341 02	1	Knob-Cover
4	24 096 24	1	Cover-Air Cleaner
5	12 100 01	1	Nut-Wing
6	24 096 01	1	Cover-Inner Air Cleaner
7	24 032 03	1	Seal-Air Intake
8	24 083 02	1	Element-Precleaner
9	47 083 03	1	Element-Air Cleaner
10	24 126 21	1	Bracket-Air Cleaner Base
11	24 126 43	1	Bracket-Air Cleaner
12	24 755 86	1	Kit-Air Cleaner Base
13	24 326 13	1	Hose-Breather
14	X-426-9	2	Clamp-Hose
15	24 294 06	1	Fitting
16	24 326 14	1	Hose-Breather
17	24 109 06	1	Cup-Fuel Spitback
18	24 041 13	1	Gasket-Fuel Spitback Cup
19	24 094 14	1	Base-Air Cleaner
20	24 041 14	1	Gasket-A/C Base
21	24 164 06	1	Manifold-Intake
22	24 041 01	2	Gasket-Intake

Ref. No.	Part No.	Qty.	Description
23	M-0651055	4	Manifold Screw

Obtain parts from Kohler

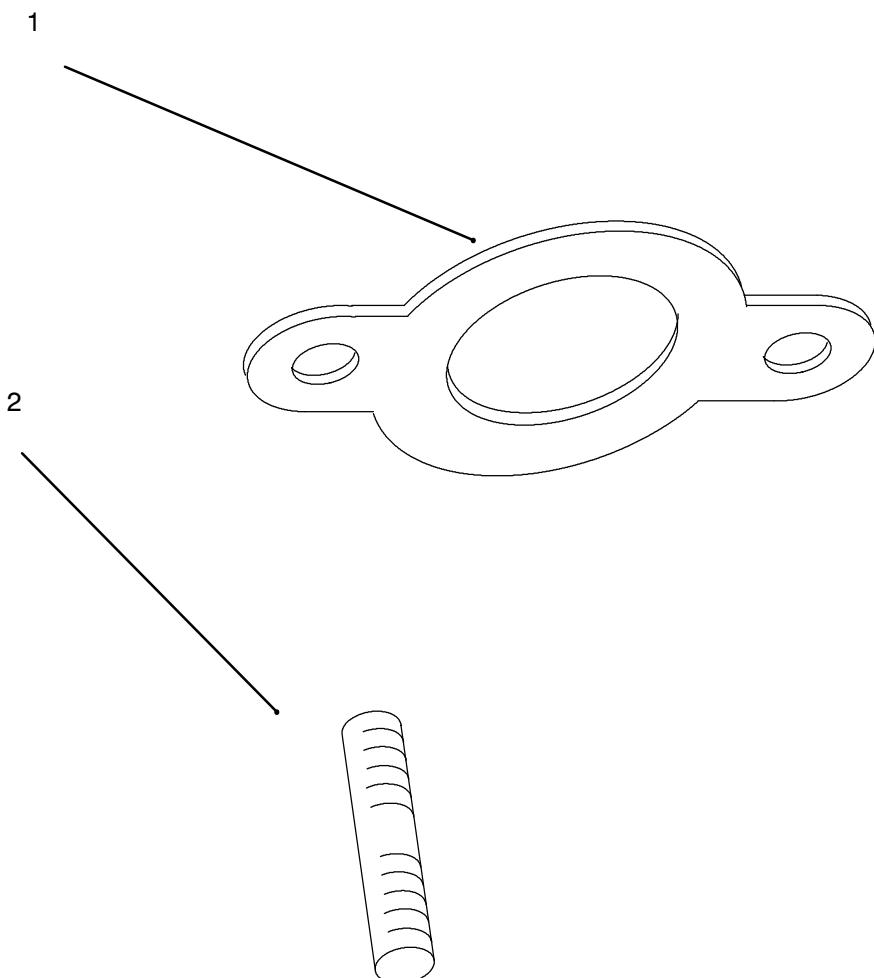

Sheet No.: 211


C-1969

Exhaust–Kohler CV20S–PS65531 and PS65532


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1 2	24 041 02 M-0829033	2 4	Gasket-Exhaust Stud M8x1.25x20				

Obtain parts from Kohler

Engine Wire Harness Routing Assembly

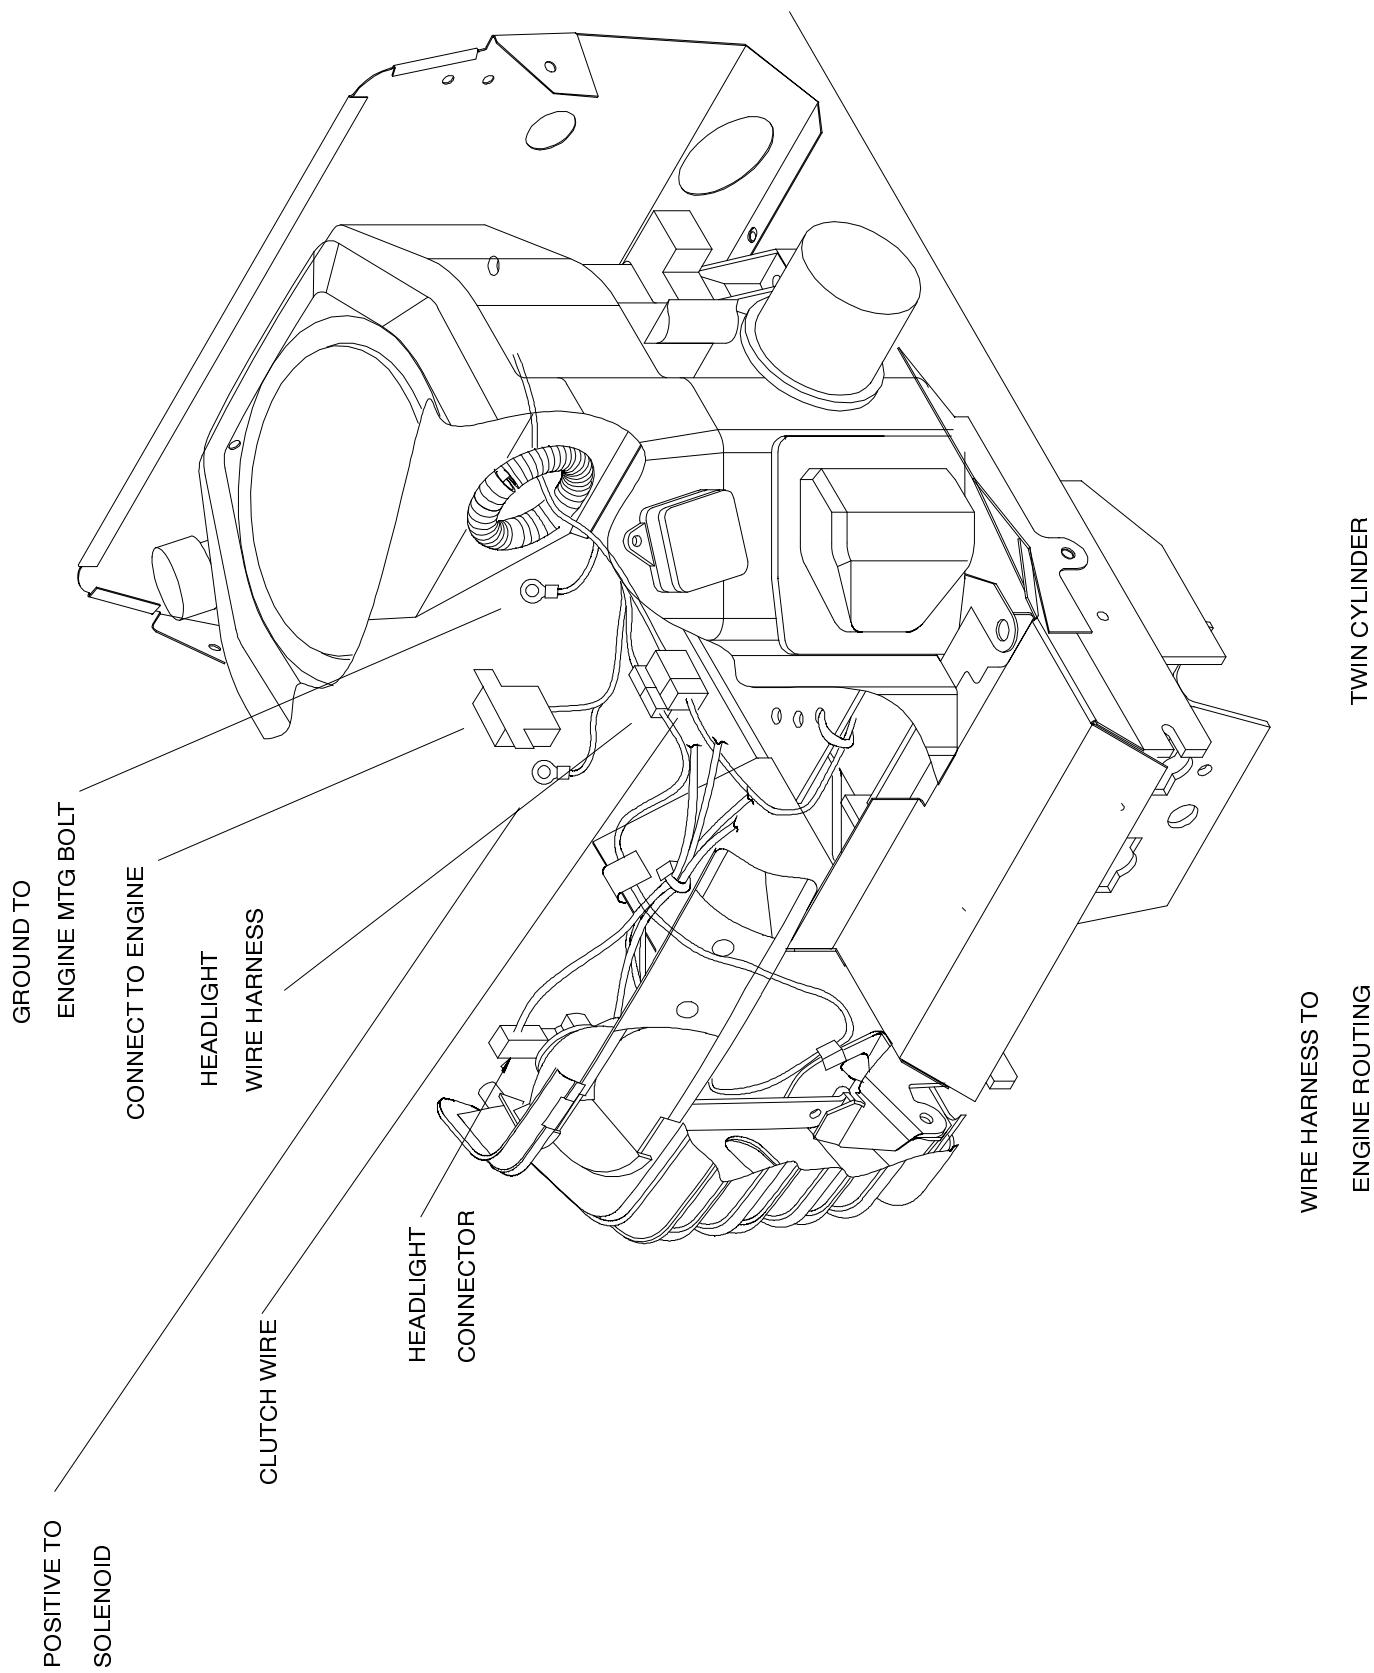


Twin Cyl. Hydro w/Cruise & Power Lift Wire Routing

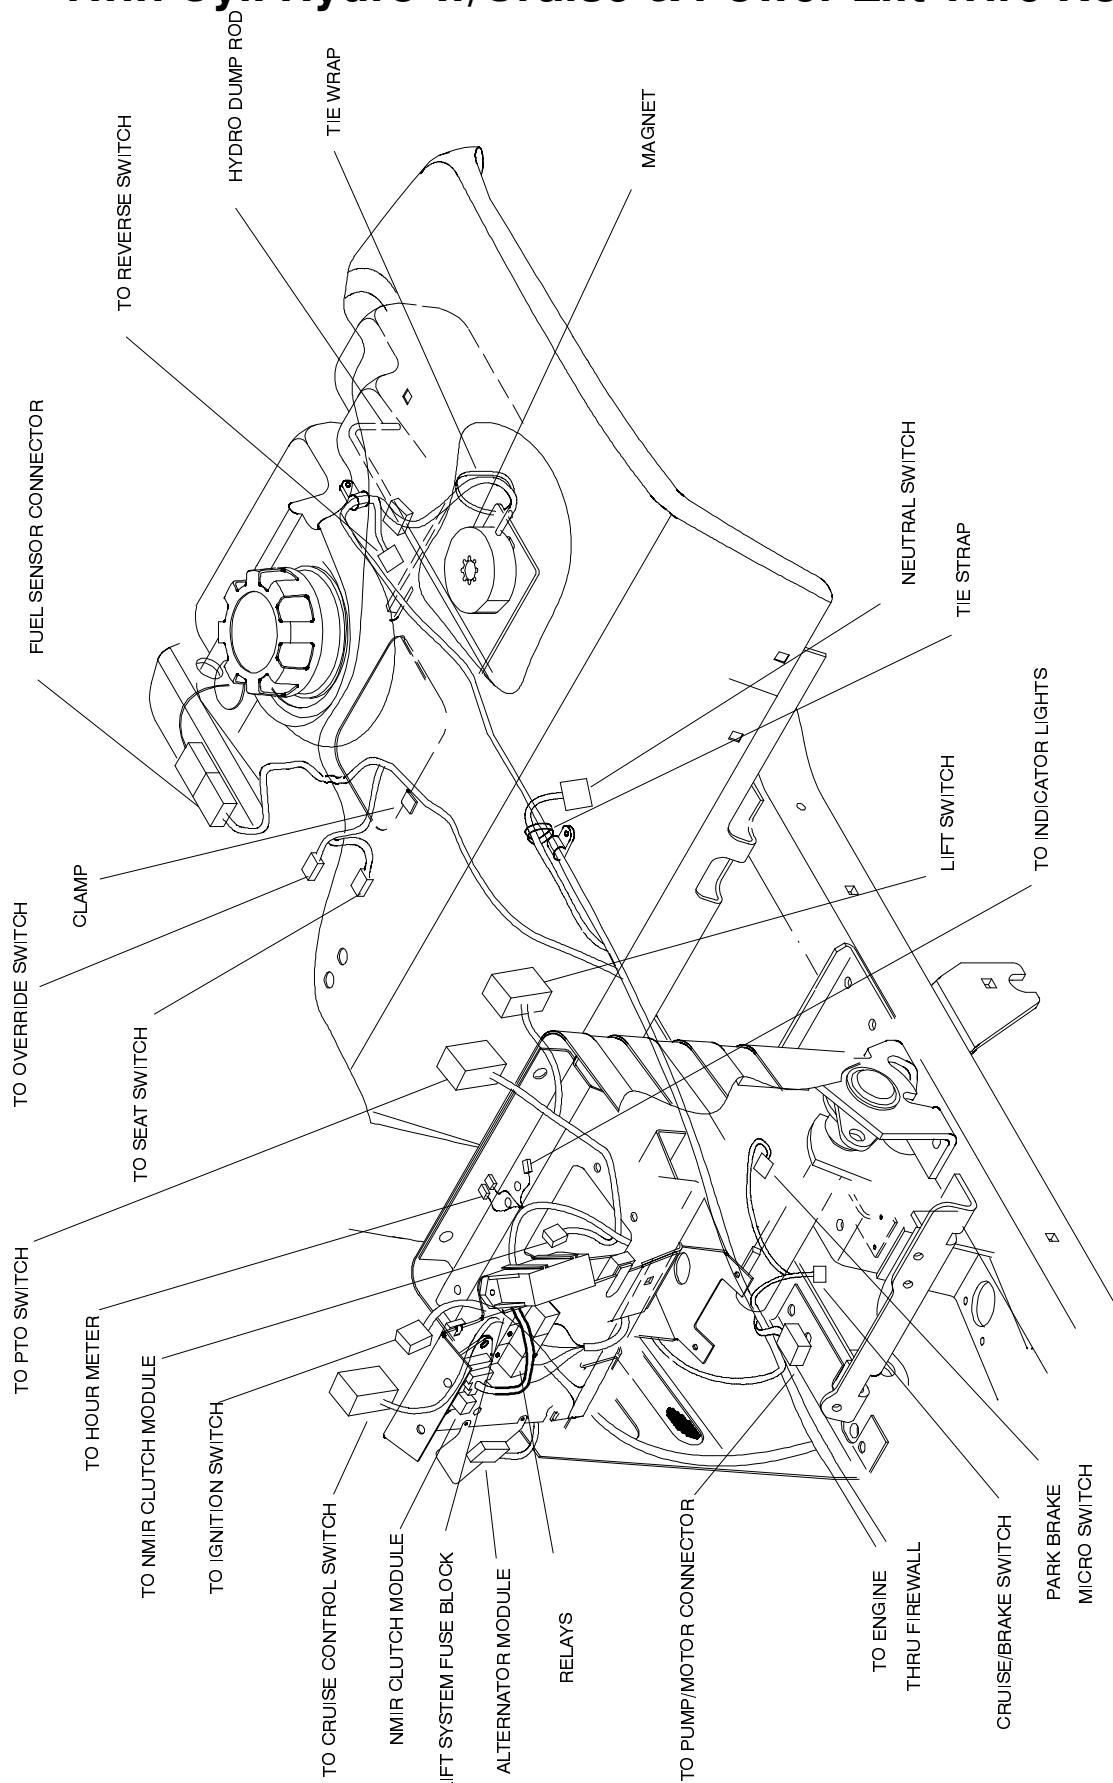

WIRE HARNESS ROUTING
TWIN CYLINDER HYDRO
W/CRUISE AND POWER LIFT

270-H Wiring Schematic

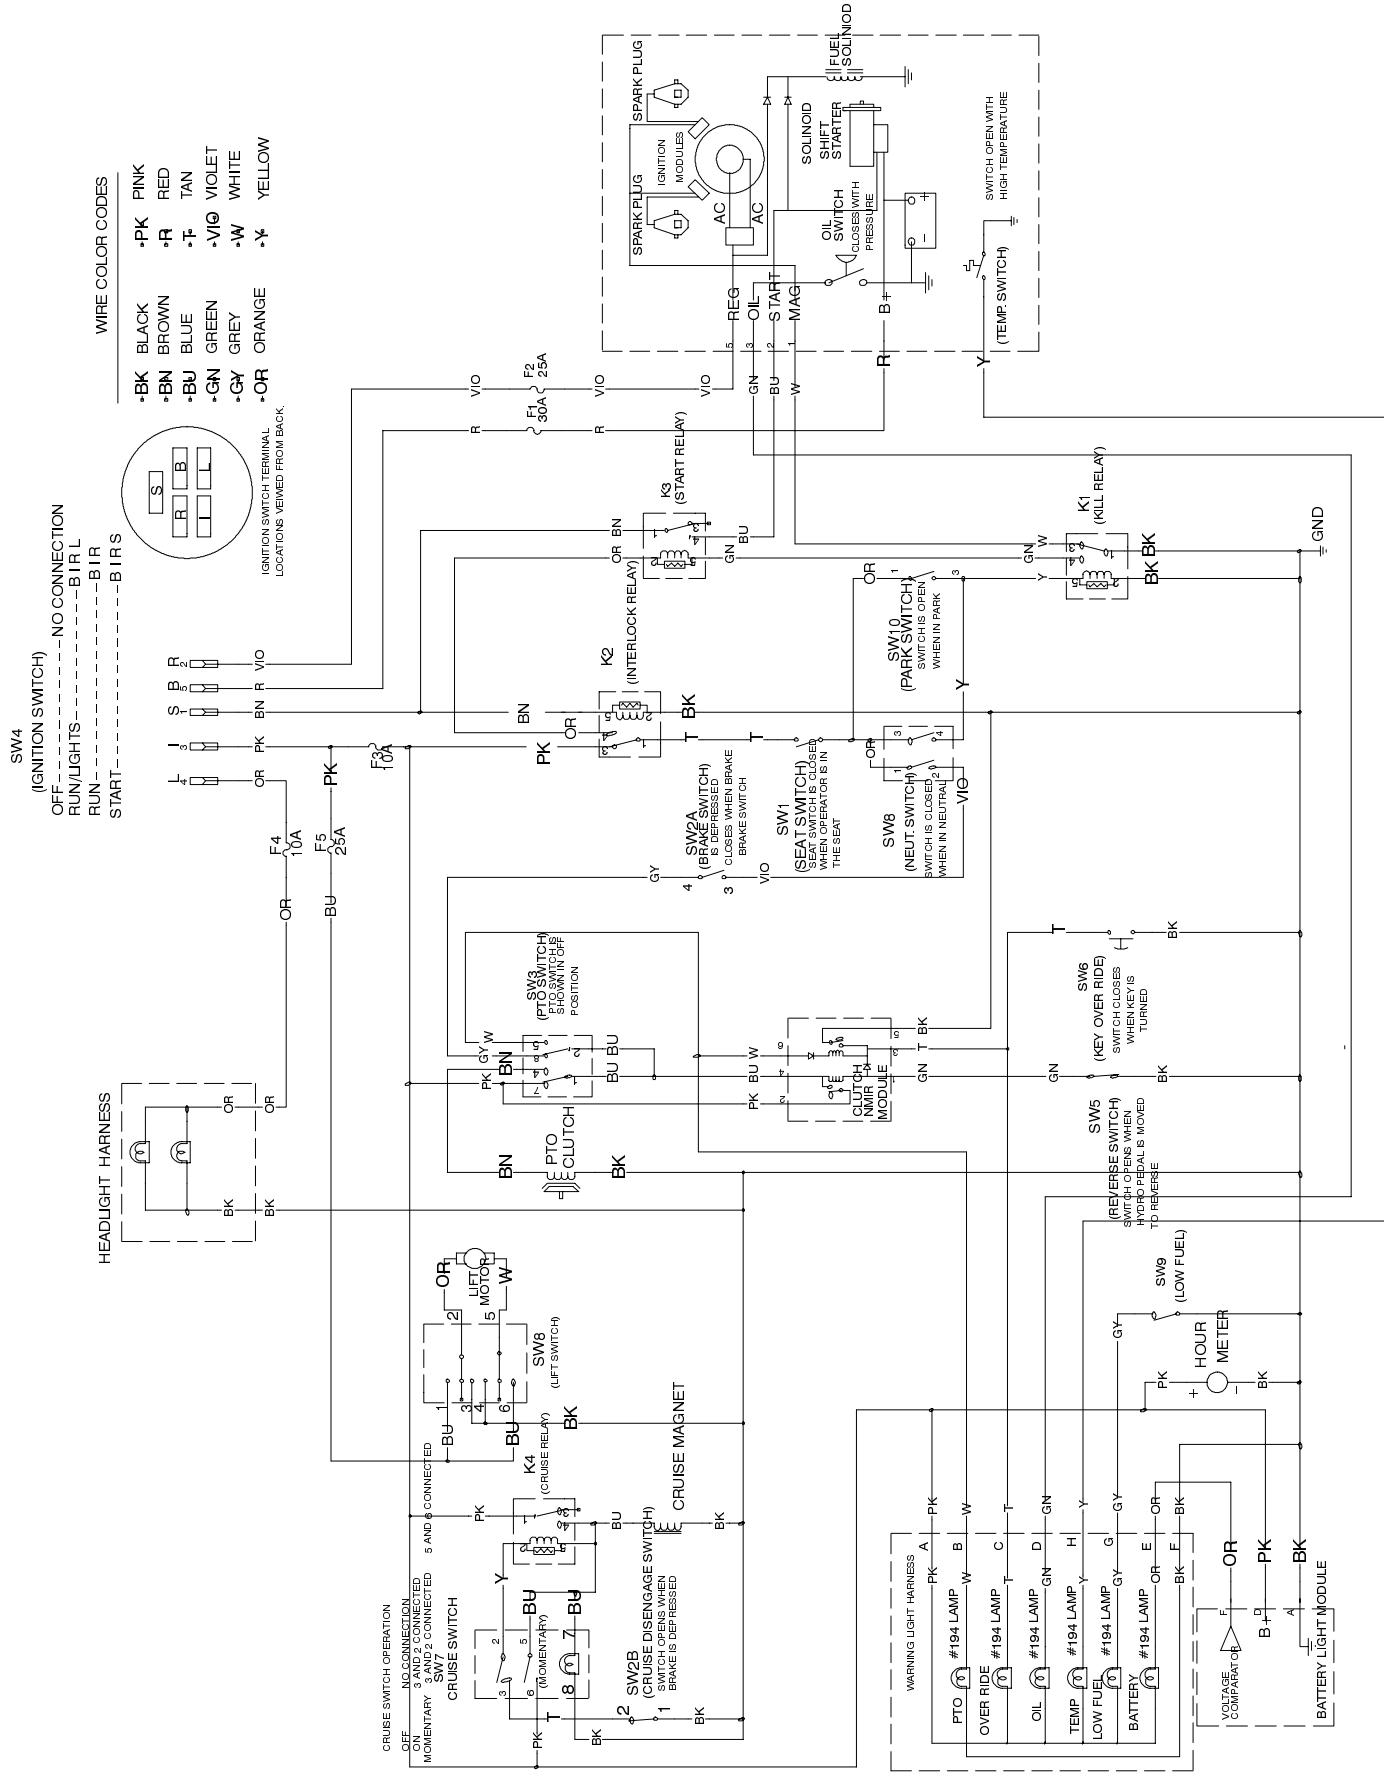

Maintenance Record

Date								

