


DATE: 26/01/00

MODELS CONCERNED: FOOT CONTROL C'SERIES TRACTORS

Service Alert

Please ensure at PDI that the oil level is checked on all foot control tractors fitted with the K46 transmission. The correct level should be within 5mm from the top of the transaxle housing when the expansion tank and pipe is removed. To enable checking the left-hand rear wheel should be removed then the tank. Please ensure the unit is set on level ground. If the oil level require topping up then standard SAE30 engine oil should be used.

**OIL LEVEL
TO TOP OF
FILLER/ CASING**

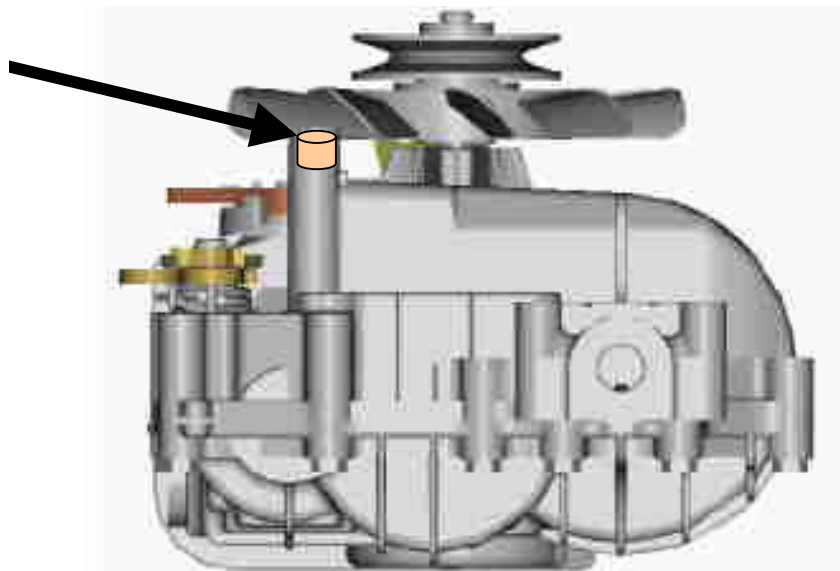

Please contact COUNTAX service department for any further information